


# CONFORTO


## Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions

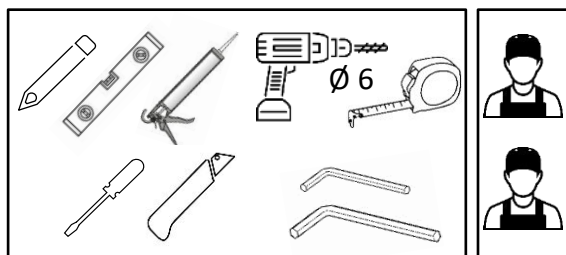

1		DZT100CHRD19 + SK2SET	1
2		PAL-01	1
3		PAL-01B	1
4		3,5X35 SK1SET	5
5		8mm LVS_EN 12150 2:2004	1

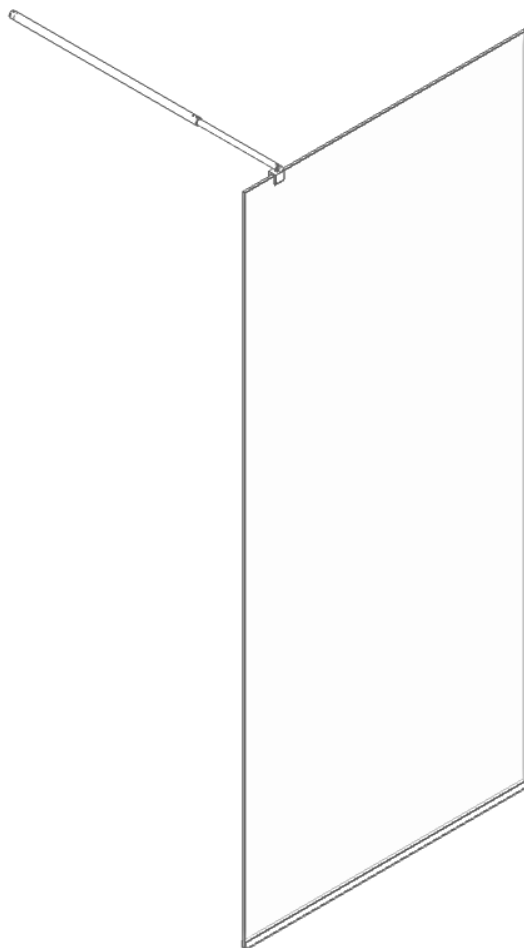

A	
600 X 2000	568-573
700 X 2000	668-673
800 X 2000	768-773
900 X 2000	868-873
1000 X 2000	968-973
1100 X 2000	1068-1073
1200 X 2000	1168-1173

