





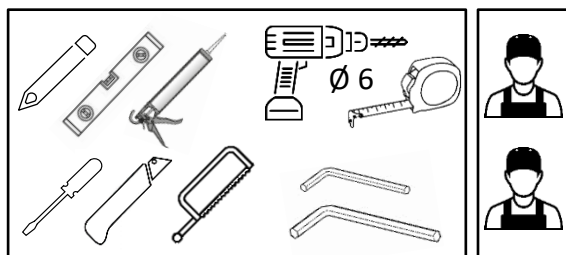



Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions



1		DZT100CHR10X20 + SK2SET	1
2		284.01.081+SK3SET	1
3		400211PS-013	1
4		3,5x35 SK1SET; Ø 6	5
5		SC-ALU2010+ SK2SET 2	1
6			1
7		8 mm LVS_EN 12150 2:2004	1

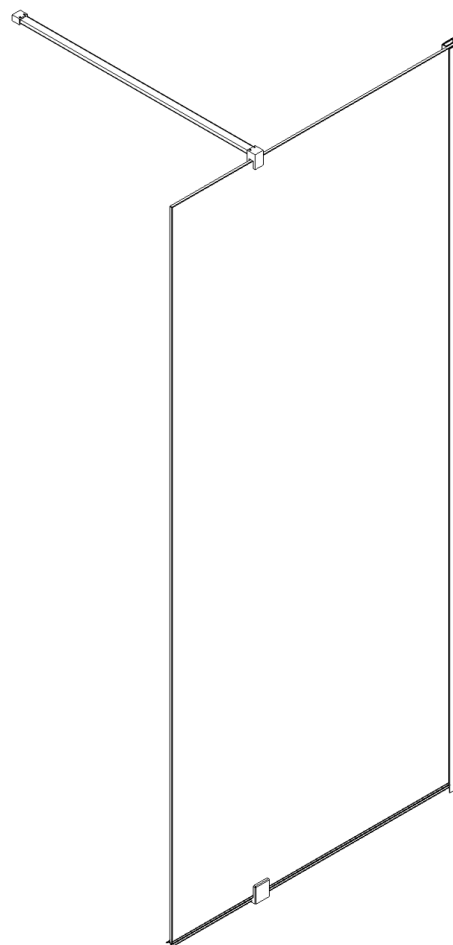

A	
600 X 2000	570-585
700 X 2000	670-685
800 X 2000	770-785
900 X 2000	870-885
1000 X 2000	970-985
1100 X 2000	1070-1085
1200 X 2000	1170-1185

