







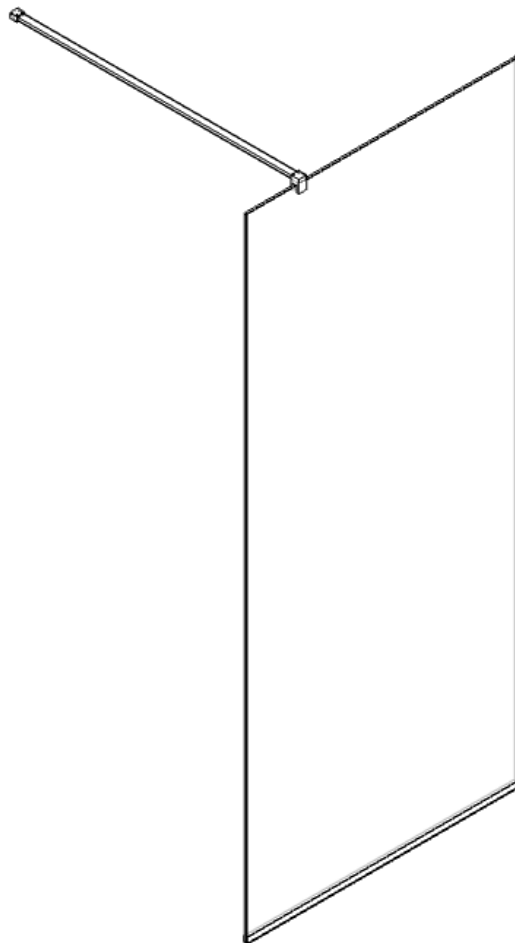
Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены


Shower wall installation instructions

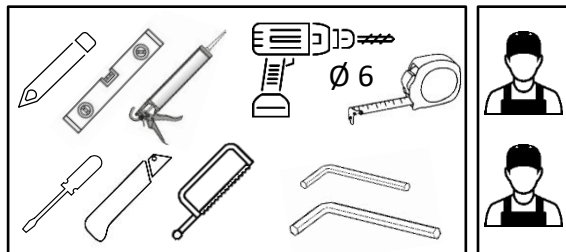









1		DZT100CHR10X 20 + SK2SET 1	1
2		PAL-01	1
3		PAL-01B	1
4		3,5x35 SK1SET Ø 6	5
5		8mm LVS_EN 12150 2:2004	1










A	
600 X 2000	568-573
700 X 2000	668-673
800 X 2000	768-773
900 X 2000	868-873
1000 X 2000	968-973
1100 X 2000	1068-1073
1200 X 2000	1168-1173

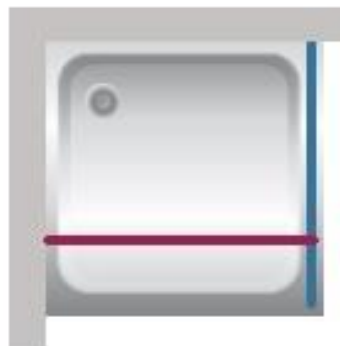

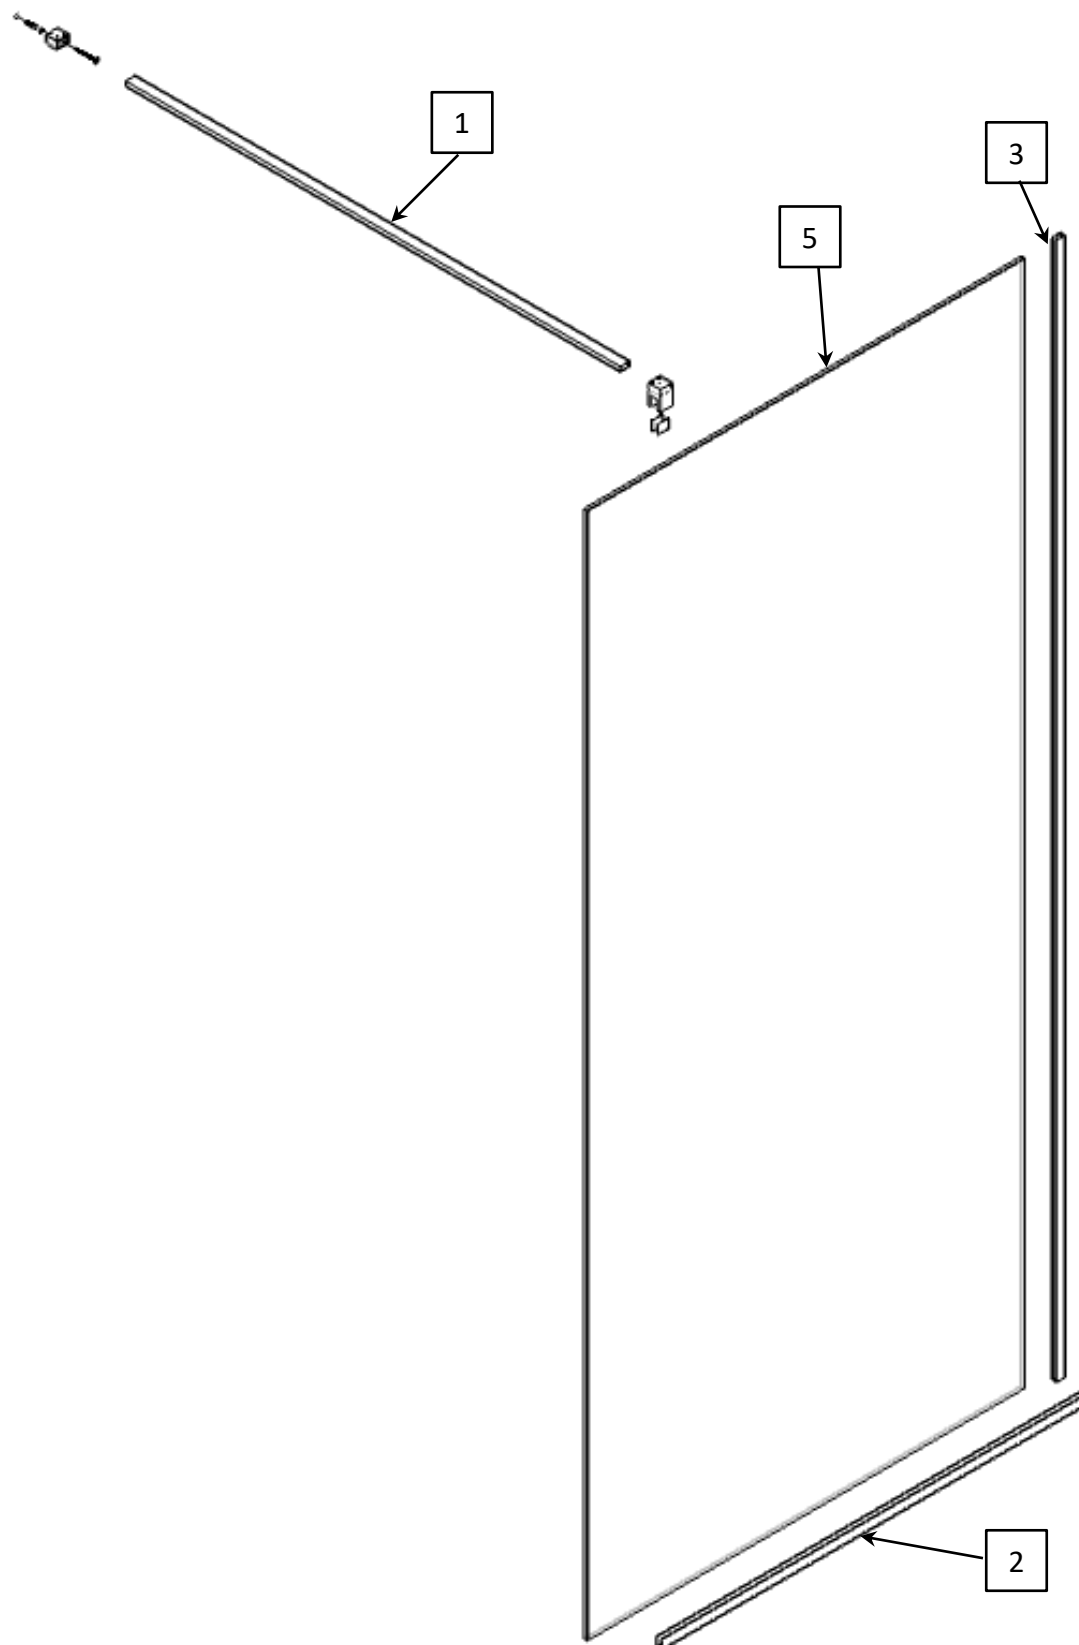

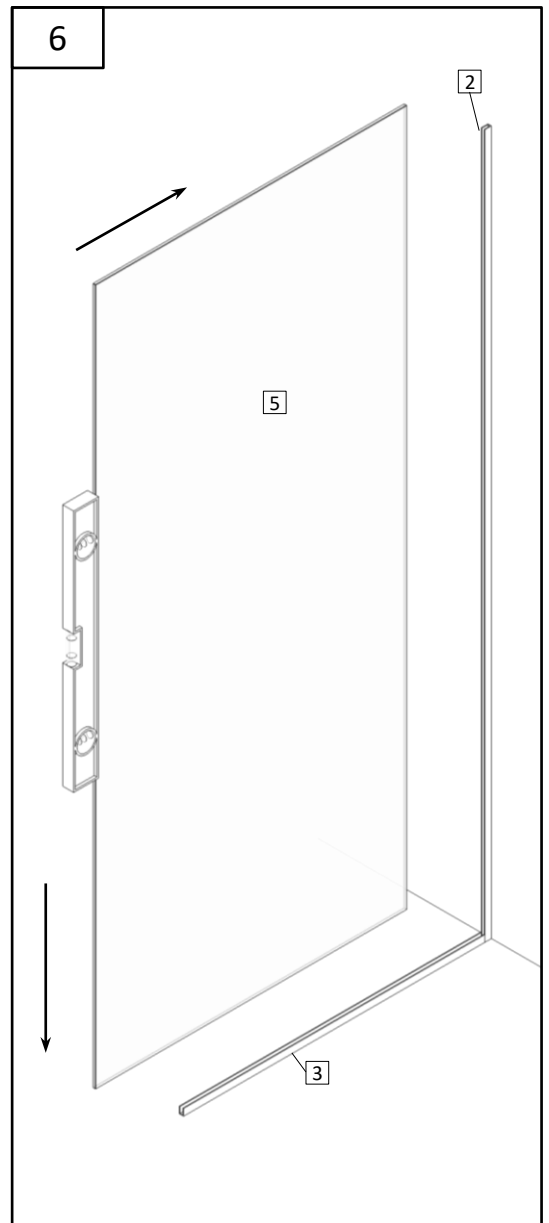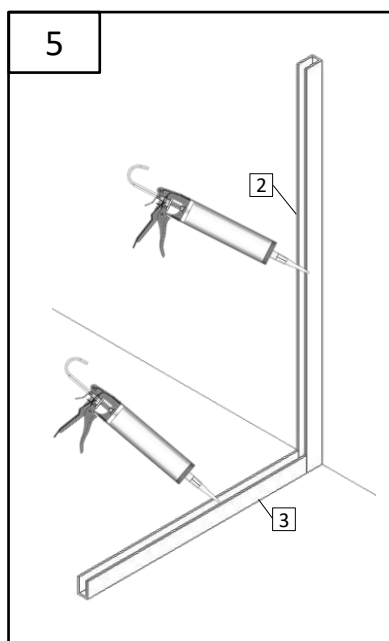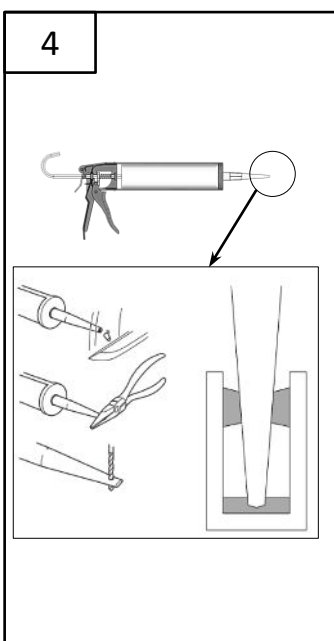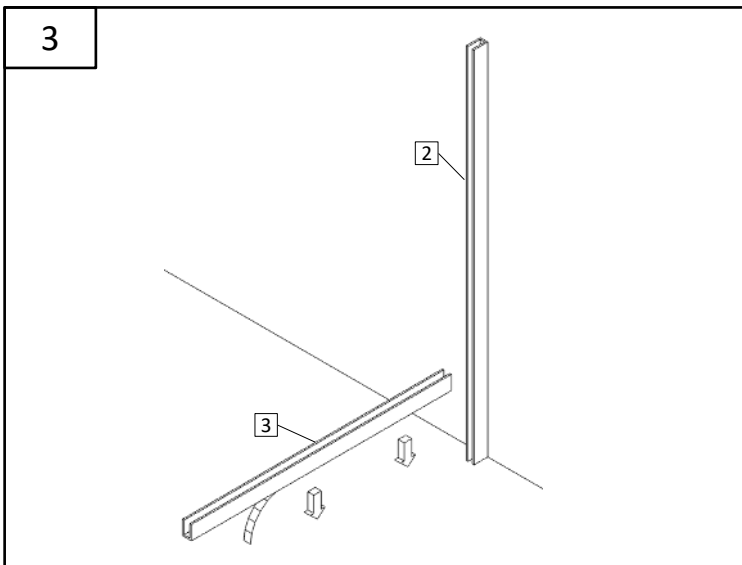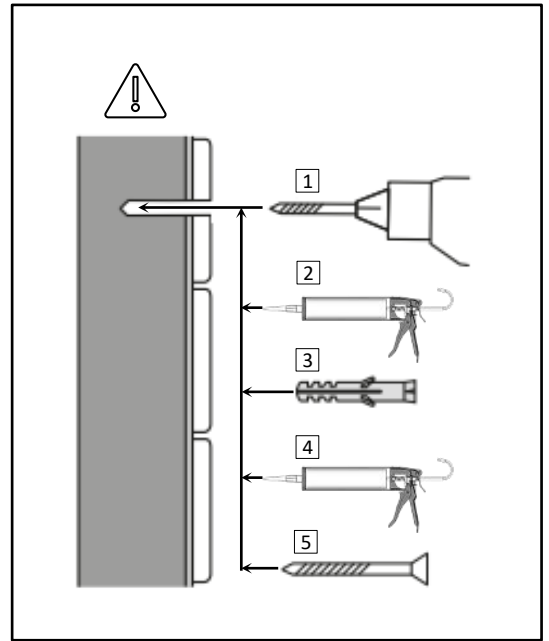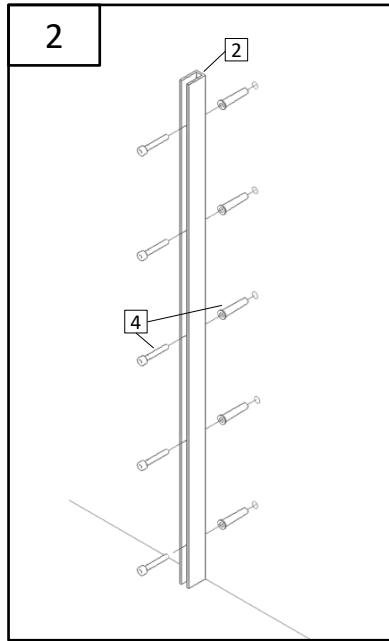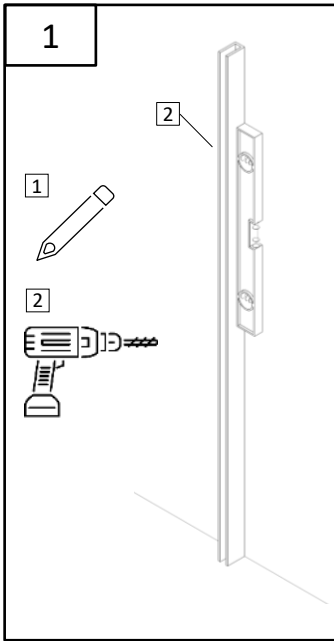

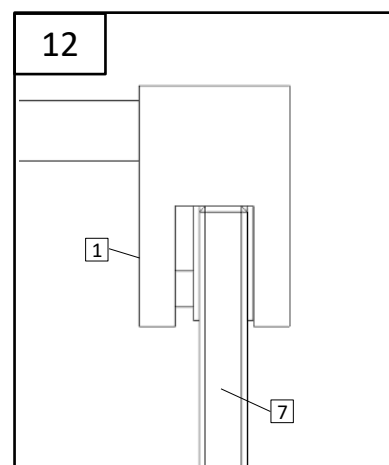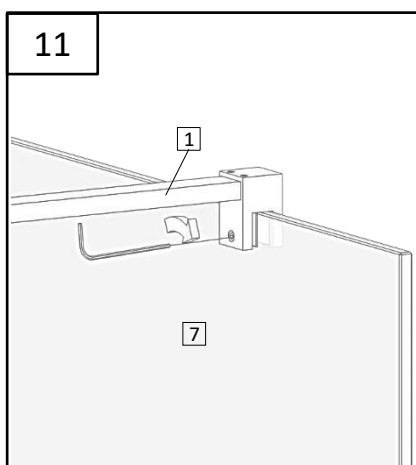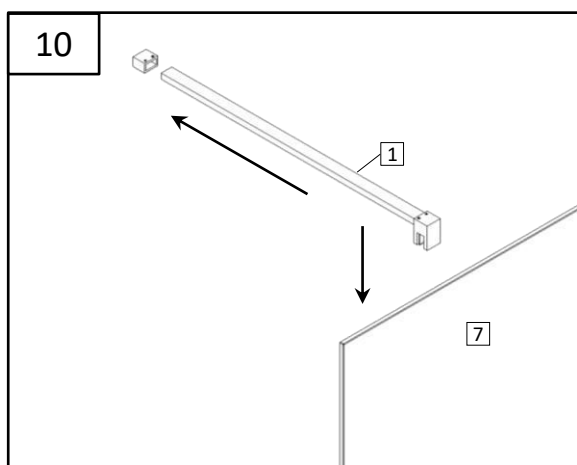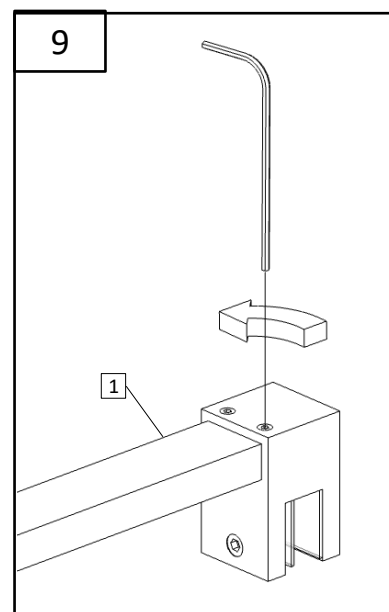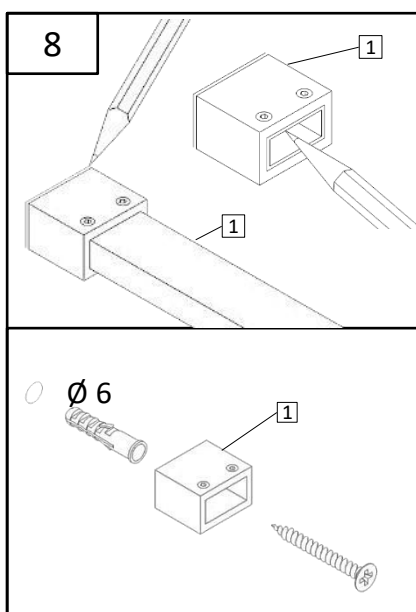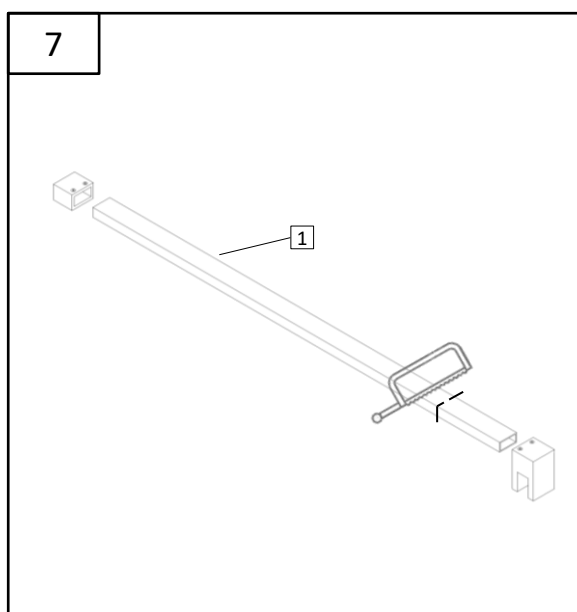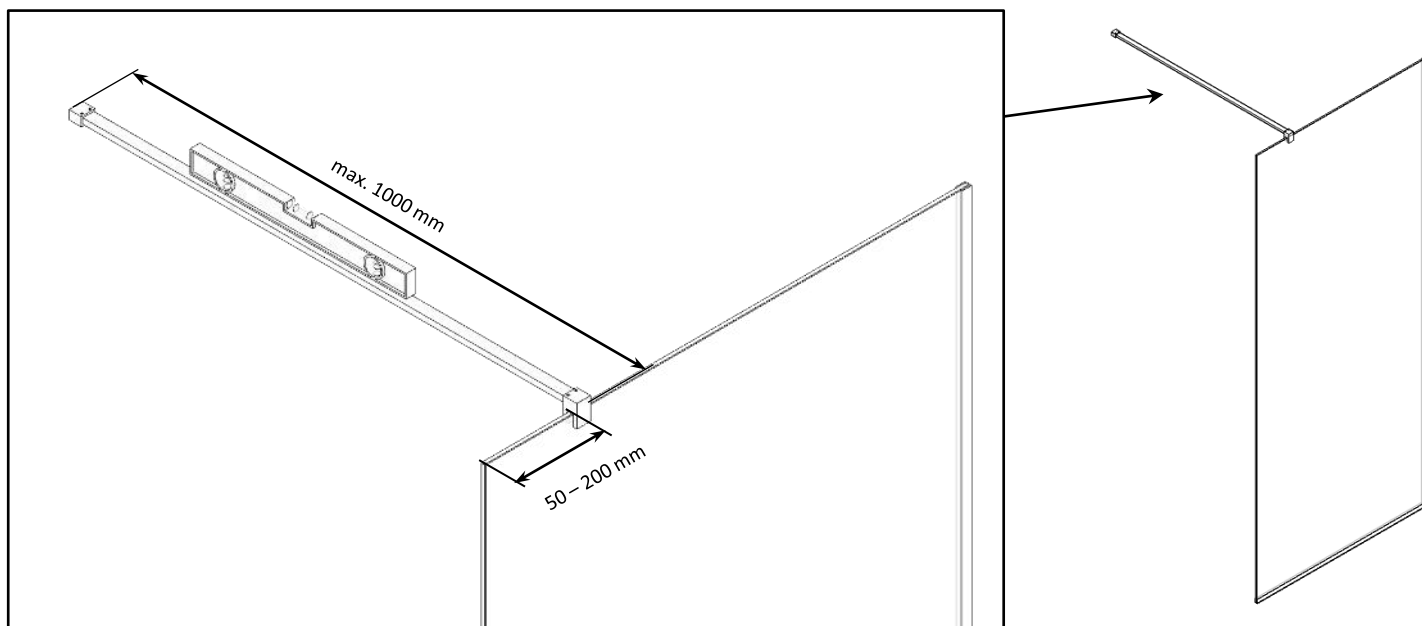

13



24 h

