


# FASCINO




## Duļas kabīnes montāžas instrukcija

Инструкция по монтажу душевой кабины



Shower enclosure installation assembly

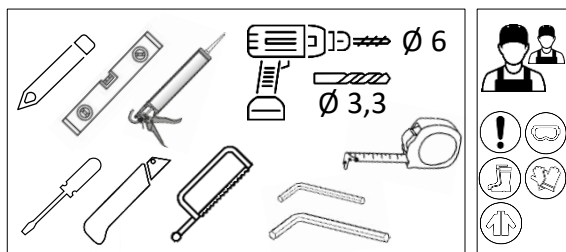

1		PAL-01	1
2		PAL-01B	1
3		SU45CH + SK2SET1	1
4		VIRA20CH	1
5		MF-36/6-ER	1
6		MF-42/8-ER	1
7		R1653308	1
8		DR-CH32	1
9		SC-ALU8X9NEW	1
10		SC-SL-UZL180R	1
10.1		SC-SL-UZL90R	1
11		SC-SL-UZL180L	1
11.1		SC-SL-UZL90L	1
12		3,5x35 SK1SET; Ø 6	2
13		3,5x13 SK2SET	1
14		8 mm Safety Glass	1
15		6 mm Safety Glass +VIRA20CH	1

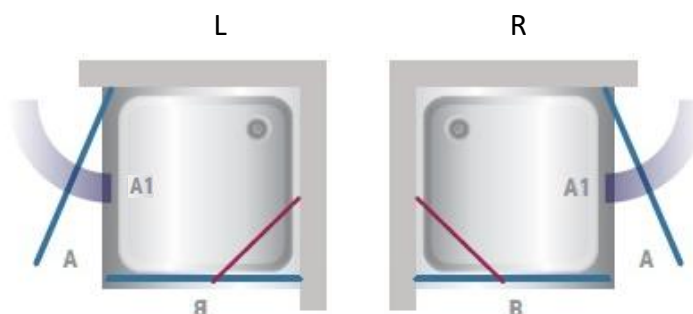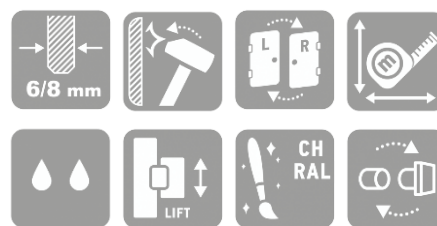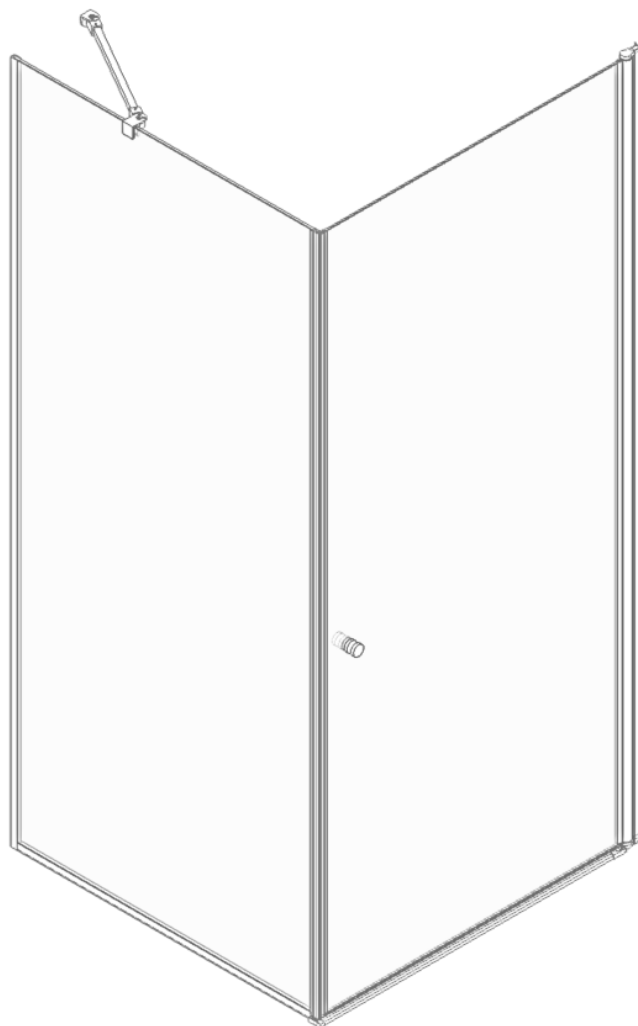

FASCINO	A (mm)	B (mm)	H (mm)
70x70xFAS	695-700	687-692	1988
80x80xFAS	795-800	787-792	1988
90x90xFAS	895-900	887-892	1988

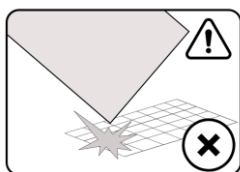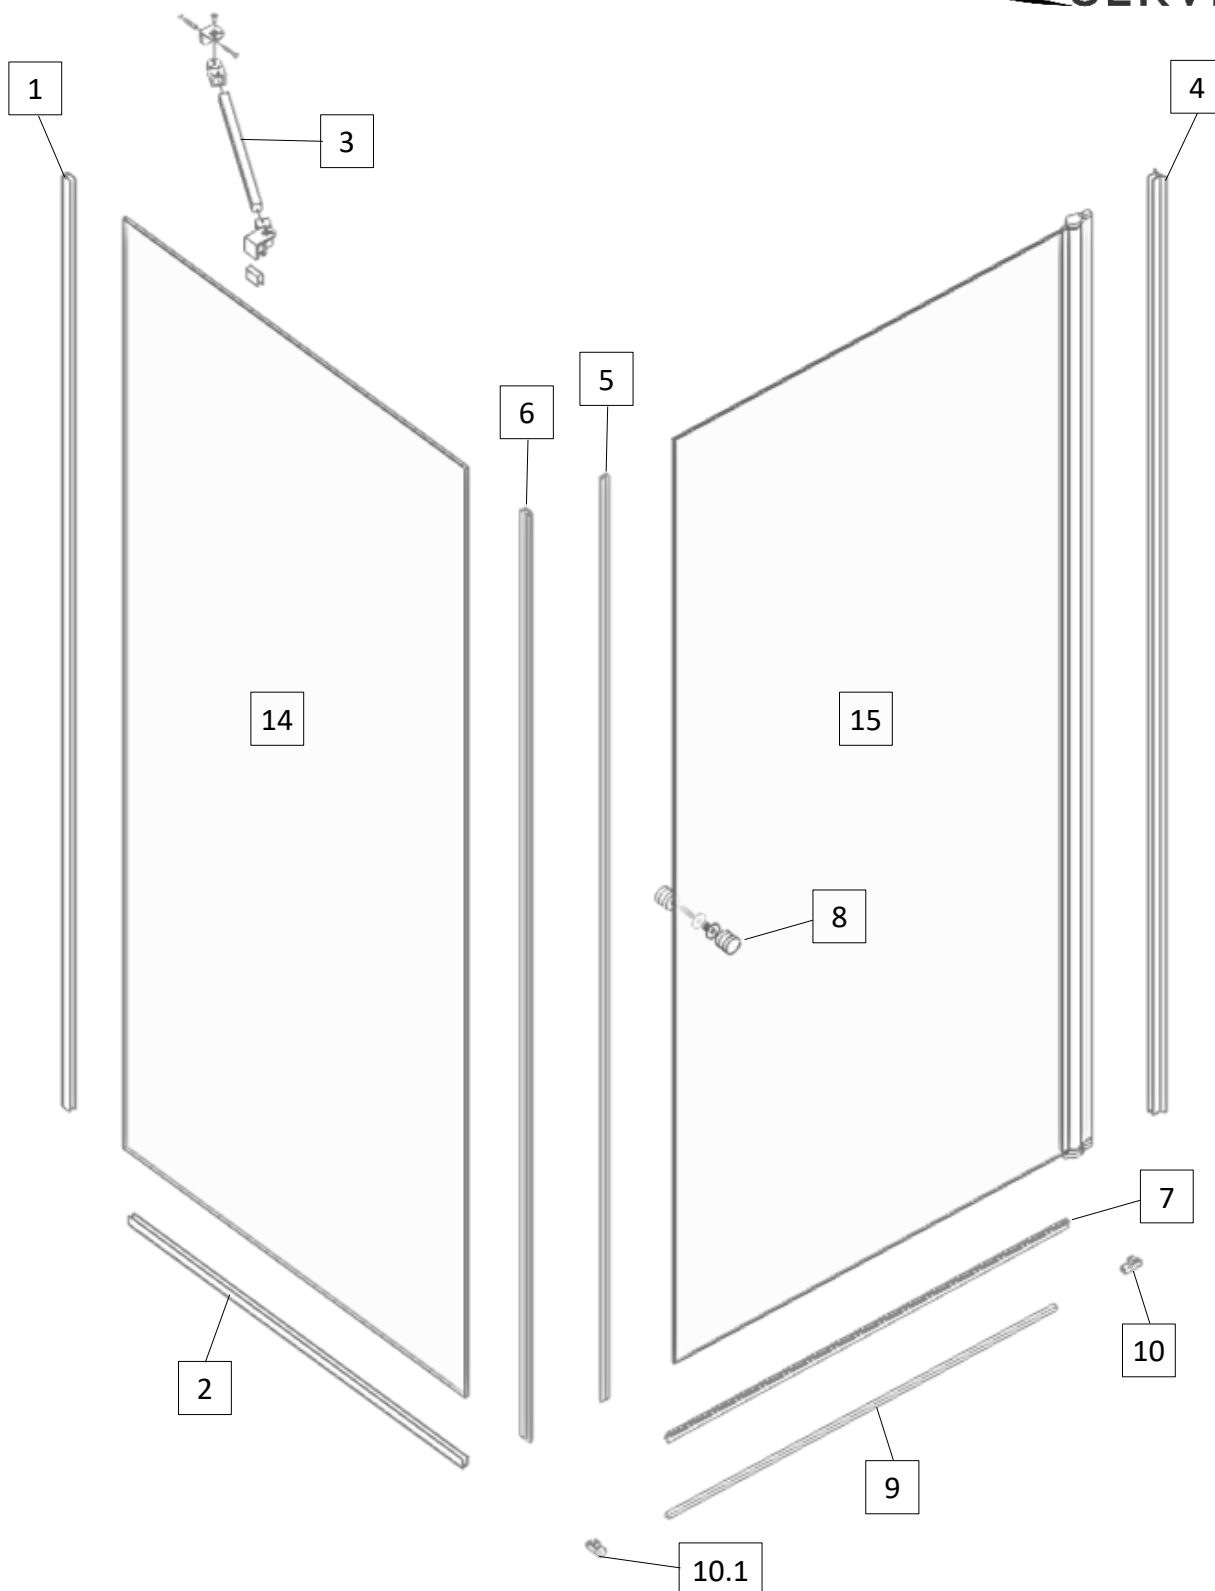





**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

# 1.A

FASCINO	P, (mm)	A1 (mm)	B1, (mm)
70X70FAS	700 x 700	689	683
80X80FAS	800 x 800	789	783
90X90FAS	900 x 900	889	883

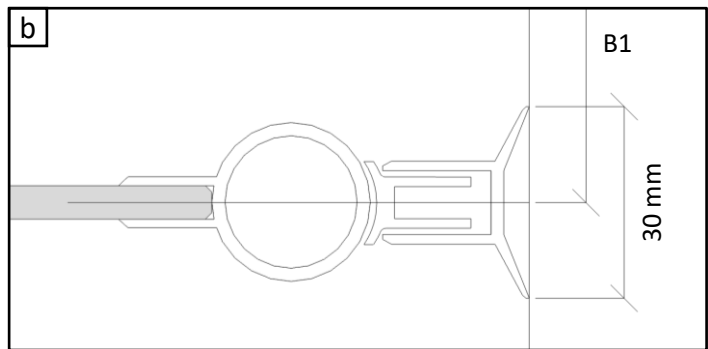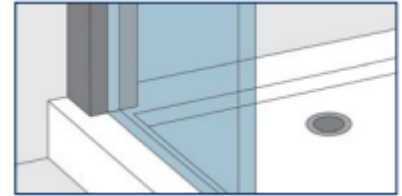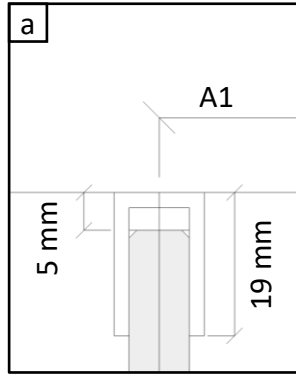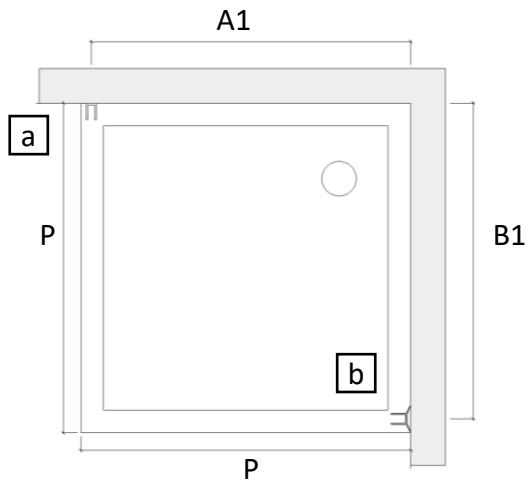

# 1.B

FASCINO	D (mm)	S (mm)
70X70FAS	700	700
80X80FAS	800	800
90X90FAS	900	900

