









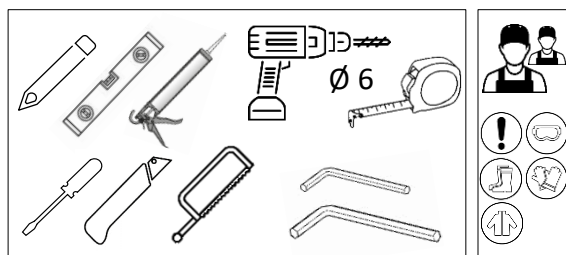

# GIORGIO


## Dušas kabīnes montāžas instrukcija

Инструкция по монтажу душевой кабины


Shower enclosure installation assembly





1		PAL-01	1
2		PAL-01B	1
3		DZT100CHRD19+SK2SET	1
4		MF-42/8-ER	1
5		40021PS-009	1
6		400211PS-013	1
7		WGLA6801CP + SK2SET1	2
8		DR-CH32	1
9		SC-ALU8X9NEW	1
10		SC-SL-UZL90L/R	1
11		3,5x35 SK1SET; Ø 6	5
12		8 mm Safety Glass	1
13		8 mm Safety Glass	1

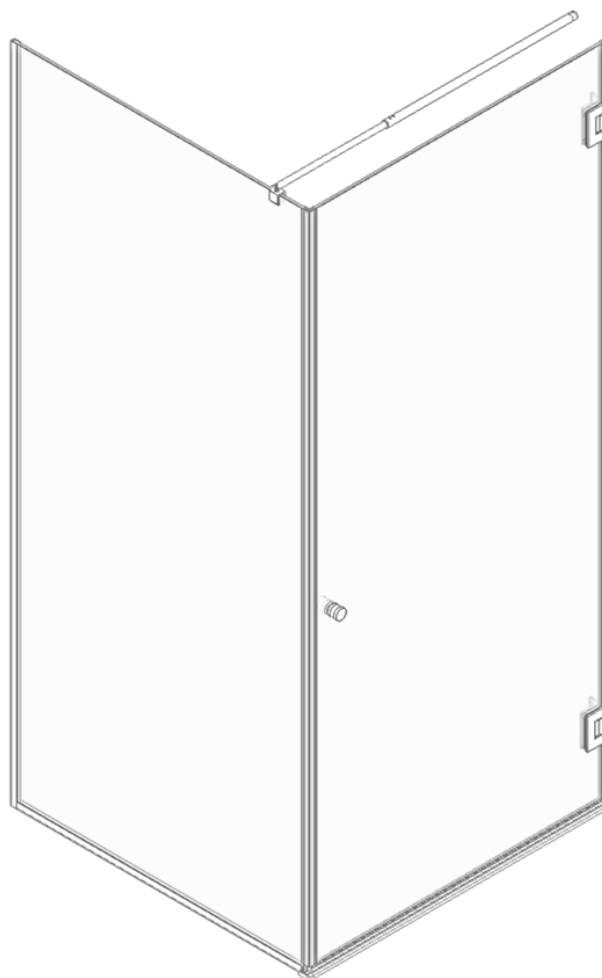

GIORGIO	A (mm)	B (mm)	H (mm)
70x70GIO	692-695	687-792	1988
80x80GIO	792-795	787-792	1988
90x90GIO	892-895	887-892	1988
100x100GIO	992-995	987-992	1988

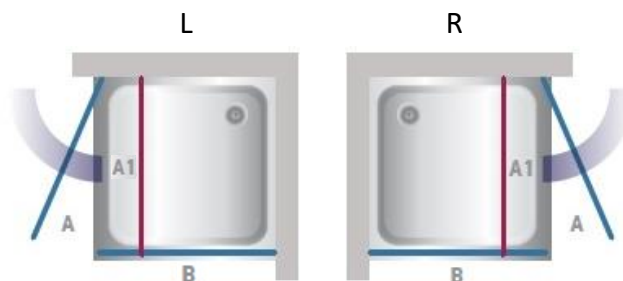

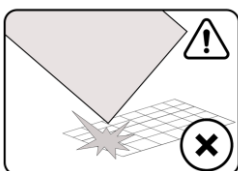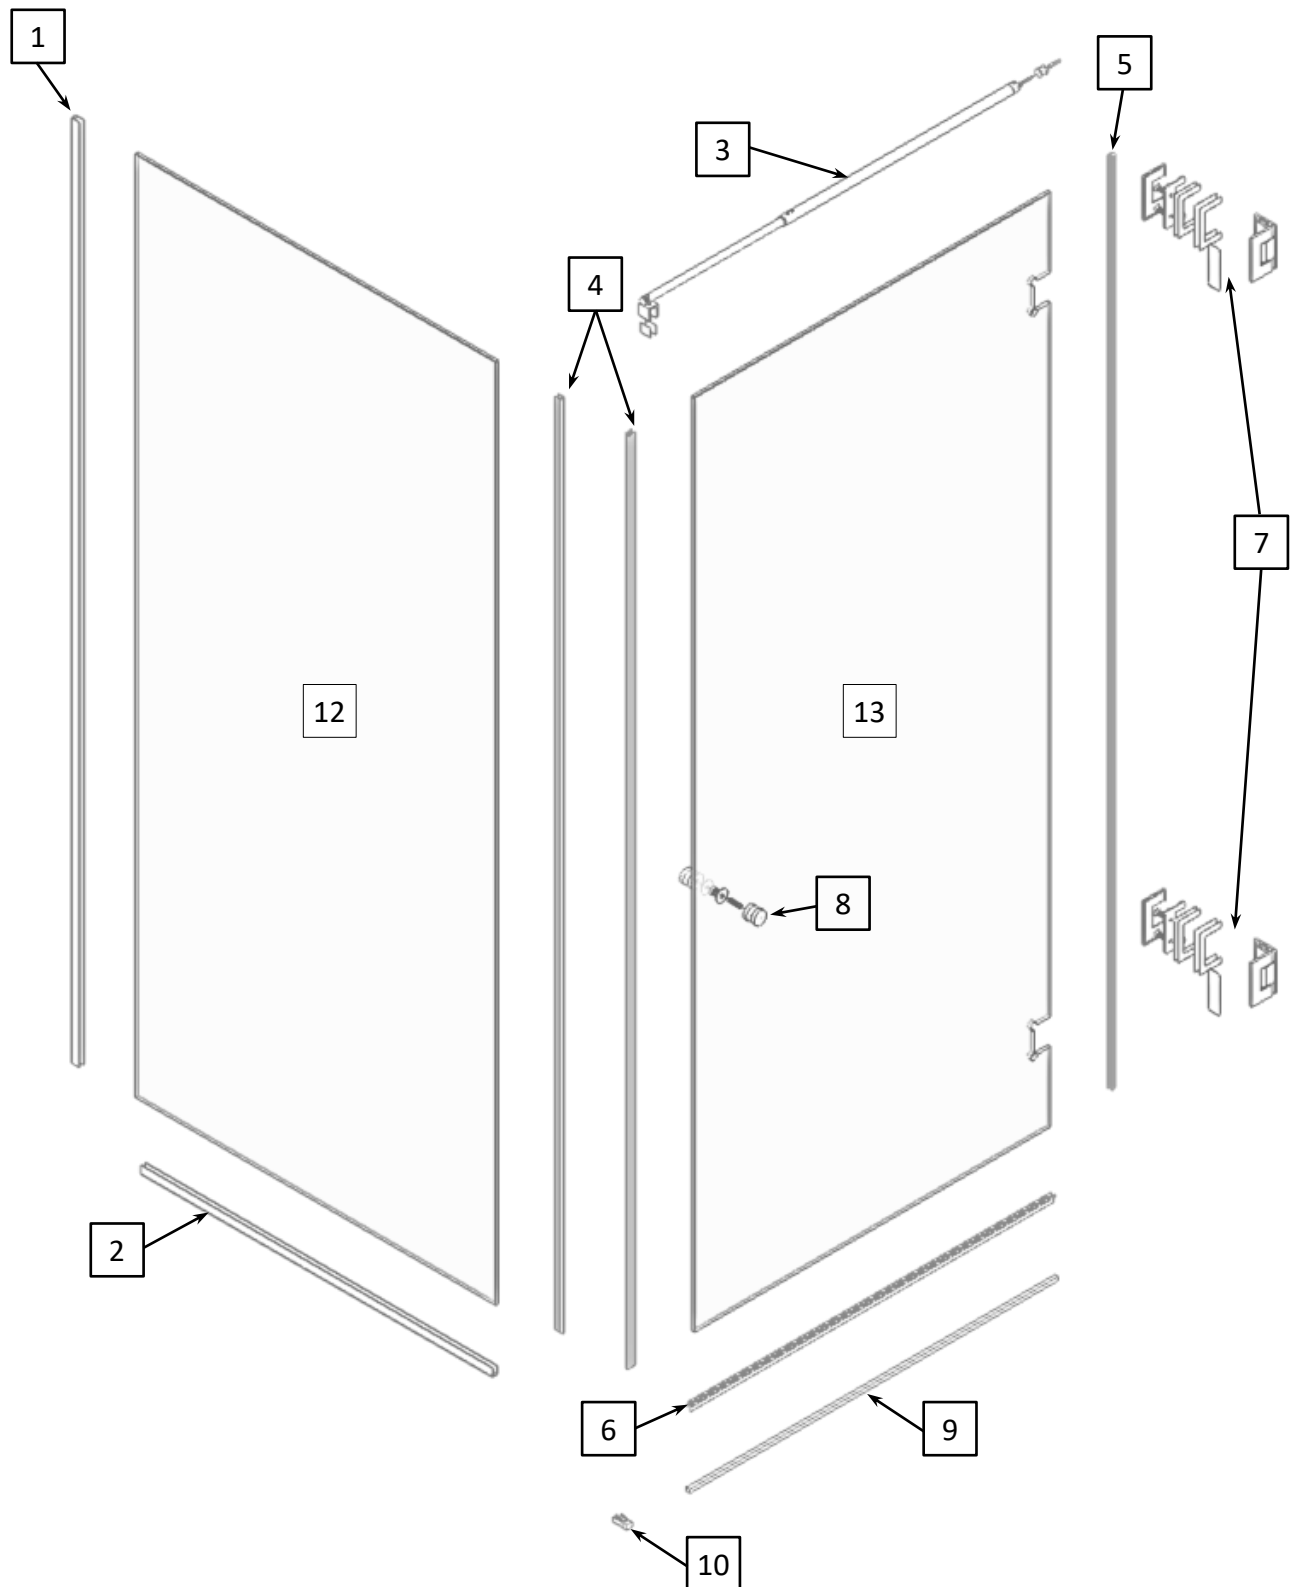





**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

# 1.A

GIORGIO	P, mm	A1	B1, mm
70X70GIO	700 x 700	688	683
80X80GIO	800 x 800	788	783
90X90GIO	900 x 900	888	883
100X100GIO	1000 x 1000	988	983

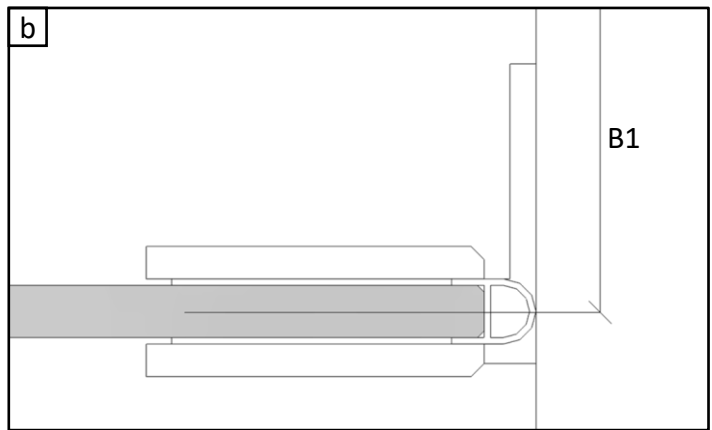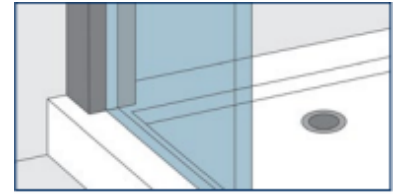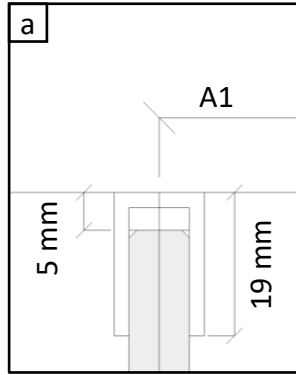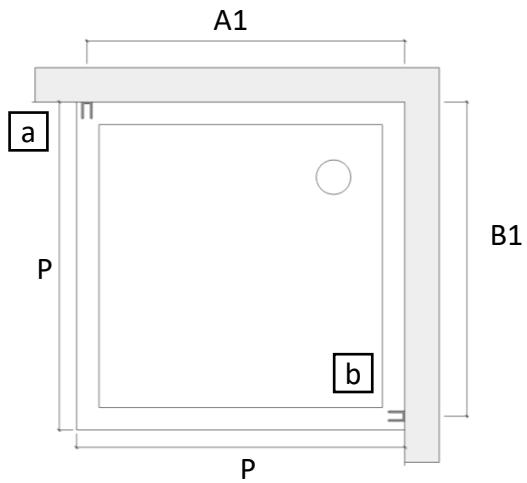

# 1.B

GIORGIO	D	S
70X70GIO	700	700
80X80GIO	800	800
90X90GIO	900	900
100X100GIO	1000	1000

