







# KAIRA BLACK DEEP


## Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены


Shower wall installation instructions

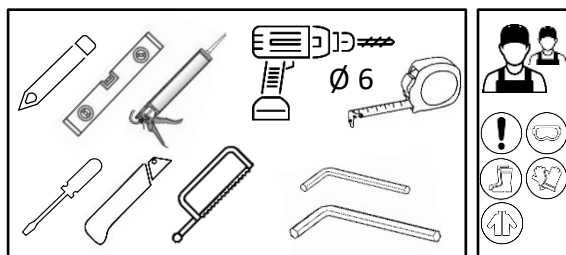


1		DZT100CHR10X 20 + SK2SET 1	1
2		PAL-01	1
3		PAL-01B	1
4		3,5x35 SK1SET Ø 6	5
5		8mm LVS_EN 12150 2:2004	1

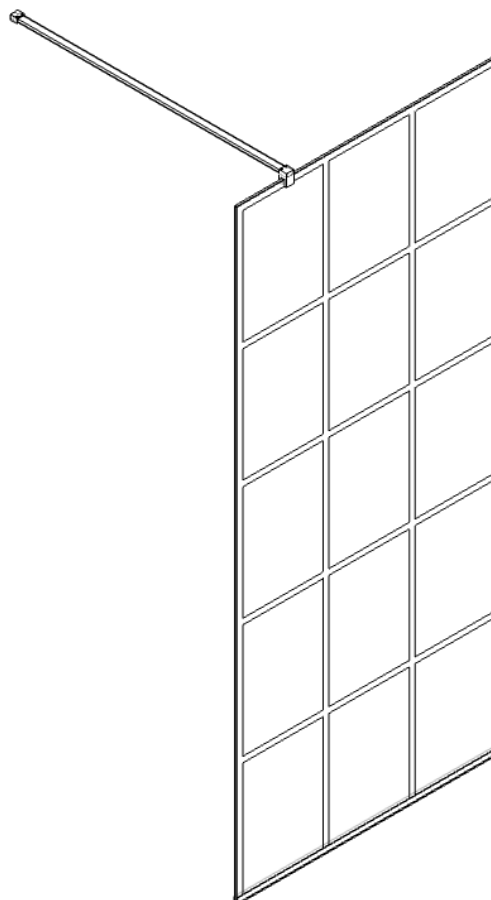

KAIRA BLACK DEEP	A (mm)	H (mm)
60KAI_B_D	568-573	1988
70KAI_B_D	668-673	1988
80KAI_B_D	768-773	1988
90KAI_B_D	868-873	1988
100KAI_B_D	968-973	1988
110KAI_B_D	1068-1073	1988
120KAI_B_D	1168-1173	1988

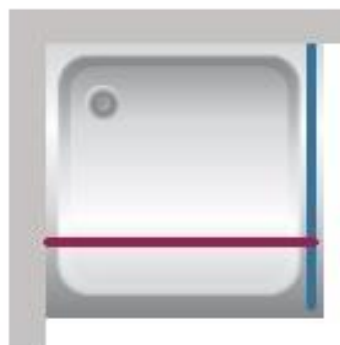


# KAIRA BLACK DEEP

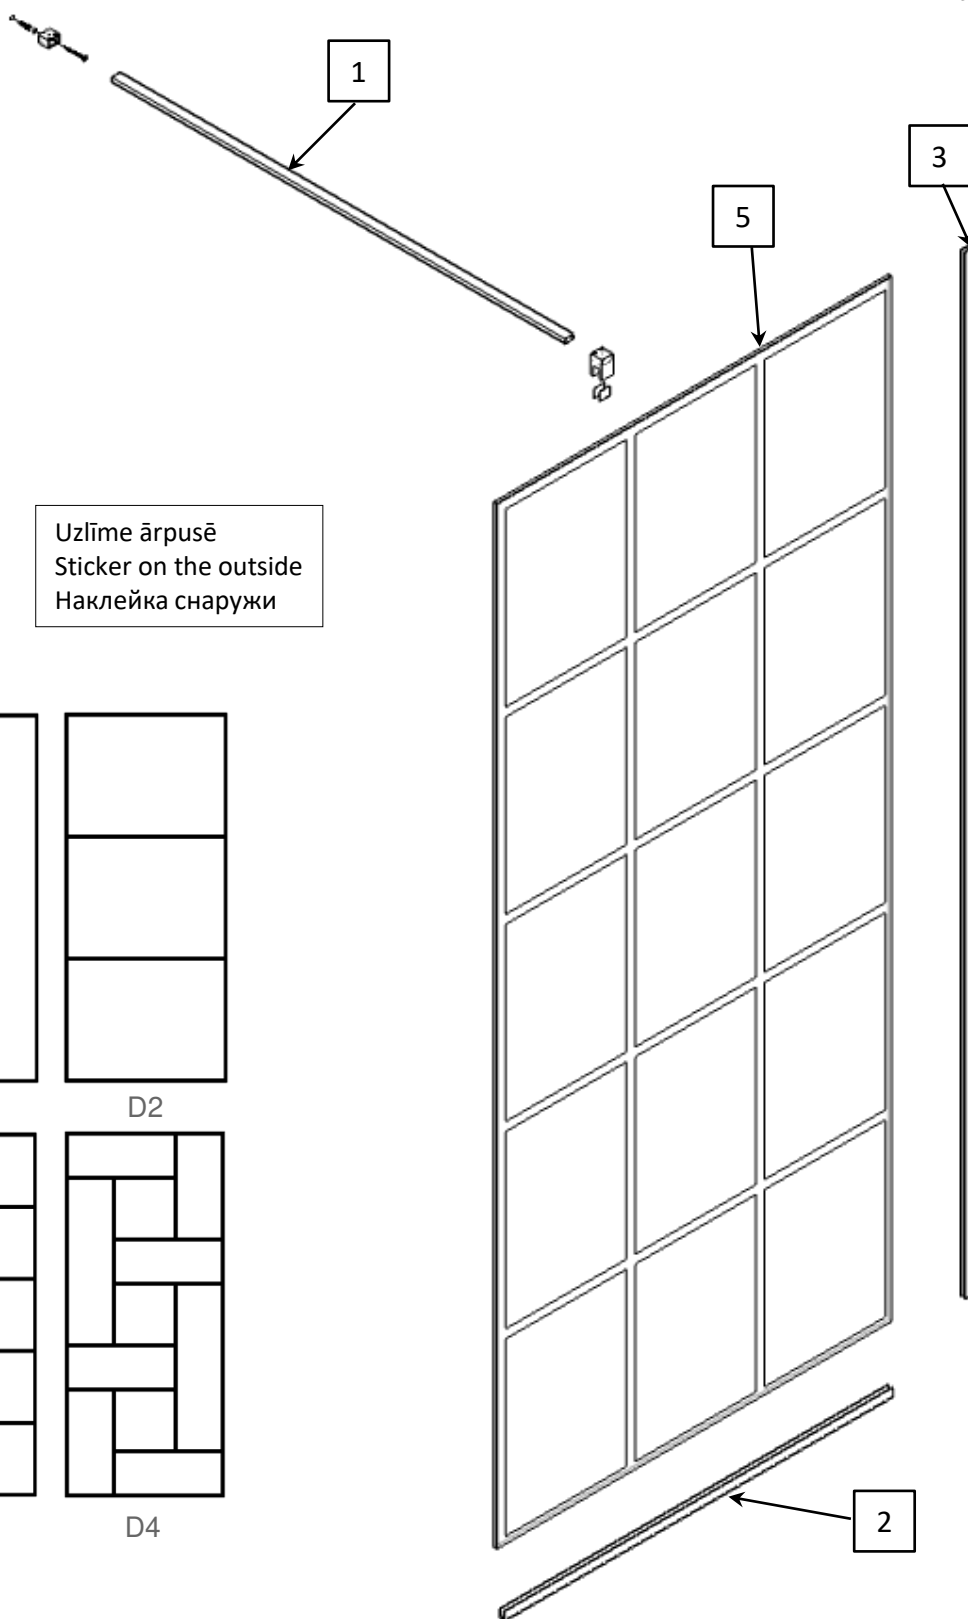


Uzlīme ārpusē  
Sticker on the outside  
Наклейка снаружи




D1




D2

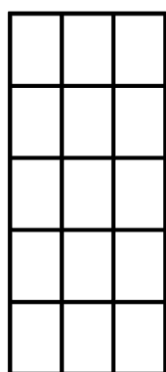

D3

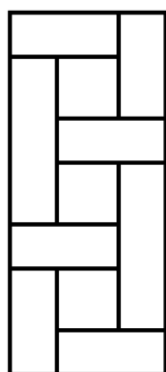

D4

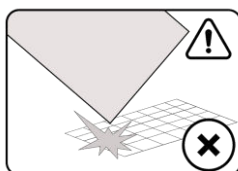

**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

