


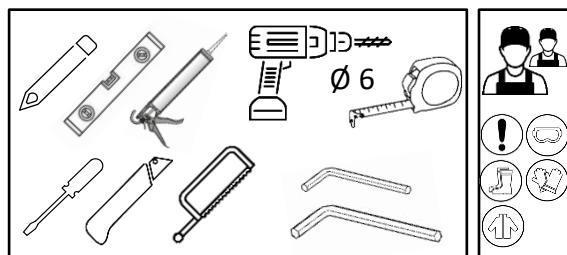

JESSICA


Duša kabīnes montāžas instrukcija

Инструкция по монтажу душевой кабины


Shower enclosure installation assembly





1.		PAL-01	2
2.		PAL-01B	2
3.		SU45CHKANT + SK2SET1	2
4.		MF-42/8-ER	1
5.		R1653308	2
6.		SC-ALU8X9NEW	2
7.		8192ZN5-BS	4
8.		NLO-ZD-2856	2
9.		SC-SL-UZL90G/G	1
10.		3,5x35 SK1SET; Ø 6	2
11.		8 mm Safety Glass	1
12.		8 mm Safety Glass	1
13.		8 mm Safety Glass	1
14.		8 mm Safety Glass	1

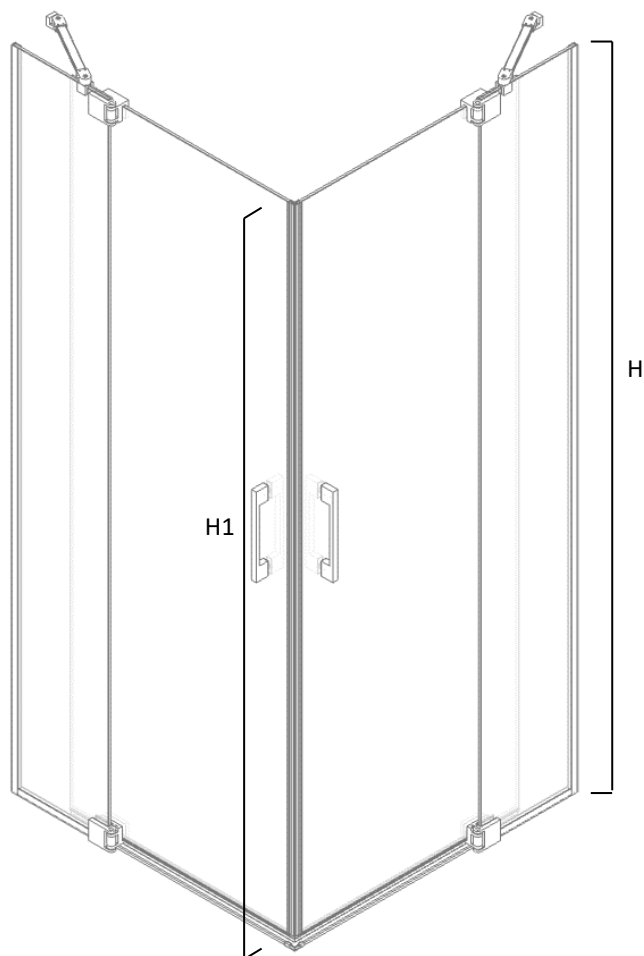

JESSICA	A + B (mm)	B (mm)	H (mm)	H1 (mm)
70X70JES	650-710	200	2000	1978
80X80JES	750-810	200	2000	1978
90X90JES	850-910	300	2000	1978
100X100JES	950-1010	300	2000	1978
110X110JES	1050-1110	400	2000	1978
120X120JES	1150-1210	500	2000	1978

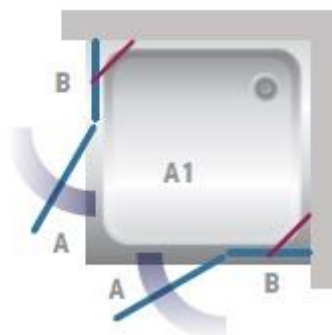

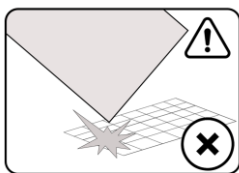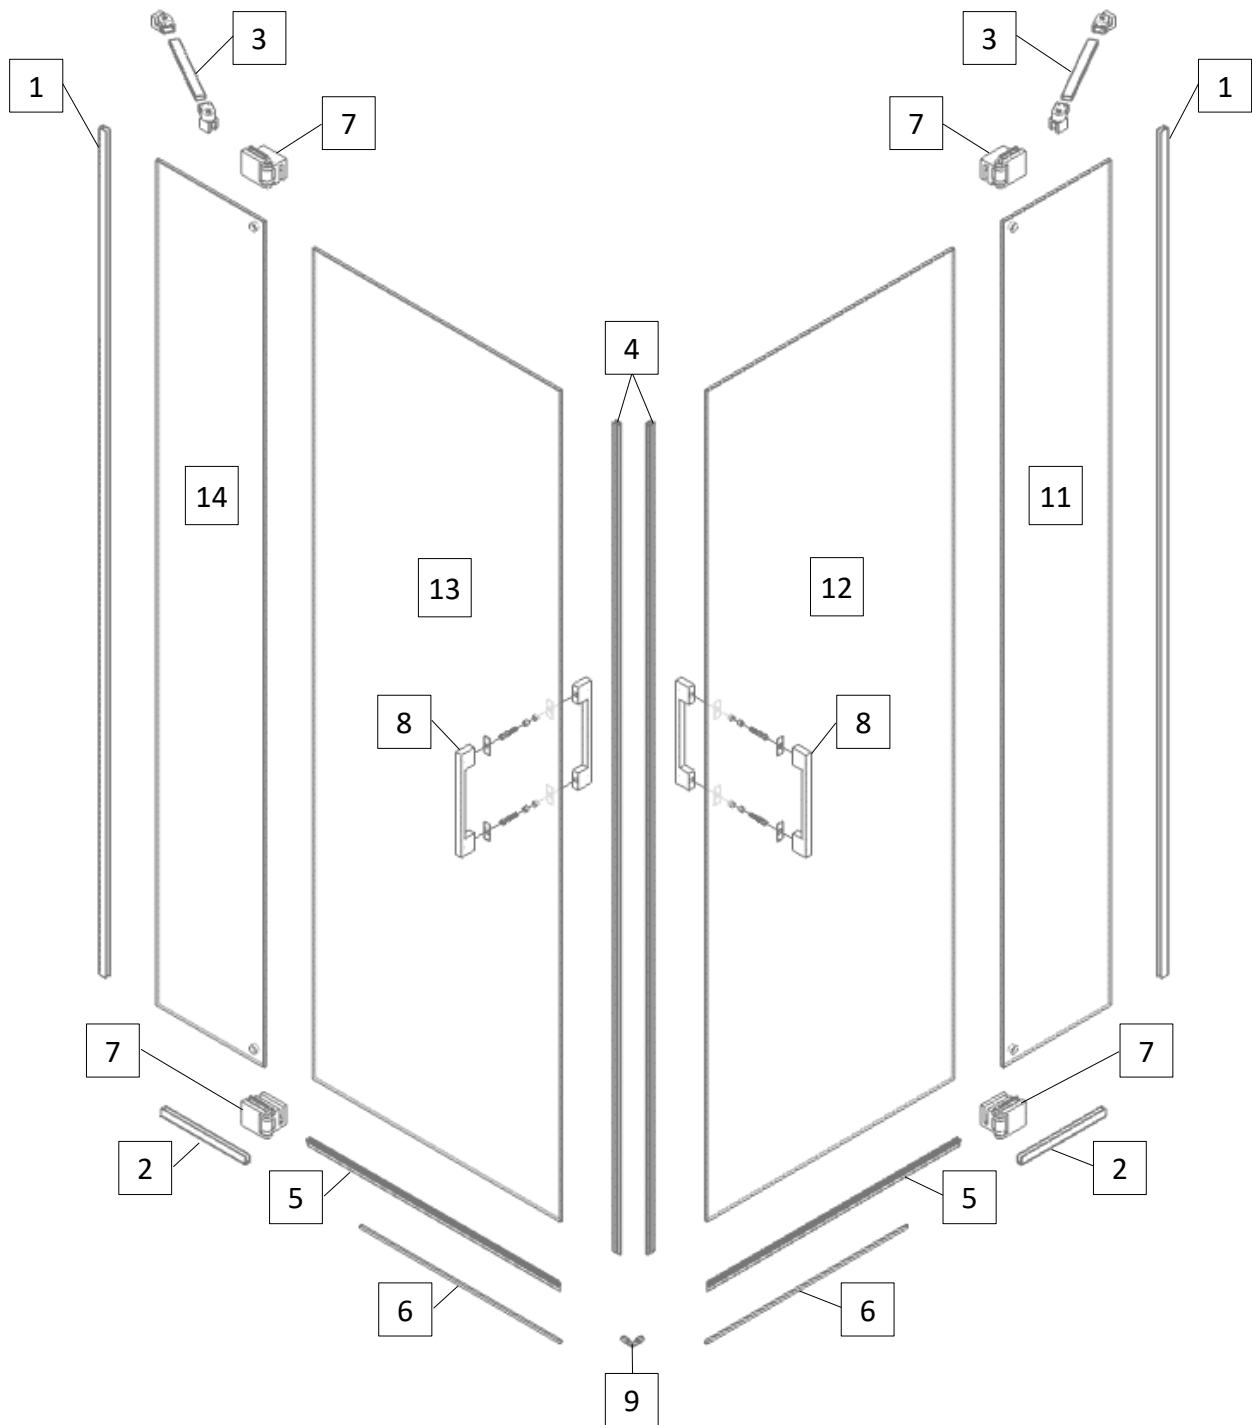





Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

1.A

JESSICA	P, mm	A+B1, mm	C1, mm
70X70JES	700 x 700	684	684
80X80JES	800 x 800	784	784
90X90JES	900 x 900	884	884
100X100JES	1000 x 1000	984	984
110X110JES	1100 x 1100	1084	1084
120X120JES	1200 x 1200	1184	1184

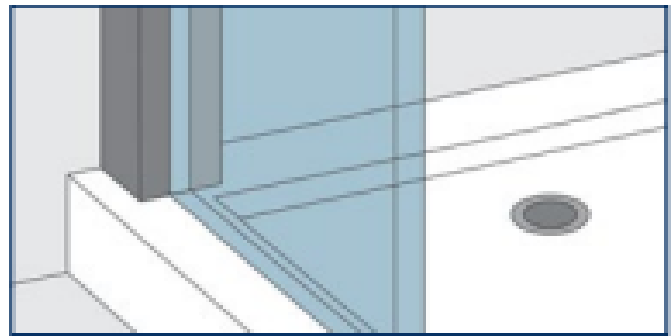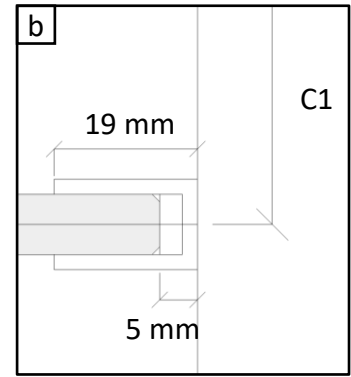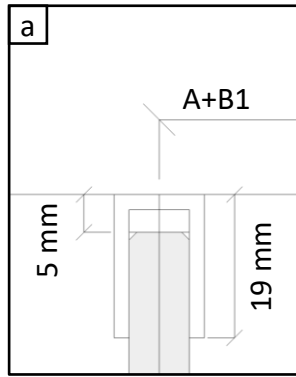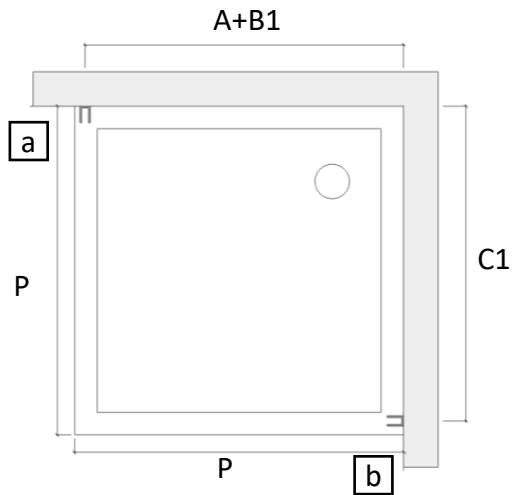

1.B

JESSICA	D, mm	S, mm
70X70JES	700	700
80X80JES	800	800
90X90JES	900	900
100X100JES	1000	1000
110X110JES	1100	1100
120X120JES	1200	1200

