






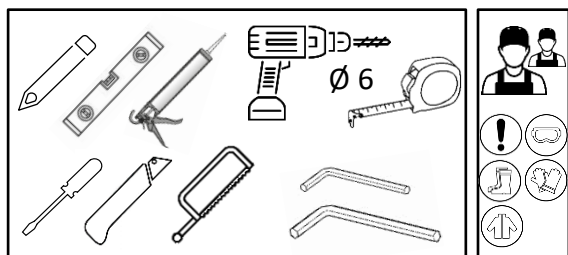








# KAMILA



## Dušas kabīnes montāžas instrukcija

Инструкция по монтажу душевой кабины


Shower enclosure installation assembly





1.		PAL-01	1
2.		PAL-01B	1
3.		MF-42/8-ER	1
4.		40021PS - 009	1
5.		400211PS-013	1
6.		DZT100CHRD19 + SK2SET	1
7.		SC-ALU8X9NEW	1
8.		SSPBH-771 + SK2SET	2
9.		PSDK-05	1
10L		SC-SL-UZL90R	1
10R		SC-SL-UZL90L	1
11.		3,5X35 SK1SET; Ø 6	2
12.		8mm Safety Glass	1
13.		8mm Safety Glass	1

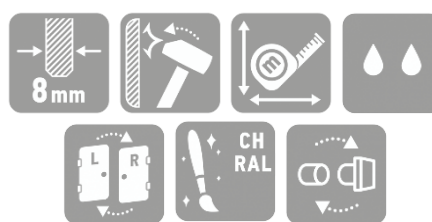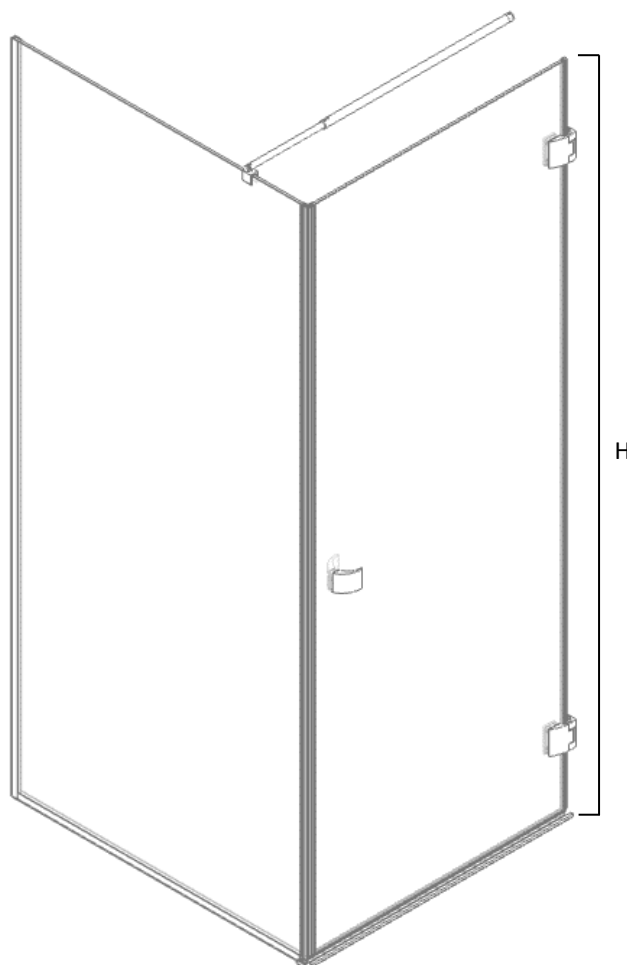

KAMILA	A+B (mm)	A1 (mm)	B (mm)	H (mm)
70X70KAM	692-695	650	687-692	1988
80X80KAM	792-795	750	787-792	1988
90X90KAM	892-895	850	887-892	1988

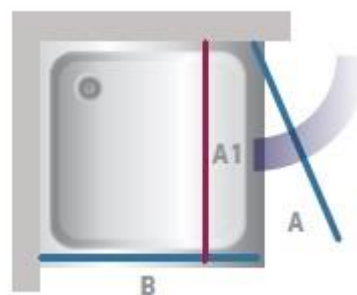

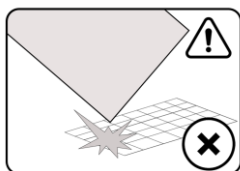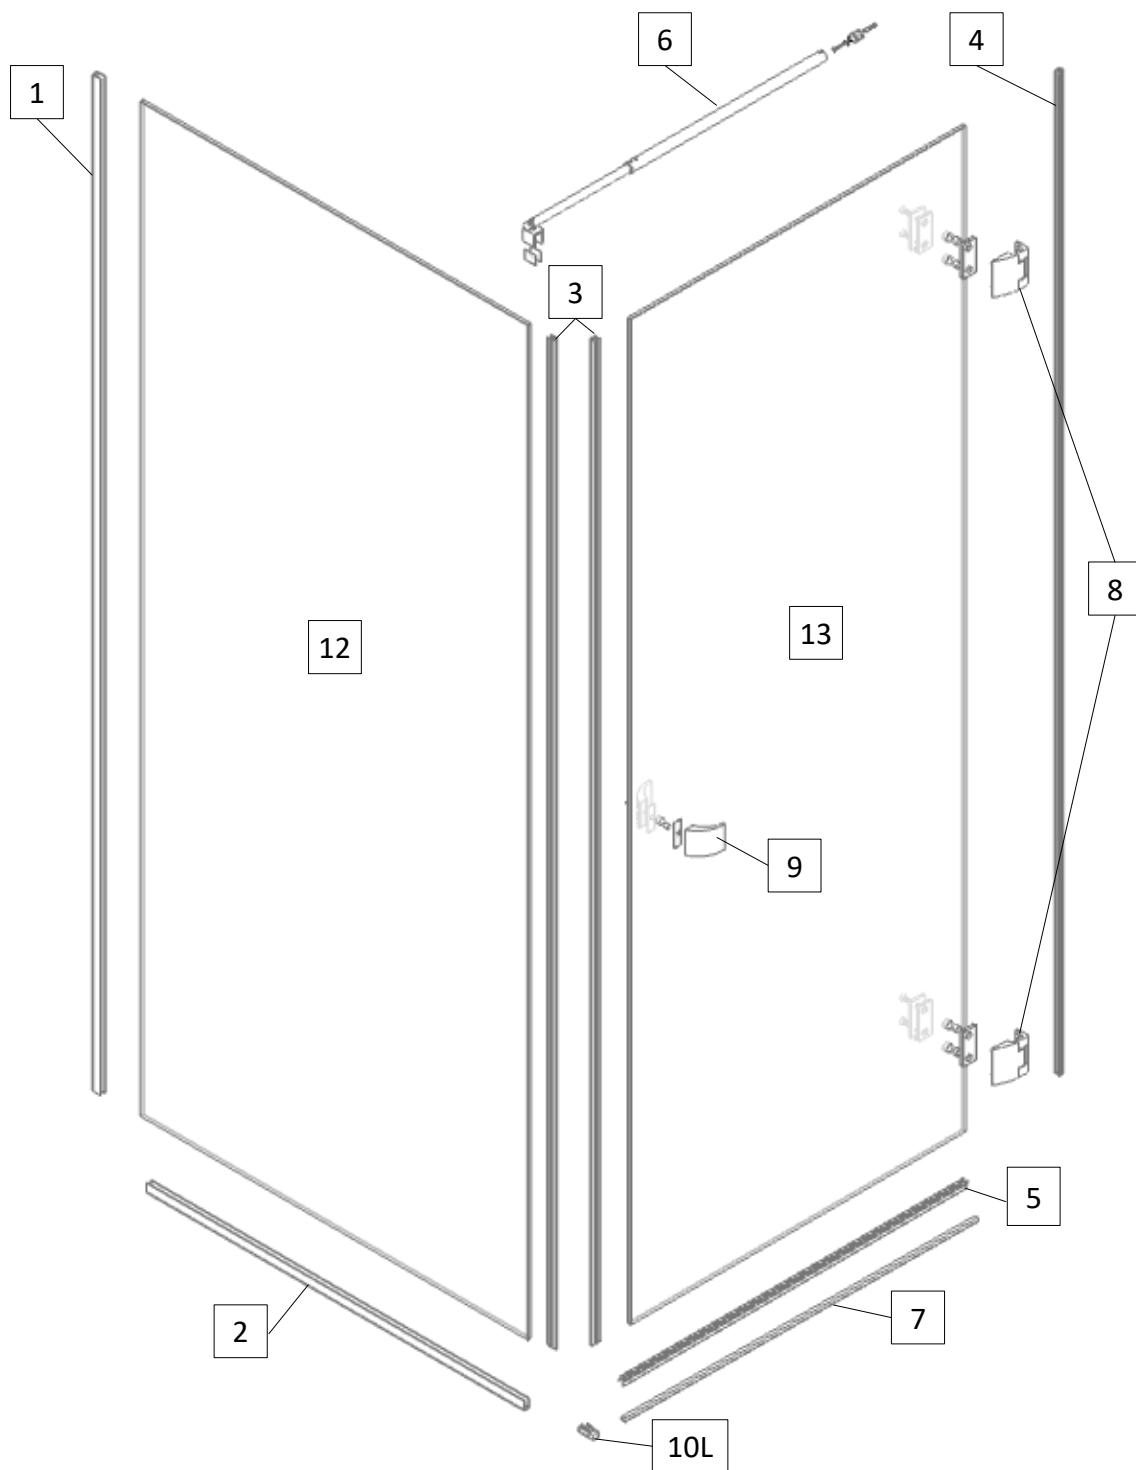




**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

# 1.A

KAMILA	P, mm	A1, mm	C1, mm
70X70KAM	700 x 700	686	683
80X80KAM	800 x 800	786	783
90X90KAM	900 x 900	886	883

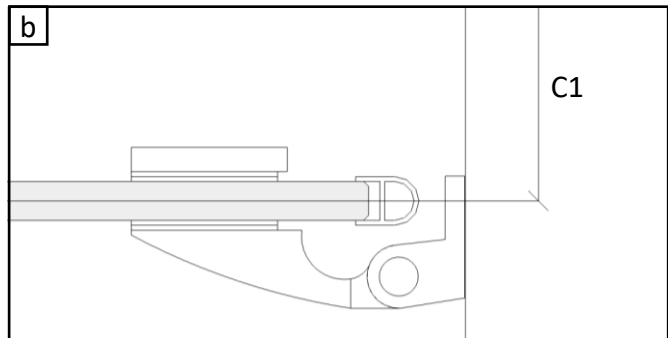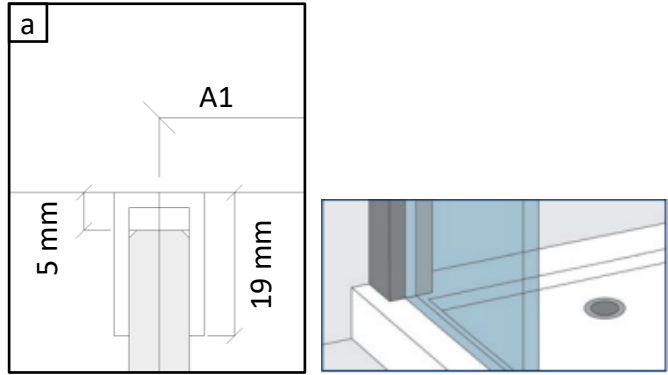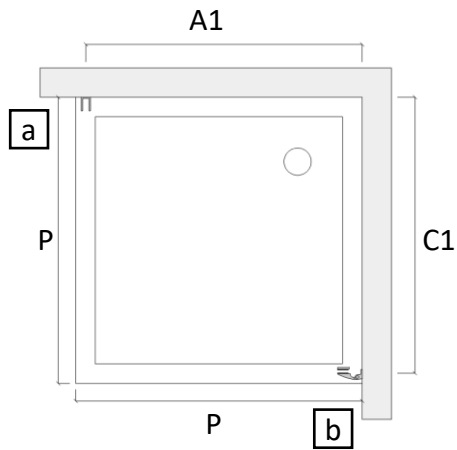

# 1.B

KAMILA	D, mm	S, mm
70X70KAM	700	700
80X80KAM	800	800
90X90KAM	900	900

