


# SABRINA


## Dušas kabīnes montāžas instrukcija

Инструкция по монтажу душевой двери


Shower door installation instructions


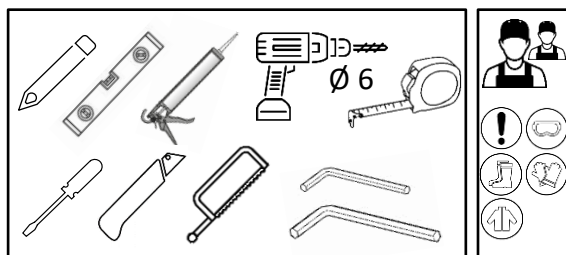


1.		PAL-01	2
2.		PAL-01B	2
3.		SF67-8-SERE	2
4.		8864-KUO-8	2
5.		S003-PROF	2
6.		MF-36/8-ER	1
7.		S003_ROS_SET L	1
8.		S003_ROS_SET R	1
9.		SC-ALU8X9NEW	2
10.		NTDL55	2
11.		SC-SL-UZL90G/G	1
12.		NLO-DP03-S003	1
13.		3,5X35 SK1SET	2
14.		8 mm Safety Glass	1
15.		8 mm Safety Glass	1
16.		8 mm Safety Glass	1
17.		8 mm Safety Glass	1

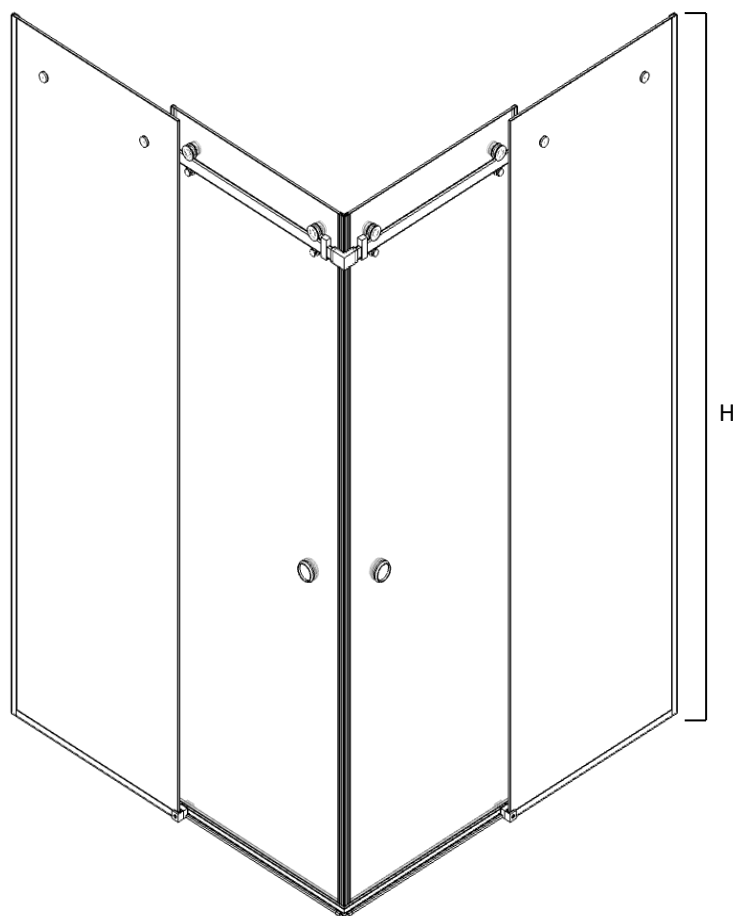

SABRINA	A (mm)	A1 (mm)	B (mm)	H (mm)
70X70SAB	680-700	380	370	2000
80X80SAB	780-700	450	420	2000
90X90SAB	880-900	520	470	2000
100X100SAB	980-1000	520	520	2000

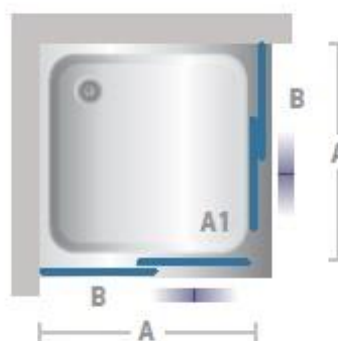

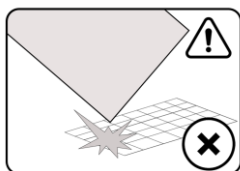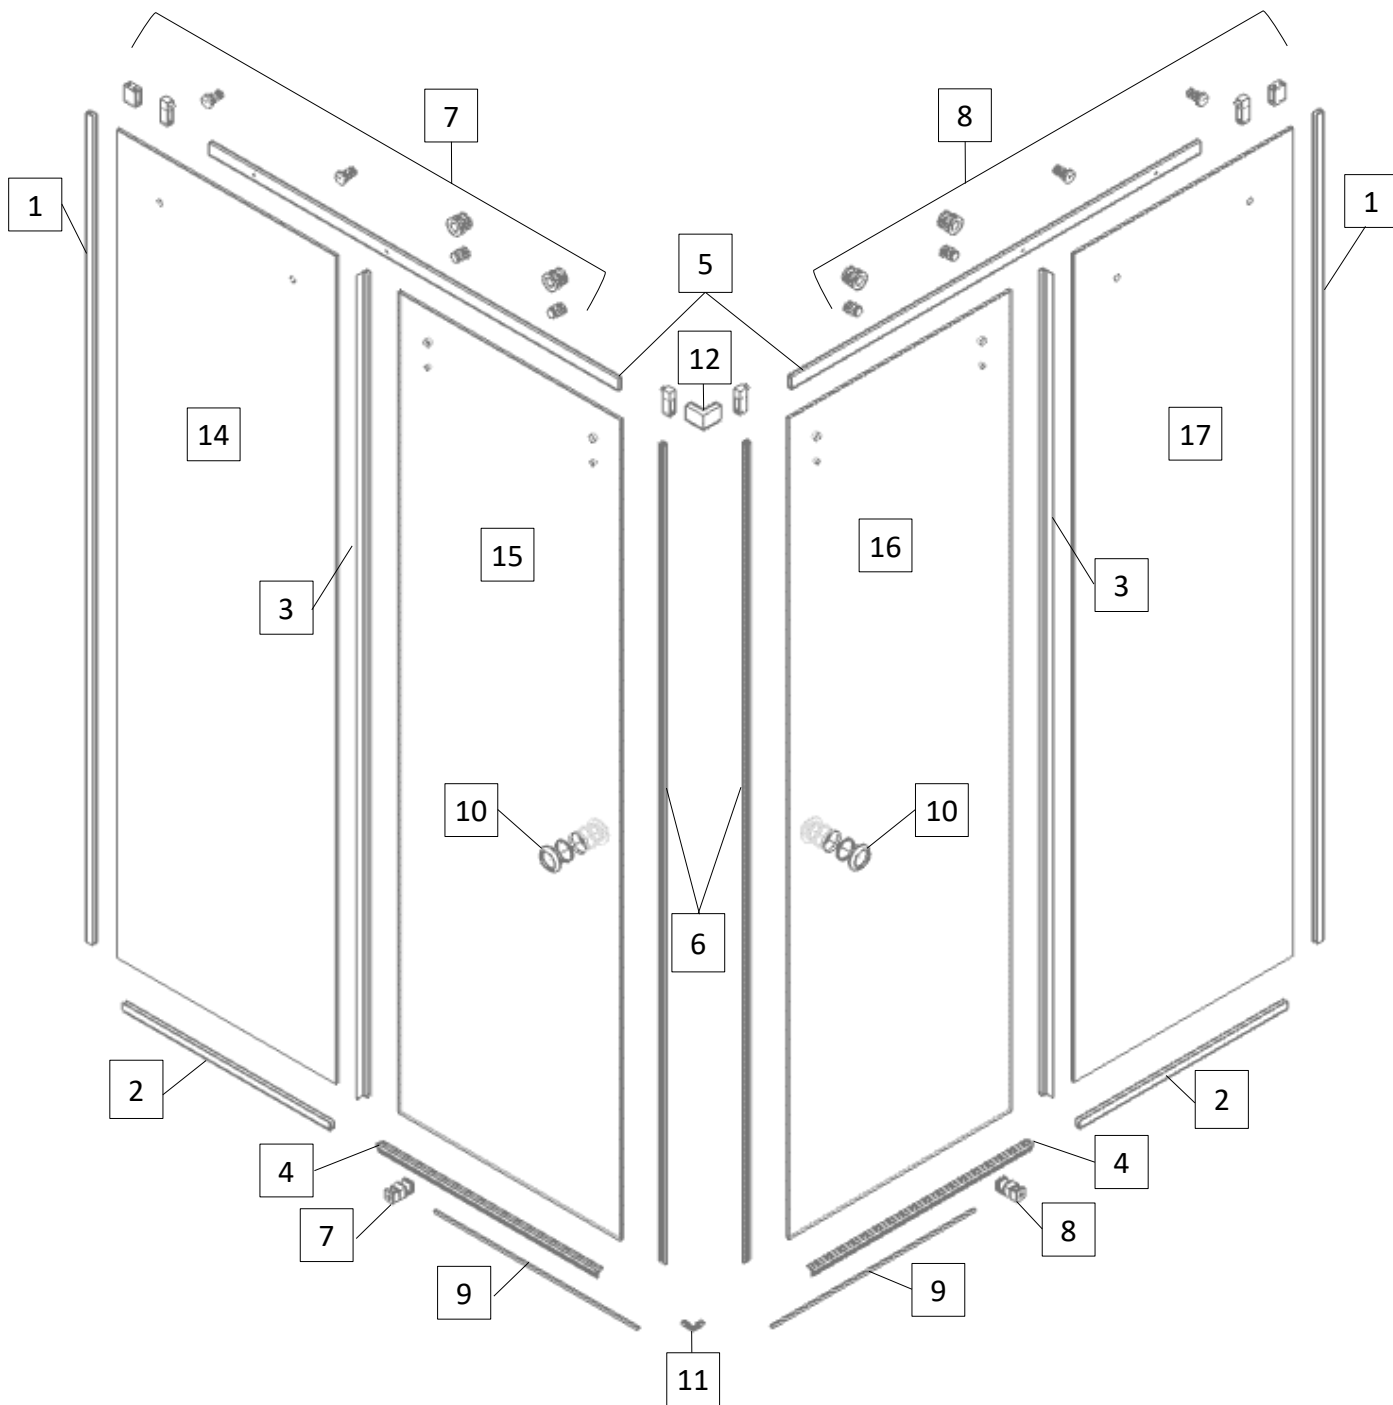





**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

# 1.A

SABRINA	P, mm	A+B1, mm	C1, mm
70X70SAB	700 x 700	687	687
80X80SAB	800 x 800	787	787
90X90SAB	900 x 900	887	887
100X100SAB	1000 x 1000	987	987

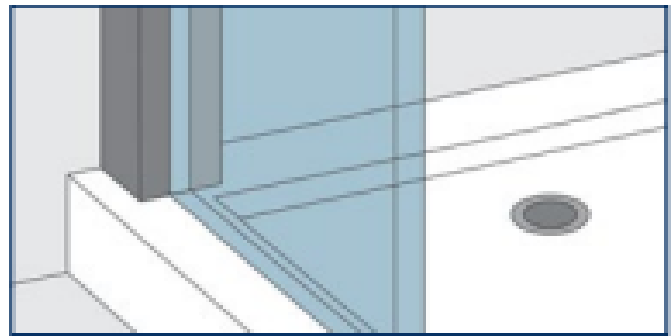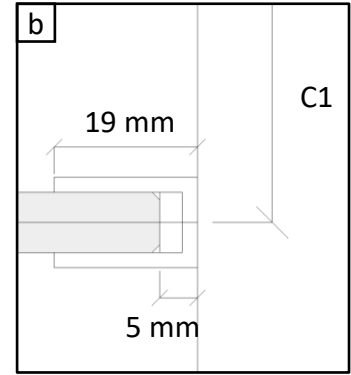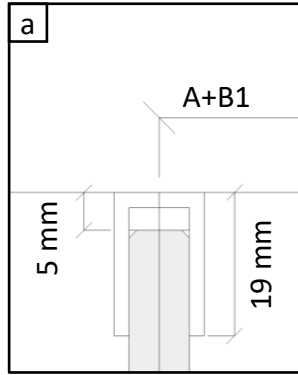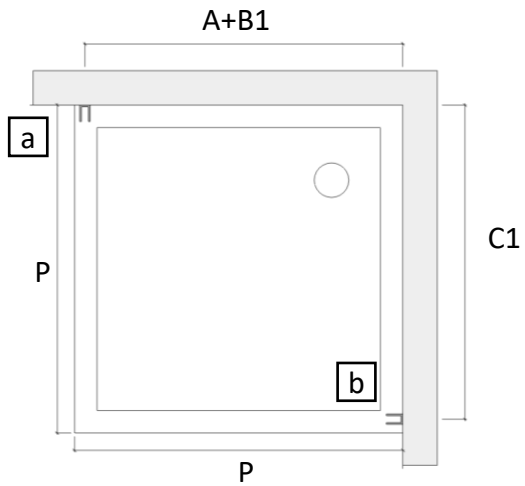

# 1.B

SABRINA	D	S
70X70SAB	700	700
80X80SAB	800	800
90X90SAB	900	900
100X100SAB	1000	1000

