


# CHIARA


## Dušas kabīnes montāžas instrukcija

Инструкция по монтажу душевой кабины

Shower enclosure installation assembly

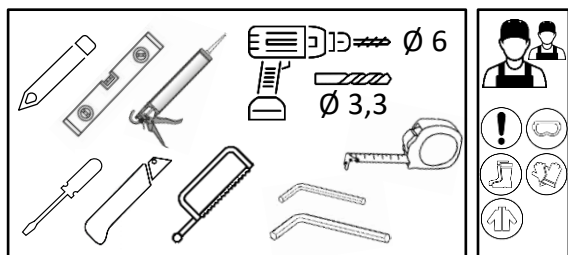


1.		PAL-01	1
2.		PAL-01B	1
3.		DZT100CHR10X20	1
4.		MF-42/8-ER	1
5.		40021PS - 009	2
6.		400211PS-013	1
7.		PSDF-5CH-90CH	2
8.		NLO-ZD-2856	2
9.		SC-ALU8X9NEW	1
10.A		SC-SL-UZL90L	1
10.B		SC-SL-UZL90R	1
11.		3,5x35 SK1SET; Ø 6	2
12.		8 mm Safety Glass	1
13.		8 mm Safety Glass	1


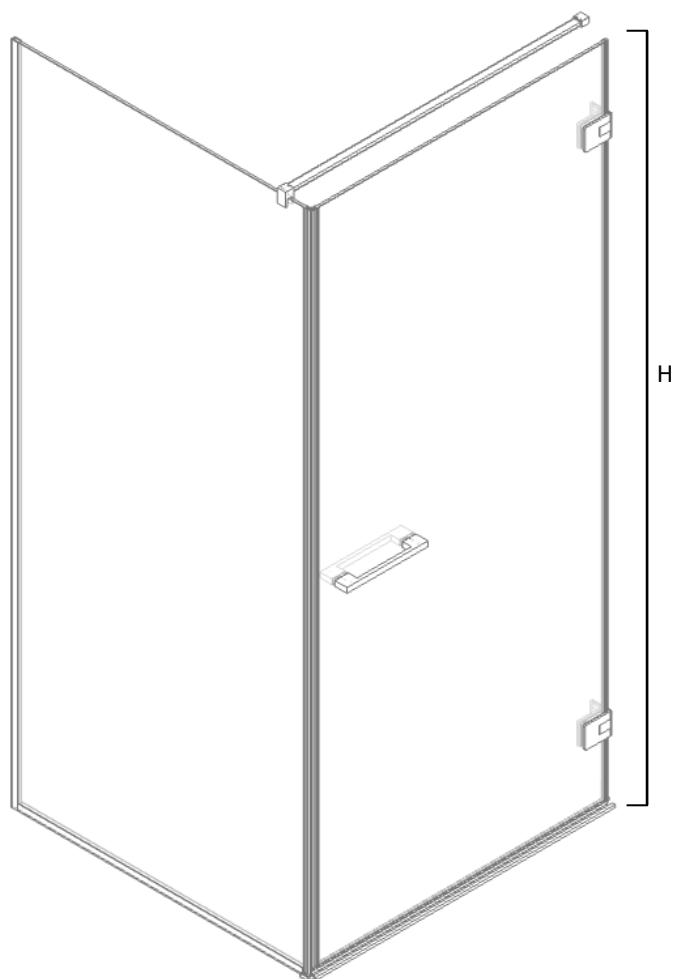


L

R

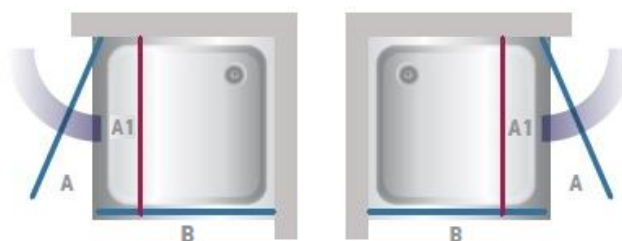

CHIARA	A ( mm)	B (mm)	H (mm)
70X70CHI	692-695	687-692	1988
80X80CHI	792-795	787-792	1988
90X90CHI	892-895	887-892	1988

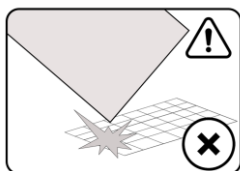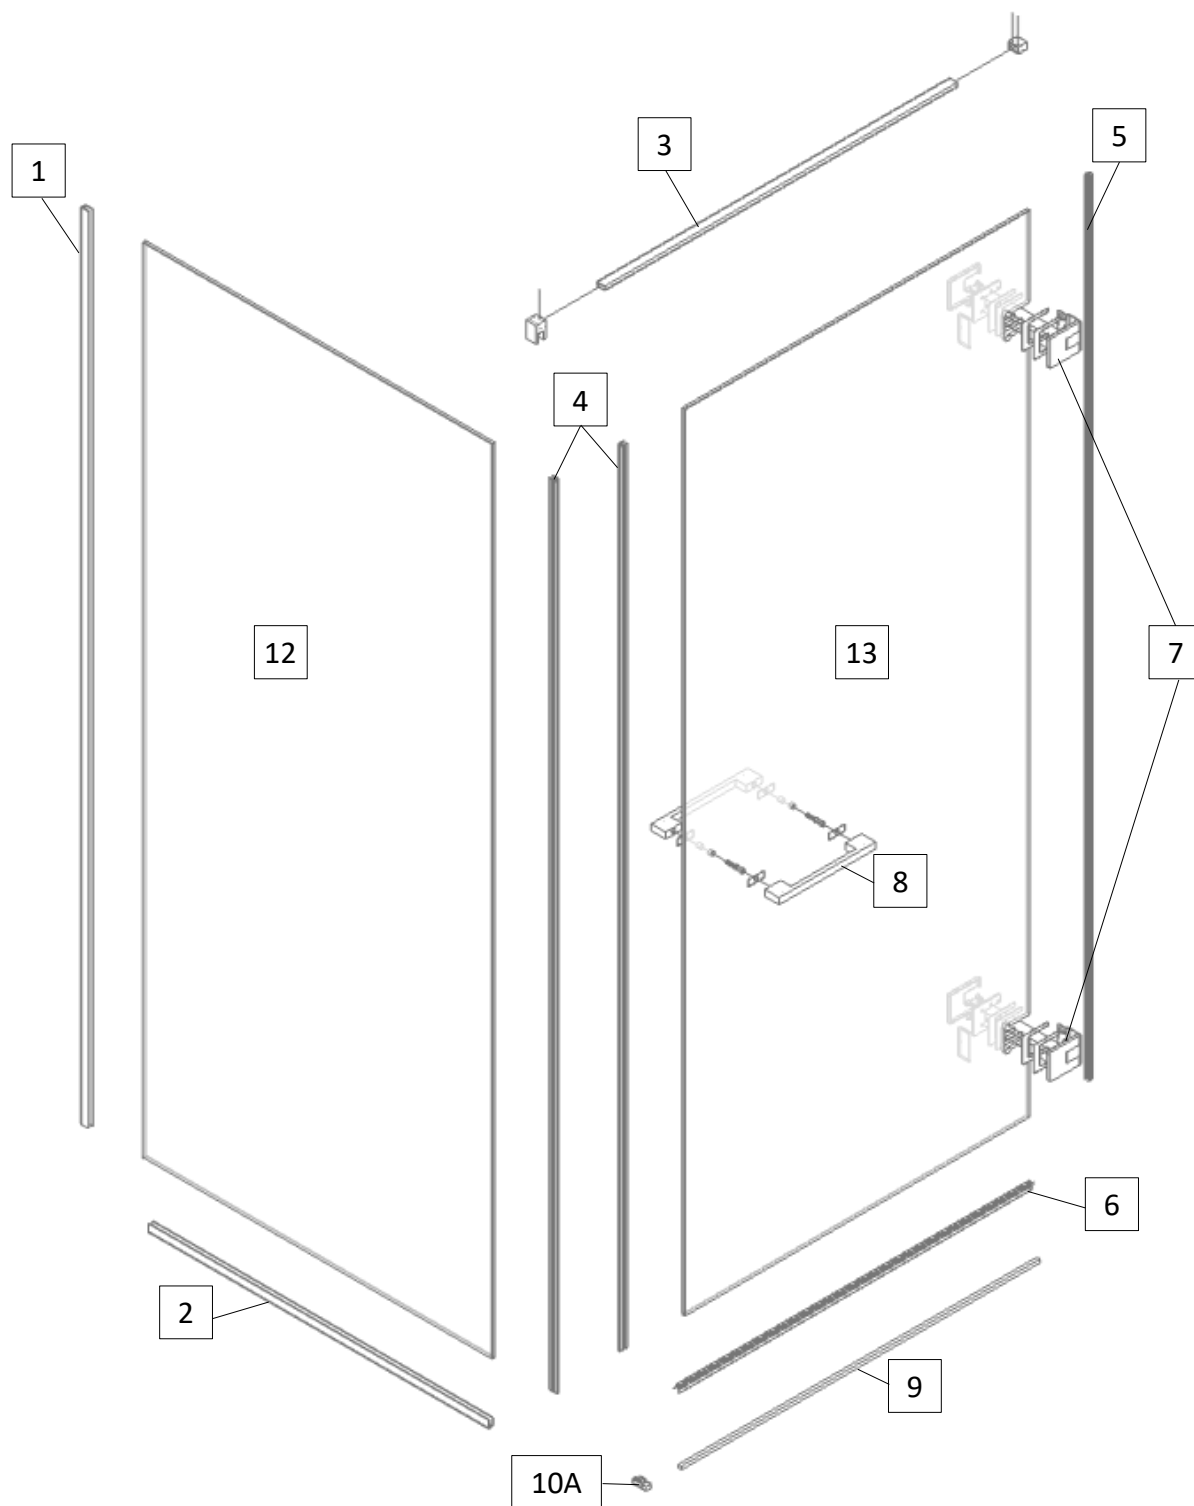





**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

### 1.A

CHIARA	P, mm	A1, mm	B1, mm
70X70CHI	700 x 700	686	681
80X80CHI	800 x 800	786	781
90X90CHI	900 x 900	886	881

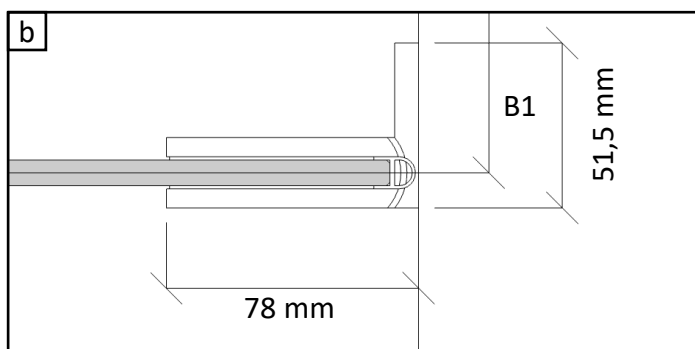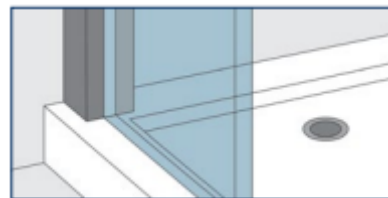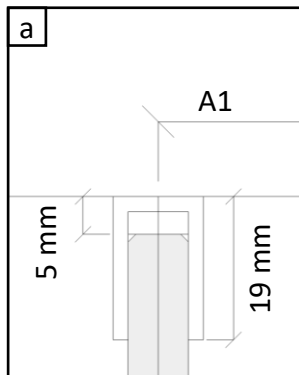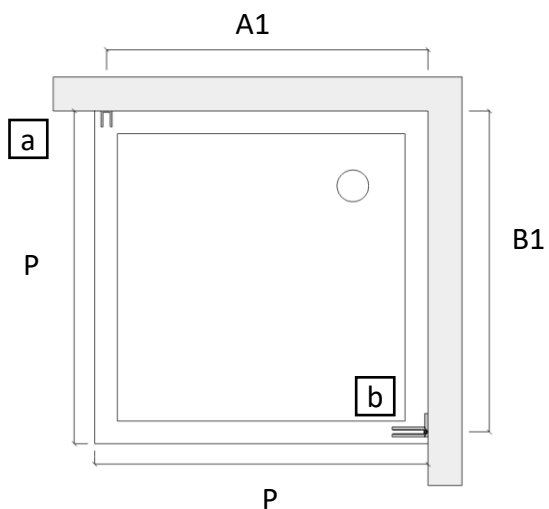

### 1.B

CHIARA	D	S
70X70CHI	700	700
80X80CHI	800	800
90X90CHI	900	900

