


ESTETICO PLUS


Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены

Bath screen installation instructions


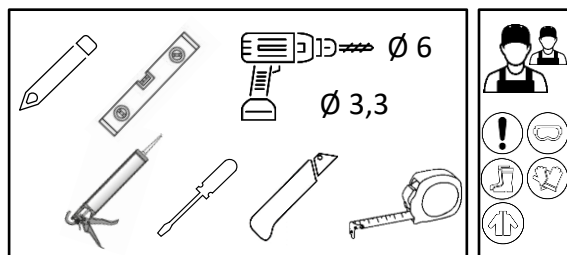


1.		VIRA15CH	1
2.		PAL-01B	1
3.		SU45CH + SK2SET1	1
4.		R1656715	1
5.		3,5X35 SK1SET	1
6.		3,5x13 SK2SET	1
7.		6 mm Safety Glass + VIRA15CH	1
8.		6 mm Safety Glass + VIRA15CH	1

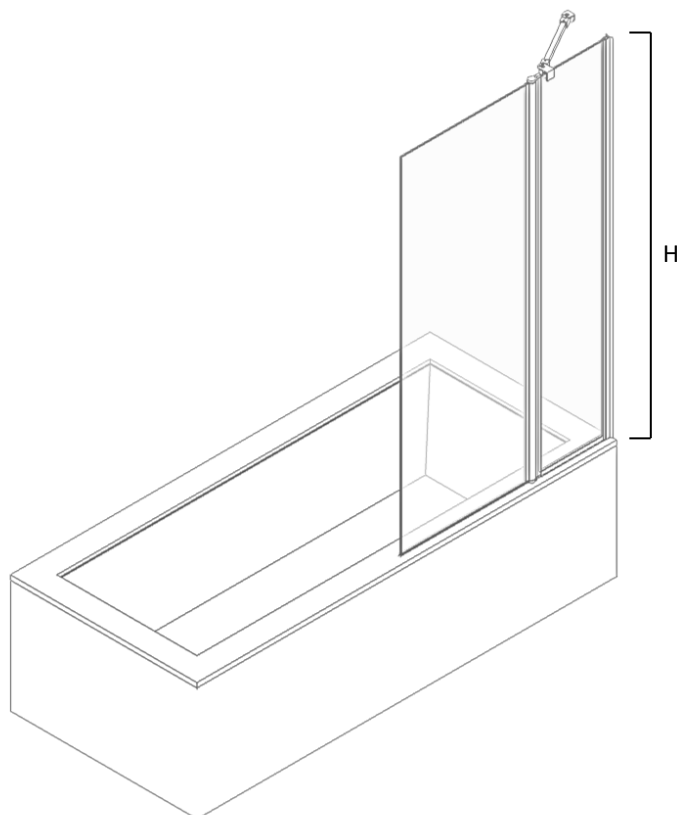

ESTETICO PLUS A+B (mm)	B (mm)	H (mm)
70EST+	695-703	200 1500
80EST+	795-803	300 1500
90EST+	895-903	300 1500
100EST+	995-1003	400 1500
110EST+	1095-1103	400 1500
120EST+	1195-1203	500 1500



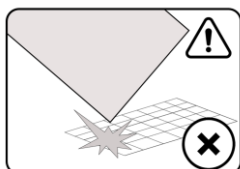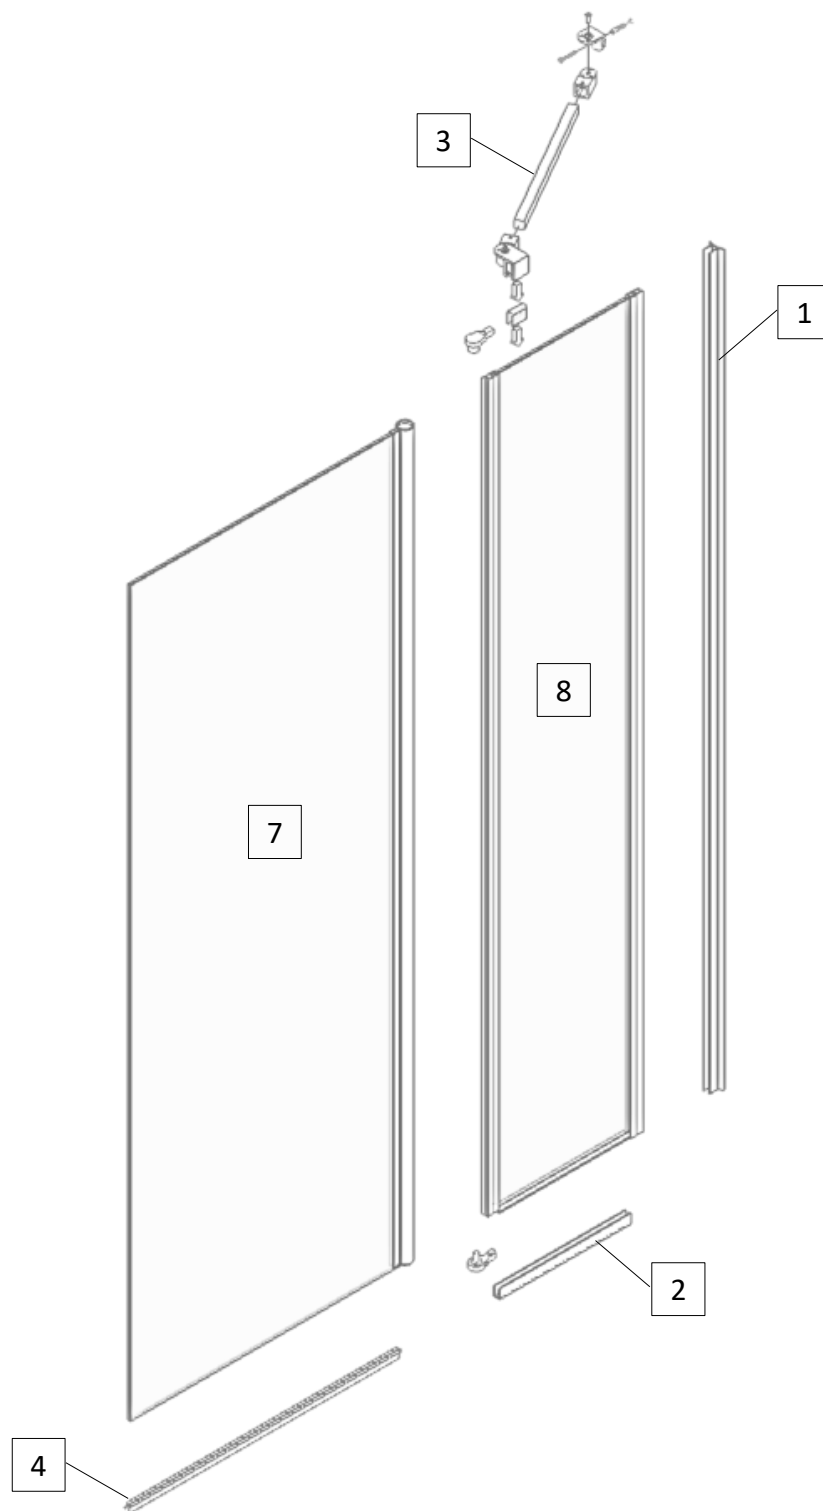

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

