



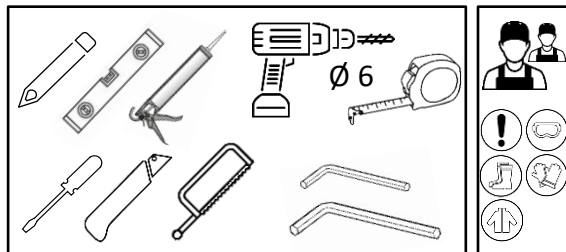


RANIA


Dužas sienas montāžas instrukcija

Инструкция по монтажу душевой стены


Shower wall installation instructions





1		ALU-U-CON150	1
2		U-SC22.500-ALCH	1
3		3,5x35 SK1SET Ø 6	4
4		6 mm Safety Glass + PROFILE	1

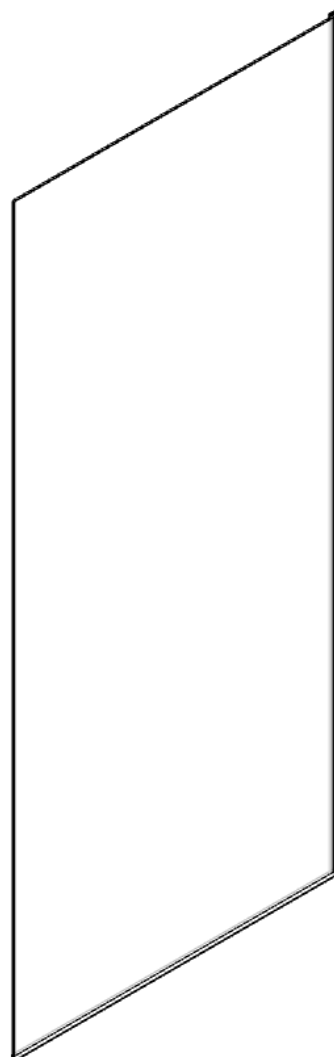

RANIA	A (mm)	H (mm)
70RAN	690-700	2000
80RAN	790-800	2000
90RAN	890-900	2000

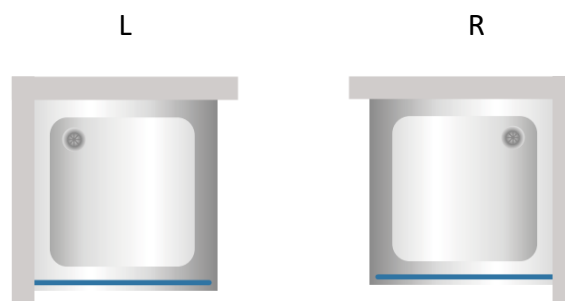

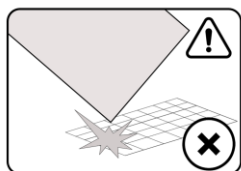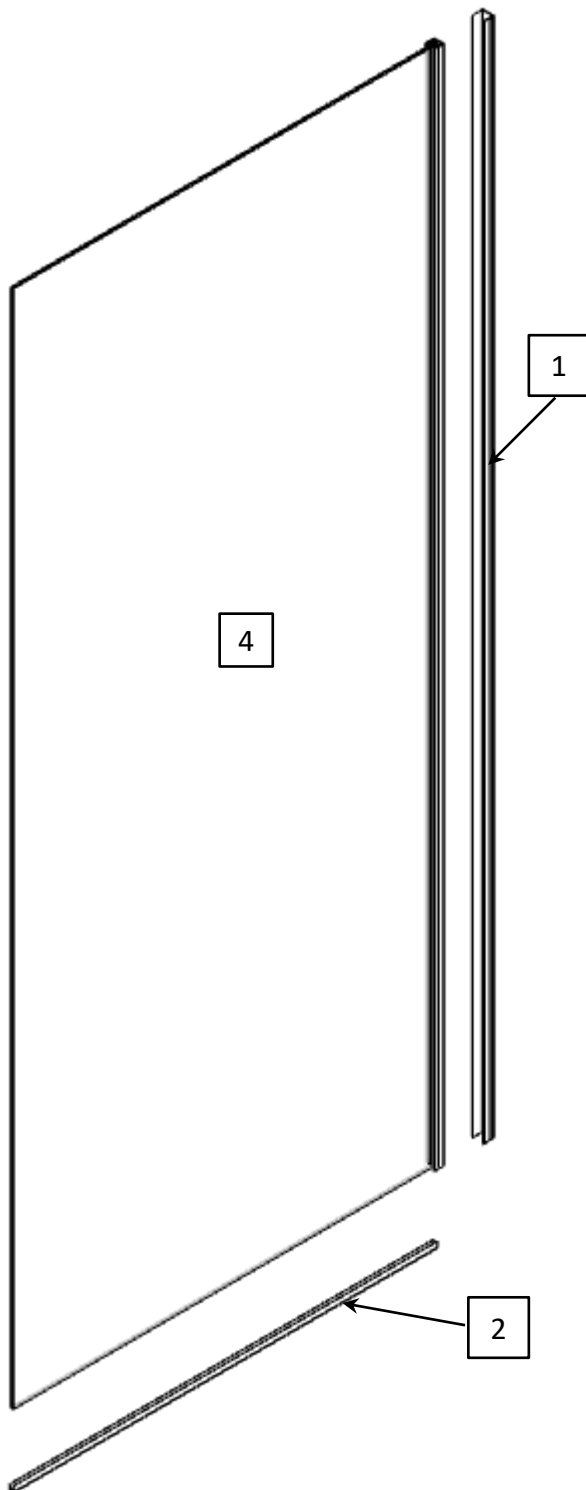

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

