



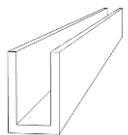
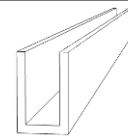


CONFORTO COR BLACK


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены


Shower wall installation instructions


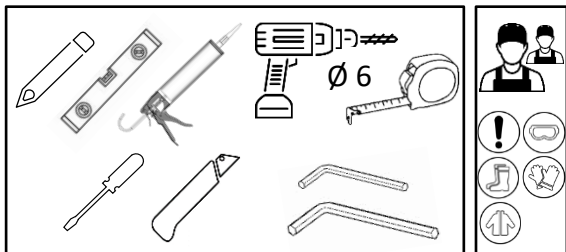


1		SU45CH + SK2SET	1
2		PAL-01	1
3		PAL-01B	1
4		3,5X35 SK1SET	1
5		8 mm Safety Glass	1

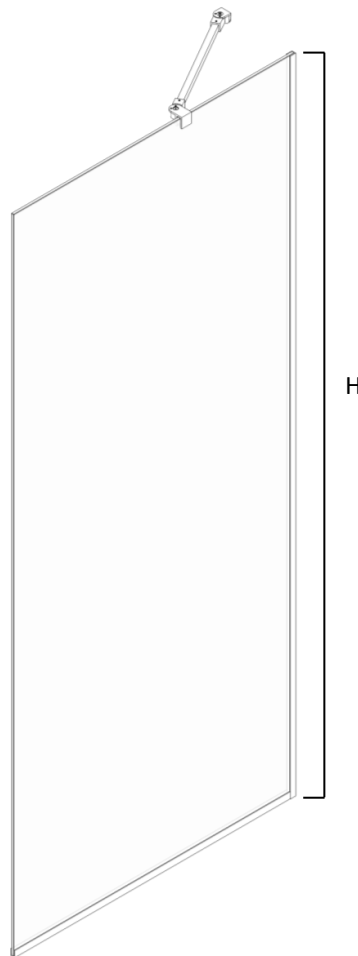

CONFORTO COR BLACK	A (mm)	H (mm)
60CON_CB	568-573	1988
70CON_CB	668-673	1988
80CON_CB	768-773	1988
90CON_CB	868-873	1988
100CON_CB	968-973	1988
110CON_CB	1068-1073	1988
120CON_CB	1168-1173	1988

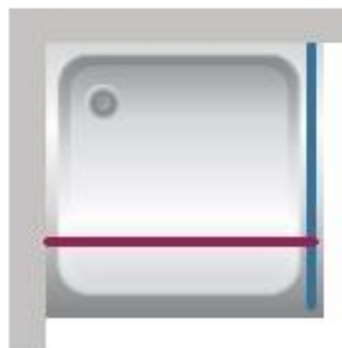

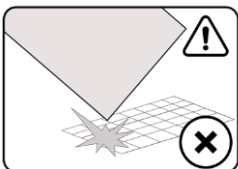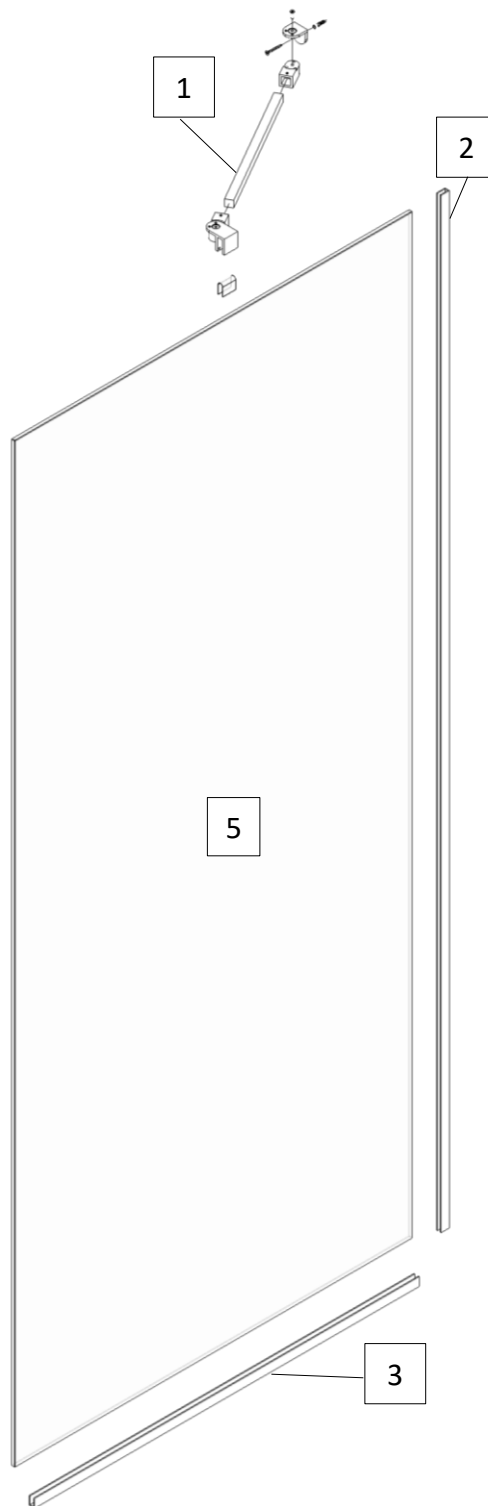

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

