


# ESTETICO


## Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены

Bath screen installation instructions


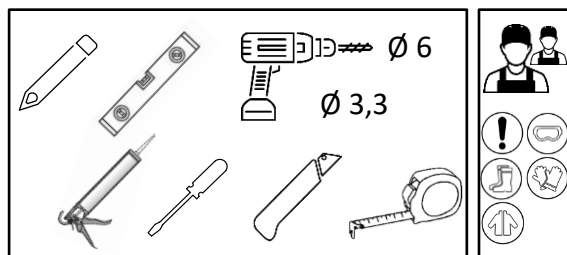


1		VIRA15CH	1
2		R1656715	1
3		3,5X35 4K1SET	1
4		3,5x13 2K2SET	1
5		6 mm Safety Glass + VIRA15CH	1

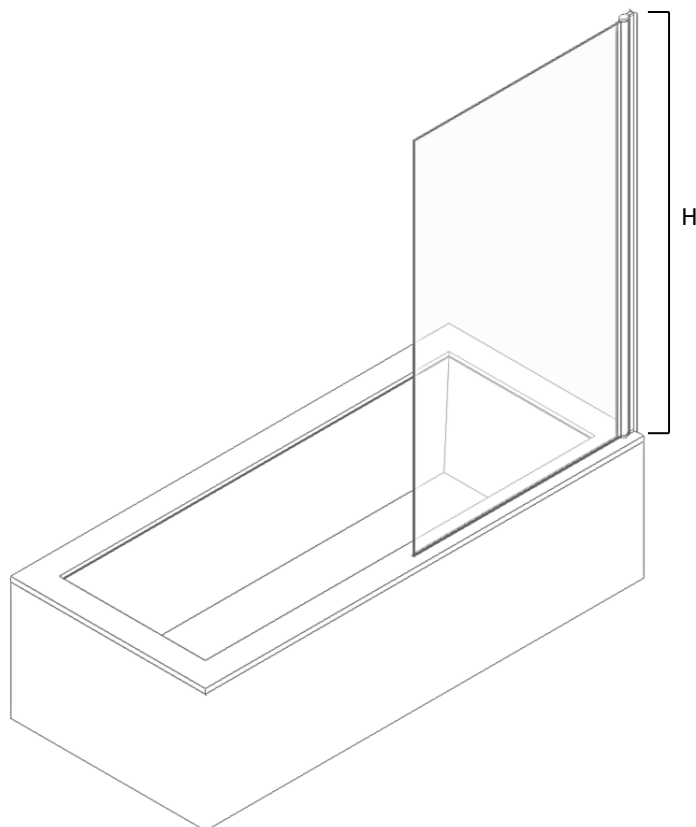

ESTETICO	A (mm)	H (mm)
70EST	698-703	1500
80EST	798-803	1500
90EST	898-903	1500



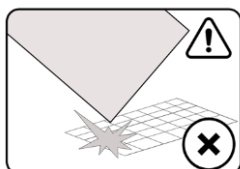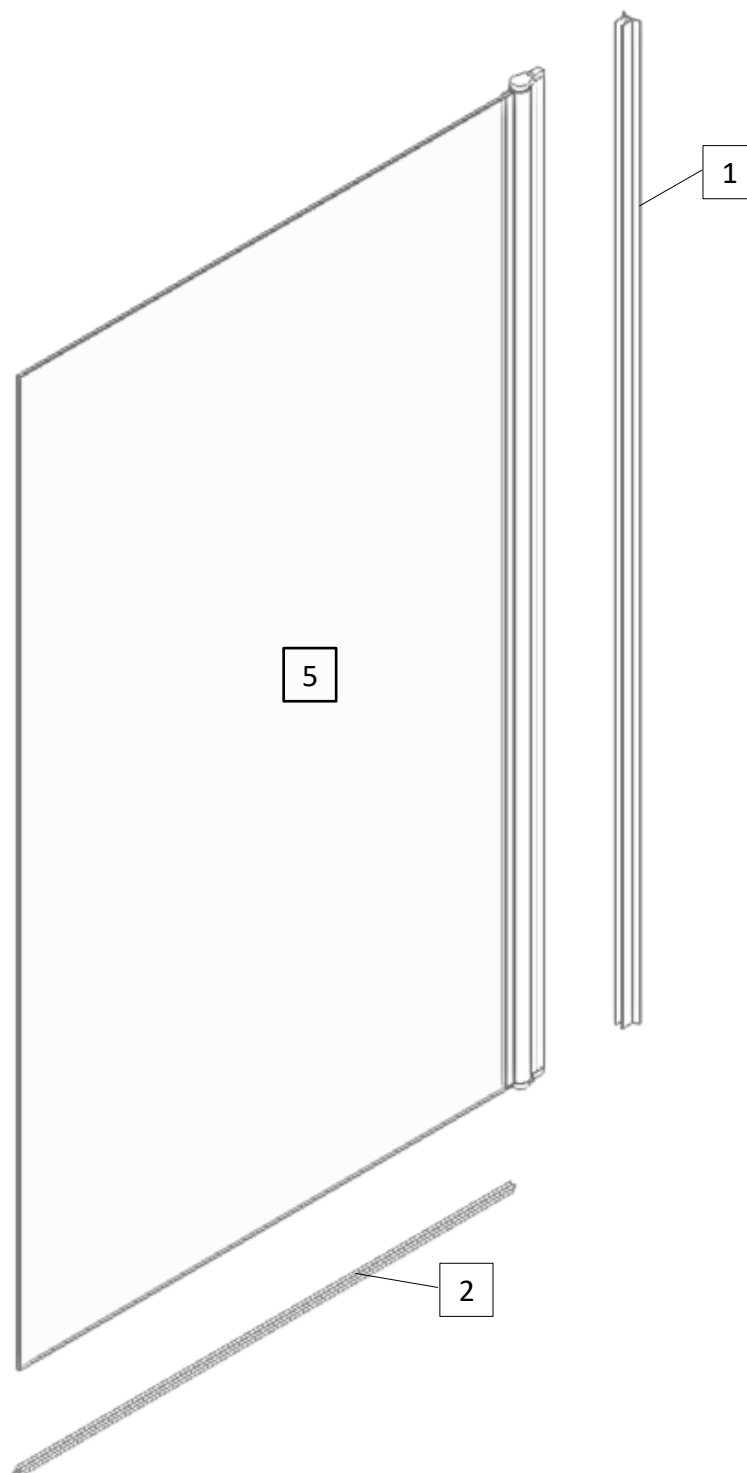

**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

