


FARFALLA PLUS


Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери


Shower door installation instructions


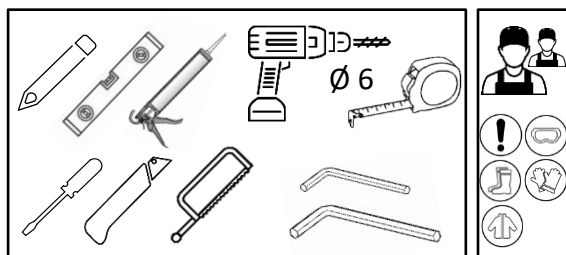


1.		PAL-01	1
2.		PAL-01B	1
3.		SU45CHKANT+SK2SET1	1
4.		GC-2032	1
5.		MF-43MAGN	1
6.		MF-42/8-ER	1
7.		R1653308	1
8.		SC-ALU8X9NEW	1
9.		8192ZN5-BS	2
10.		NLO-ZD-2856	1
11.		3,5x35 SK1SET; Ø 6	2
12.		8 mm Safety Glass	1
13.		8 mm Safety Glass	1

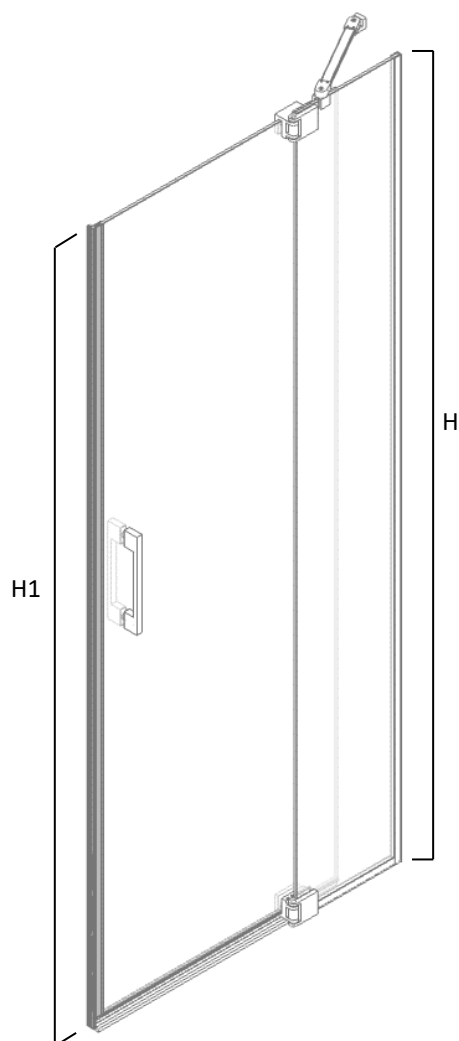

FARFALLA PLUS	A + B (mm)	B (mm)	H (mm)	H1 (mm)
70FAR+	650-710	200	2000	1978
80FAR+	750-810	200	2000	1978
90FAR+	850-910	300	2000	1978
100FAR+	950-1010	300	2000	1978
110FAR+	1050-1110	400	2000	1978
120FAR+	1150-1210	500	2000	1978

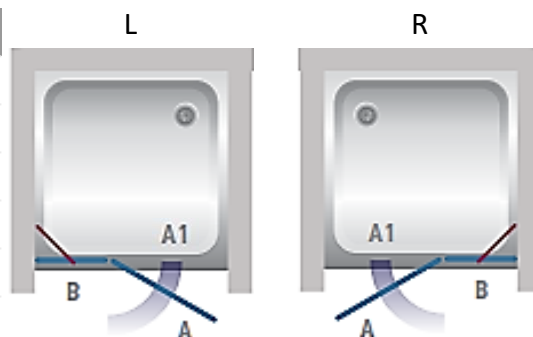

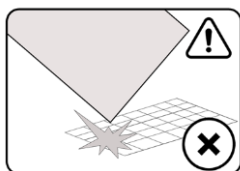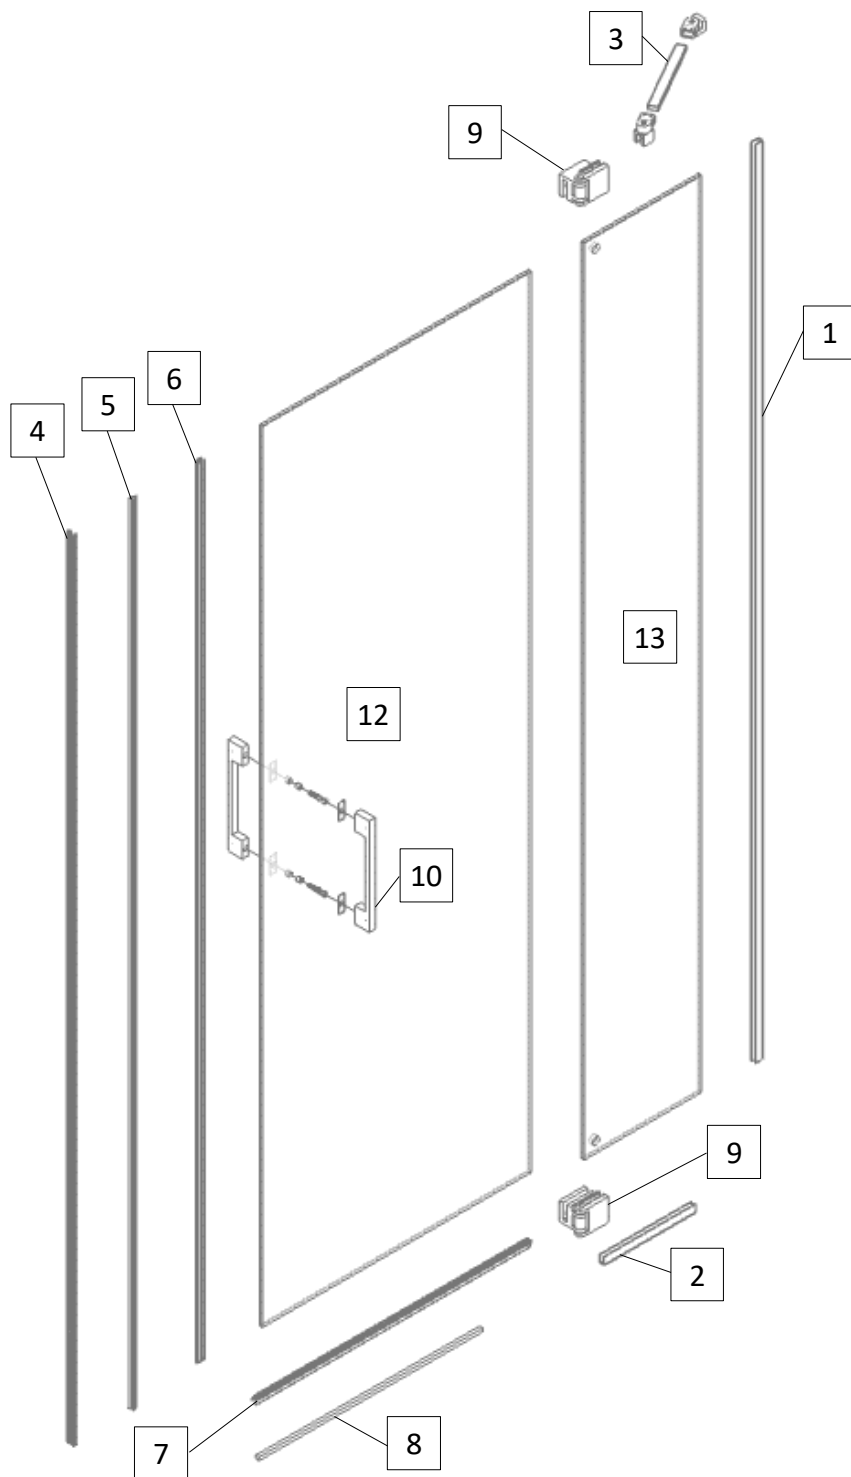

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

