


FRESCO


Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены

Bath screen installation instructions


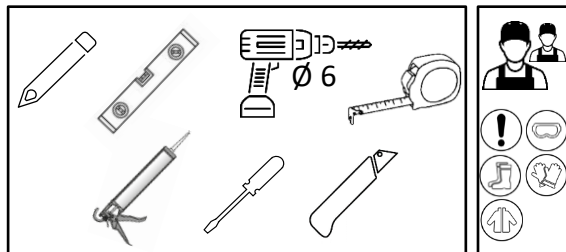


1		40021PS - 009	1
2		400211PS-013	1
3		WGLA6801CP + SK1SET	2
4		8 mm Safety Glass	1

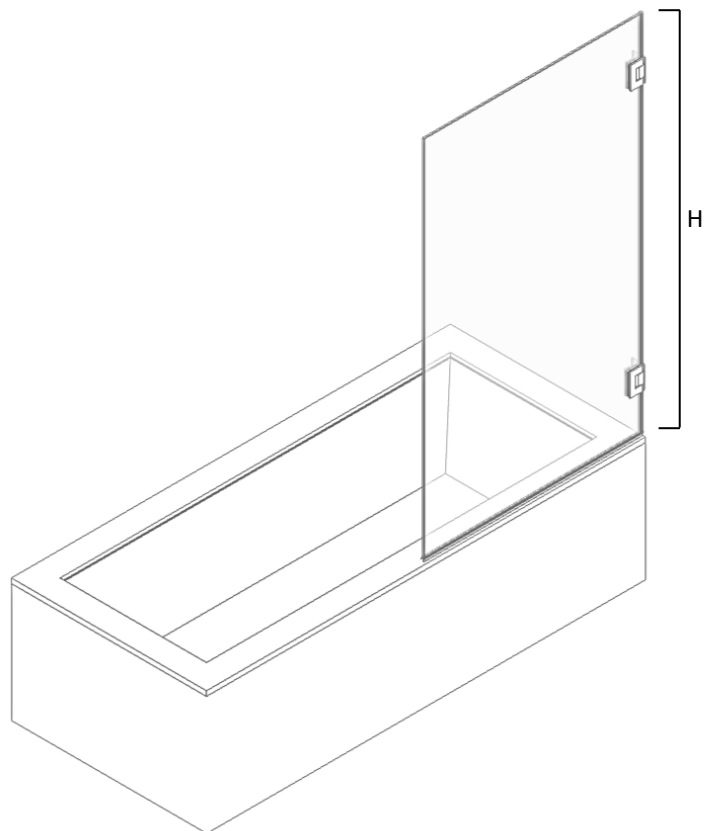

FRESCO	A (mm)	H (mm)
70FRE	698-703	1500
80FRE	798-803	1500
90FRE	898-903	1500



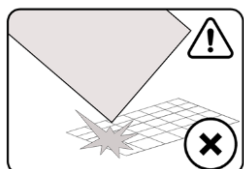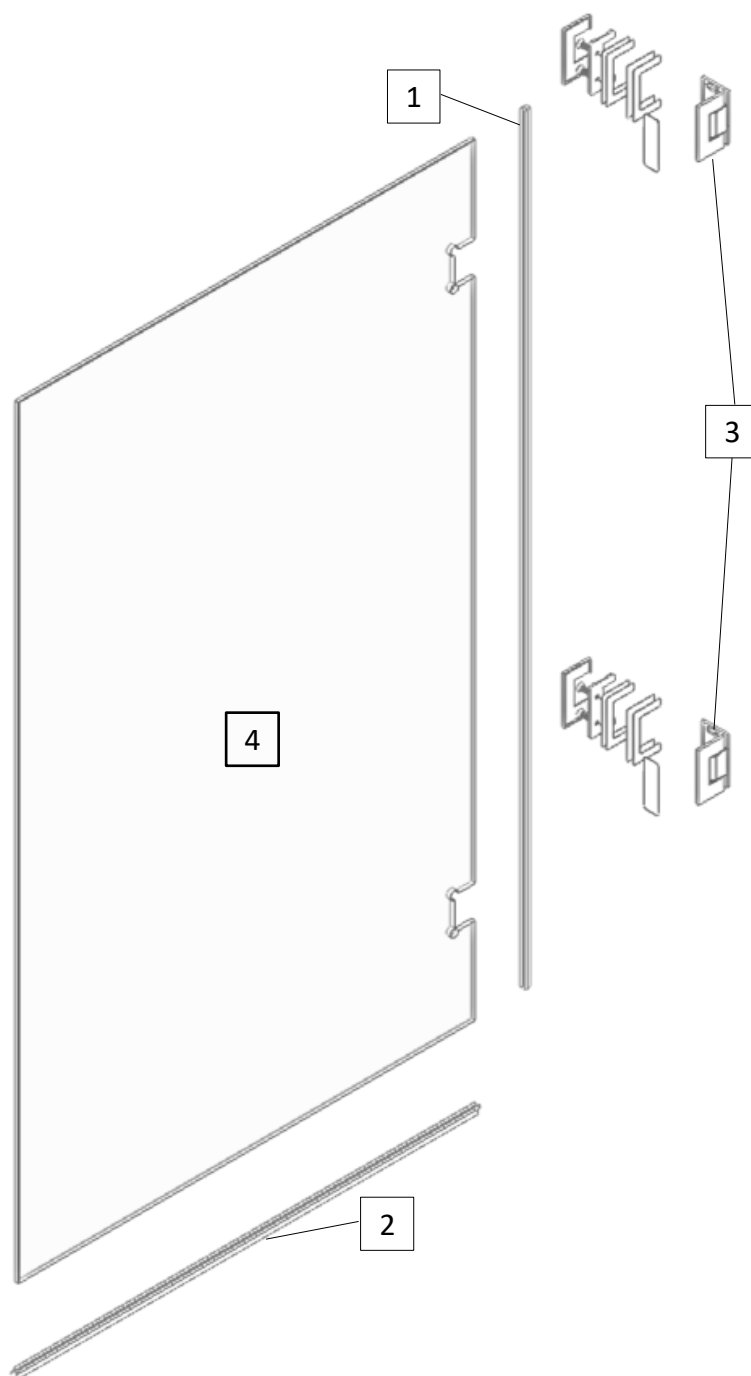

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

