


LISA



Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions


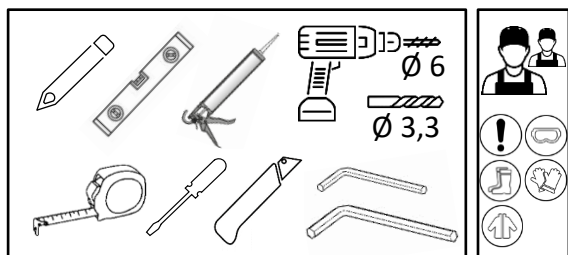


1.		VIRA20CH	1
2.		R1656715	1
3.		3,5x35 SK1SET Ø 6	1
4.		3,5x13 SK2SET	4
5.		6 mm Safety Glass	1

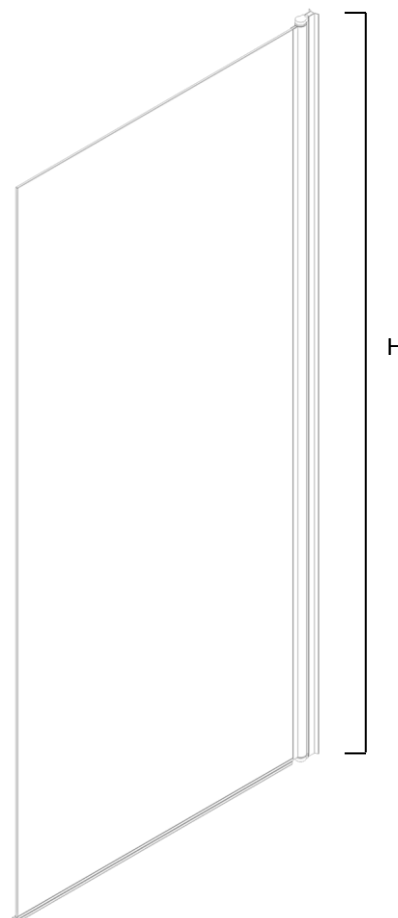

LISA	A (mm)	H (mm)
60LIS	568-573	1988
70LIS	668-673	1988
80LIS	768-773	1988
90LIS	868-873	1988












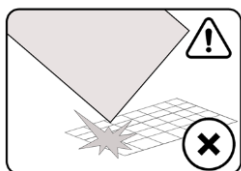
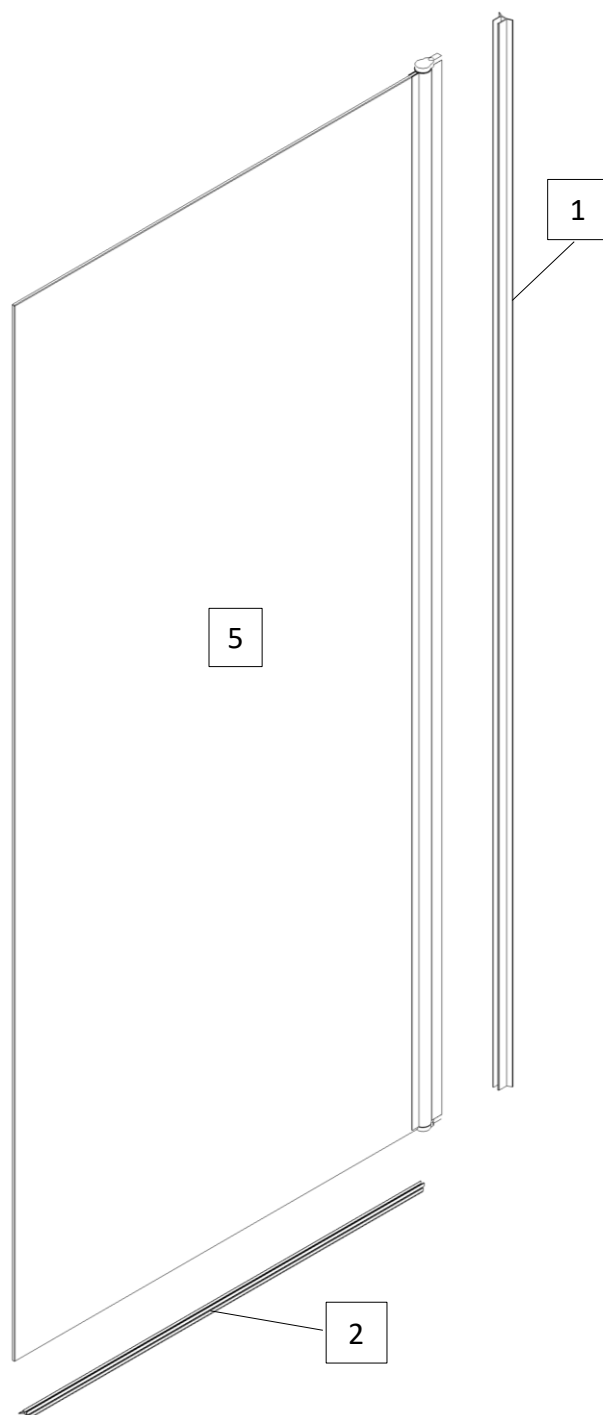


Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

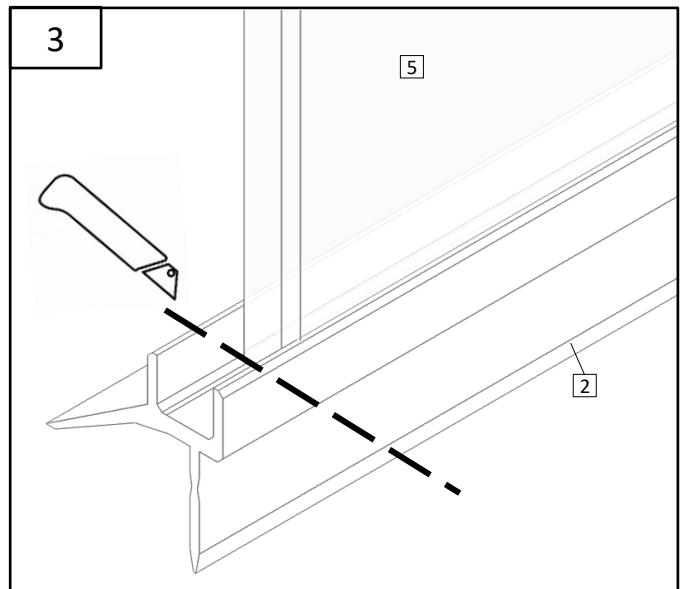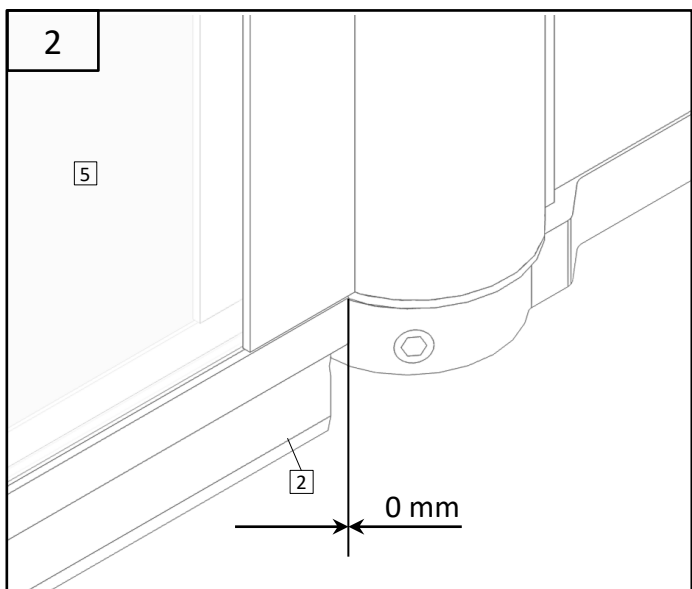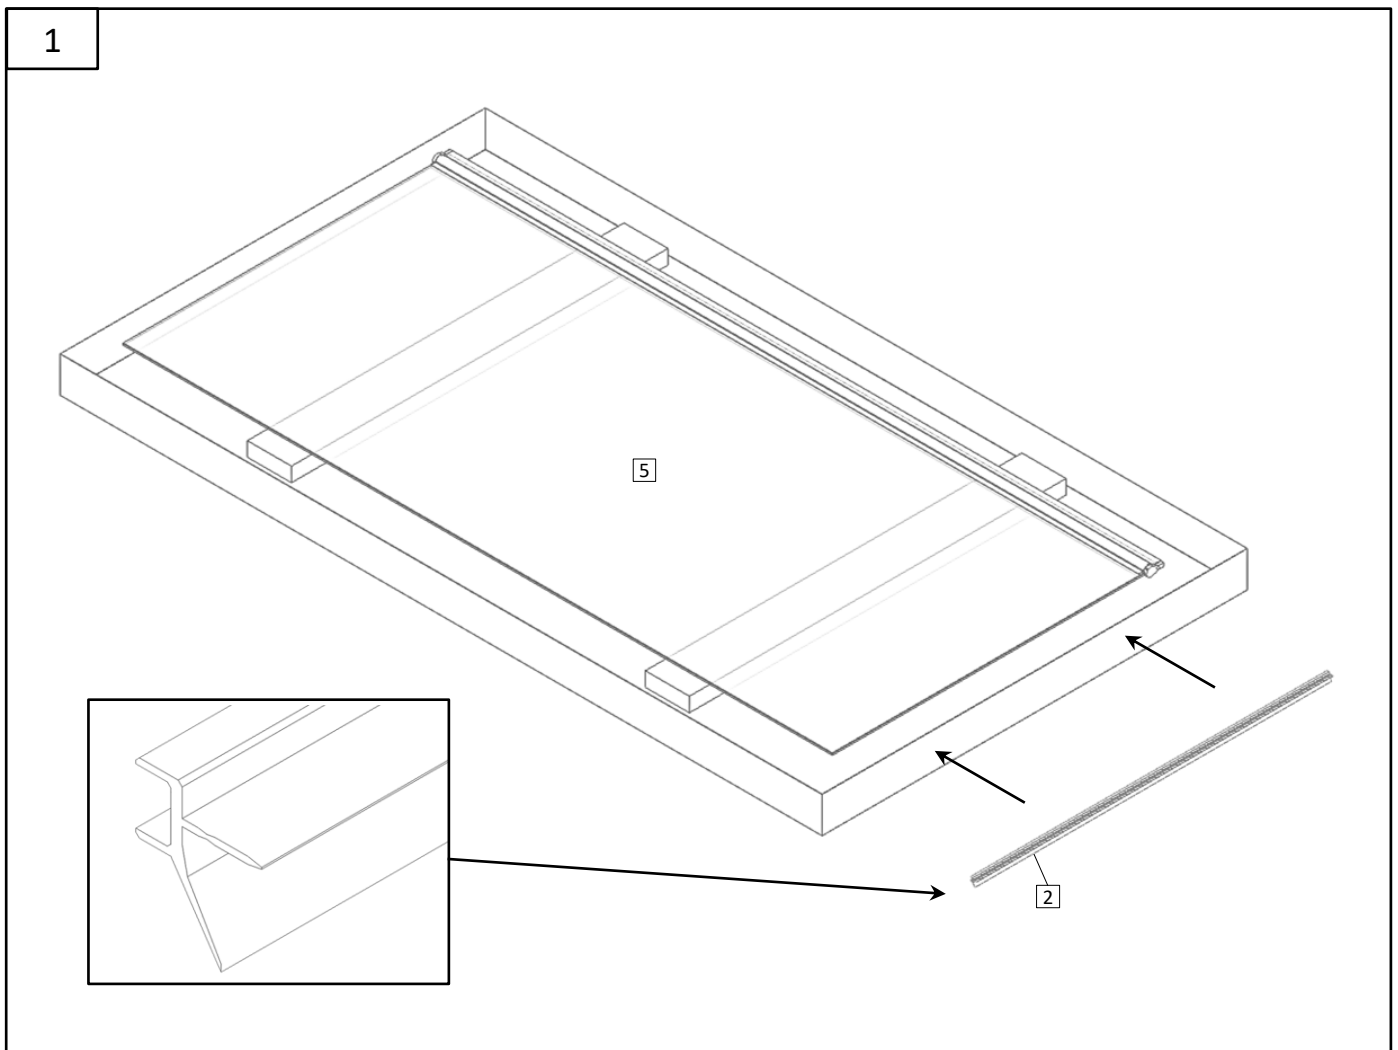

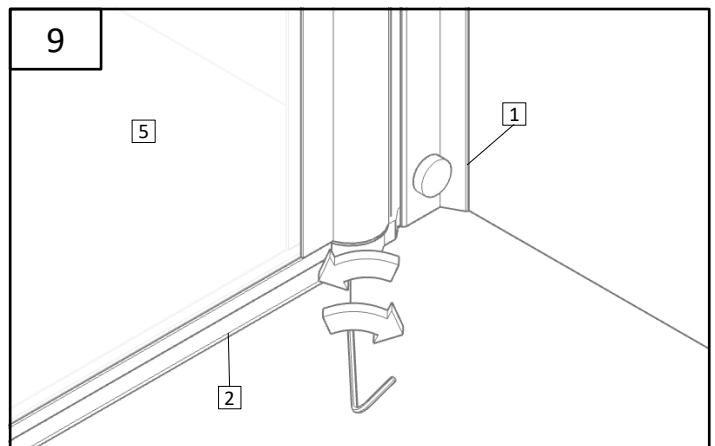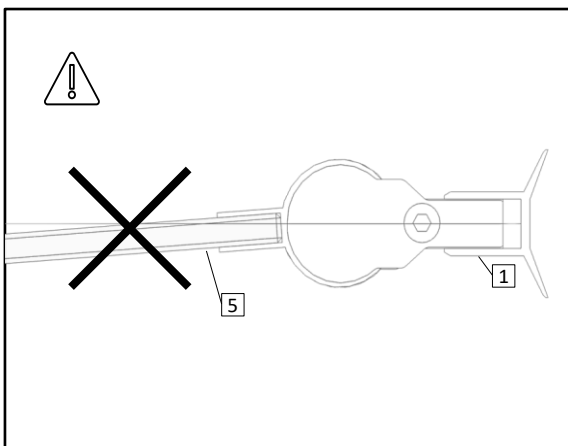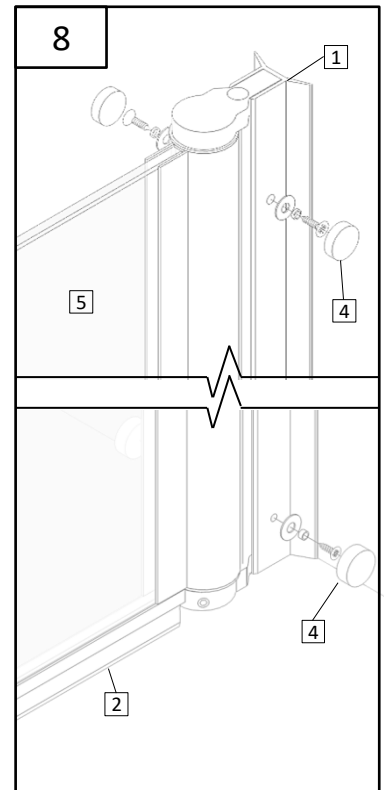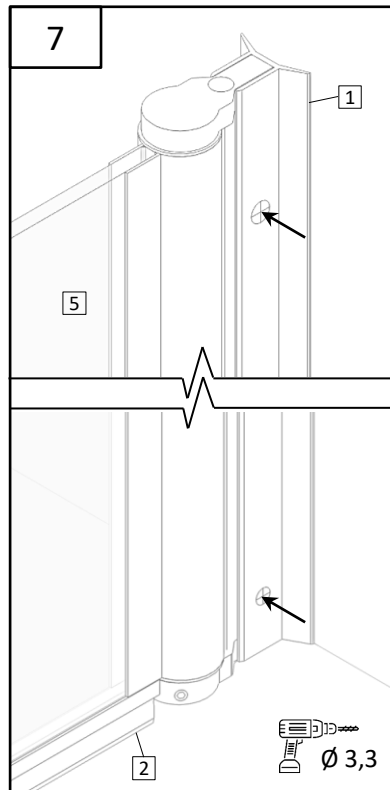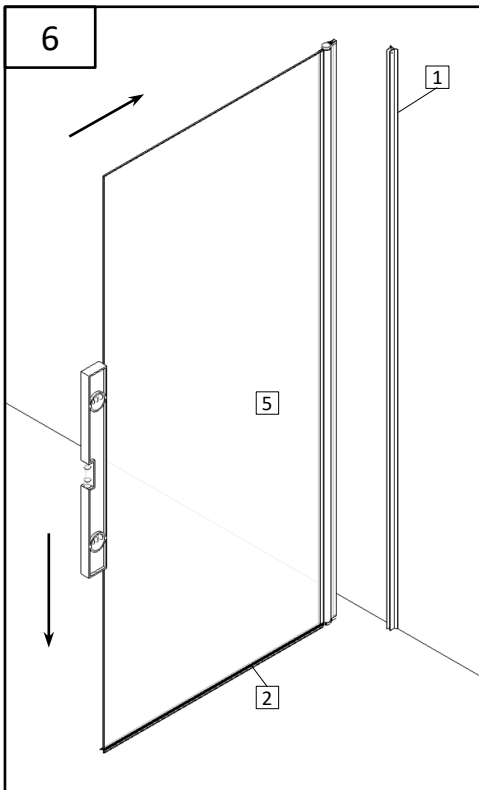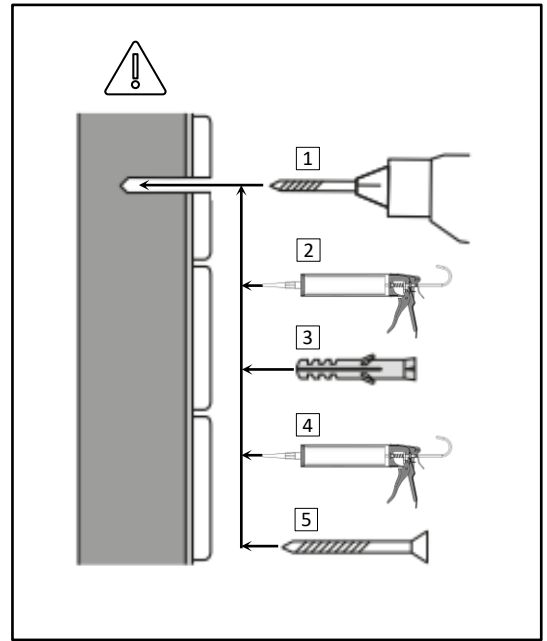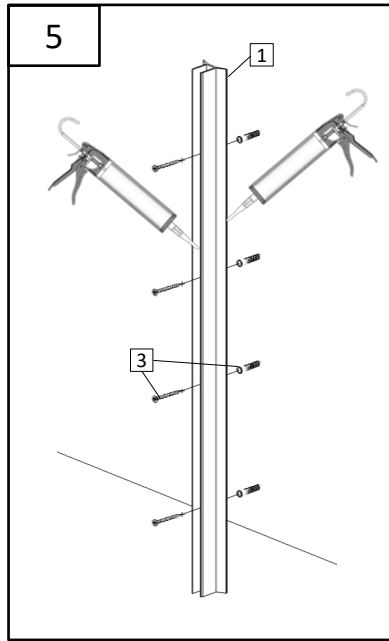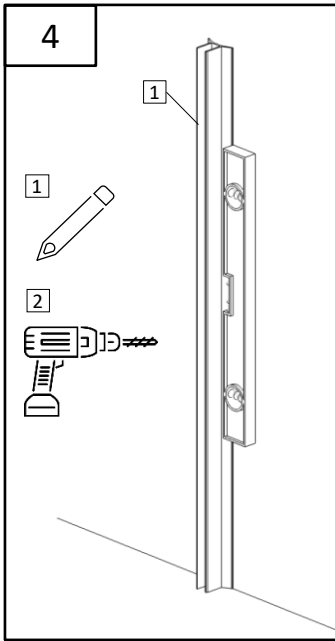

10



24 h

