



## Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions

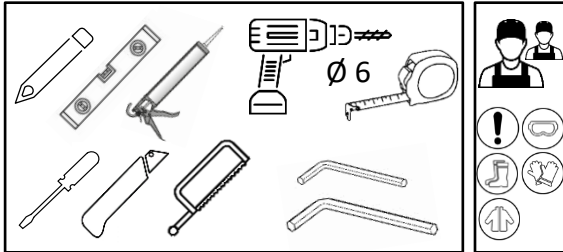



1.		DZT100CHR10X20 + SK2SET	1
2.		DZT100CHR10X20 - 1	1
3.		PAL-01	2
4.		PAL-01B	1
5.		PAL-01B-2	1
6.		PAL-01B-3	1
7.		PAL-01B-4	1
8.A		PGB-902	4
8.B		5213150	4
9.		BB 52 135 19	2
10.		3,5X35 SK1SET	2
11.		8mm Safety Glass	1
12.		8mm Safety Glass	1
13.		8mm Safety Glass	1
14.		8mm Safety Glass	1


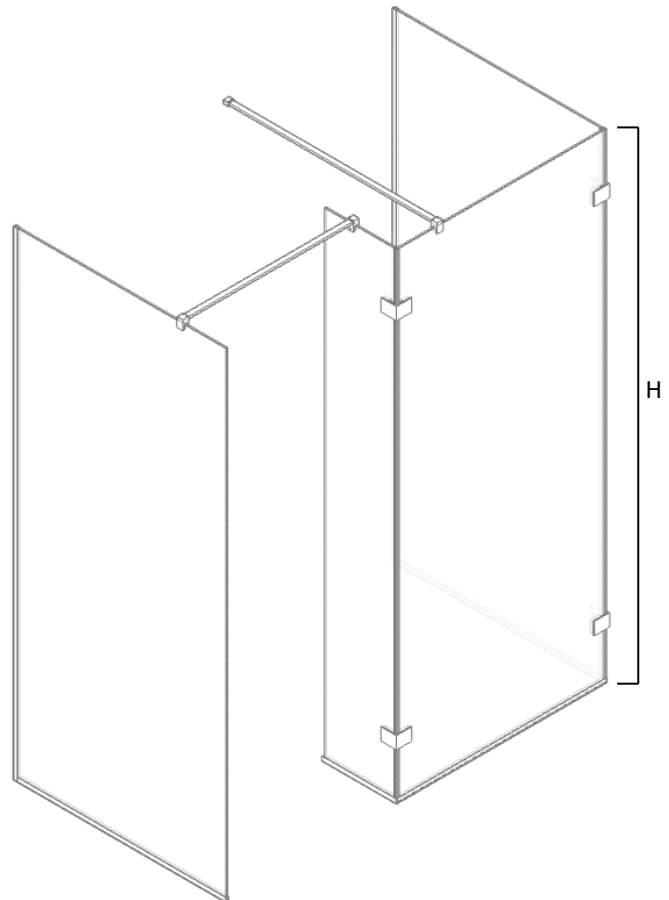


SEI	A (mm)	B (mm)	H (mm)
140_80SEI	1370-1400	768-783	1988
140_90SEI	1370-1400	868-883	1988
150_90SEI	1470-1500	868-883	1988
160_90SEI	1570-1600	868-883	1988
150_100SEI	1470-1500	968-983	1988
160_100SEI	1570-1600	968-983	1988

LEFT

RIGHT






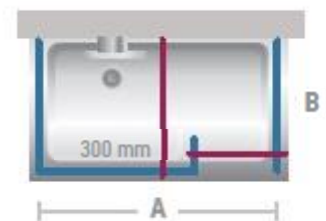
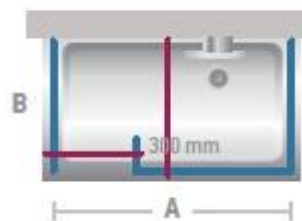




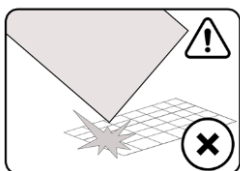
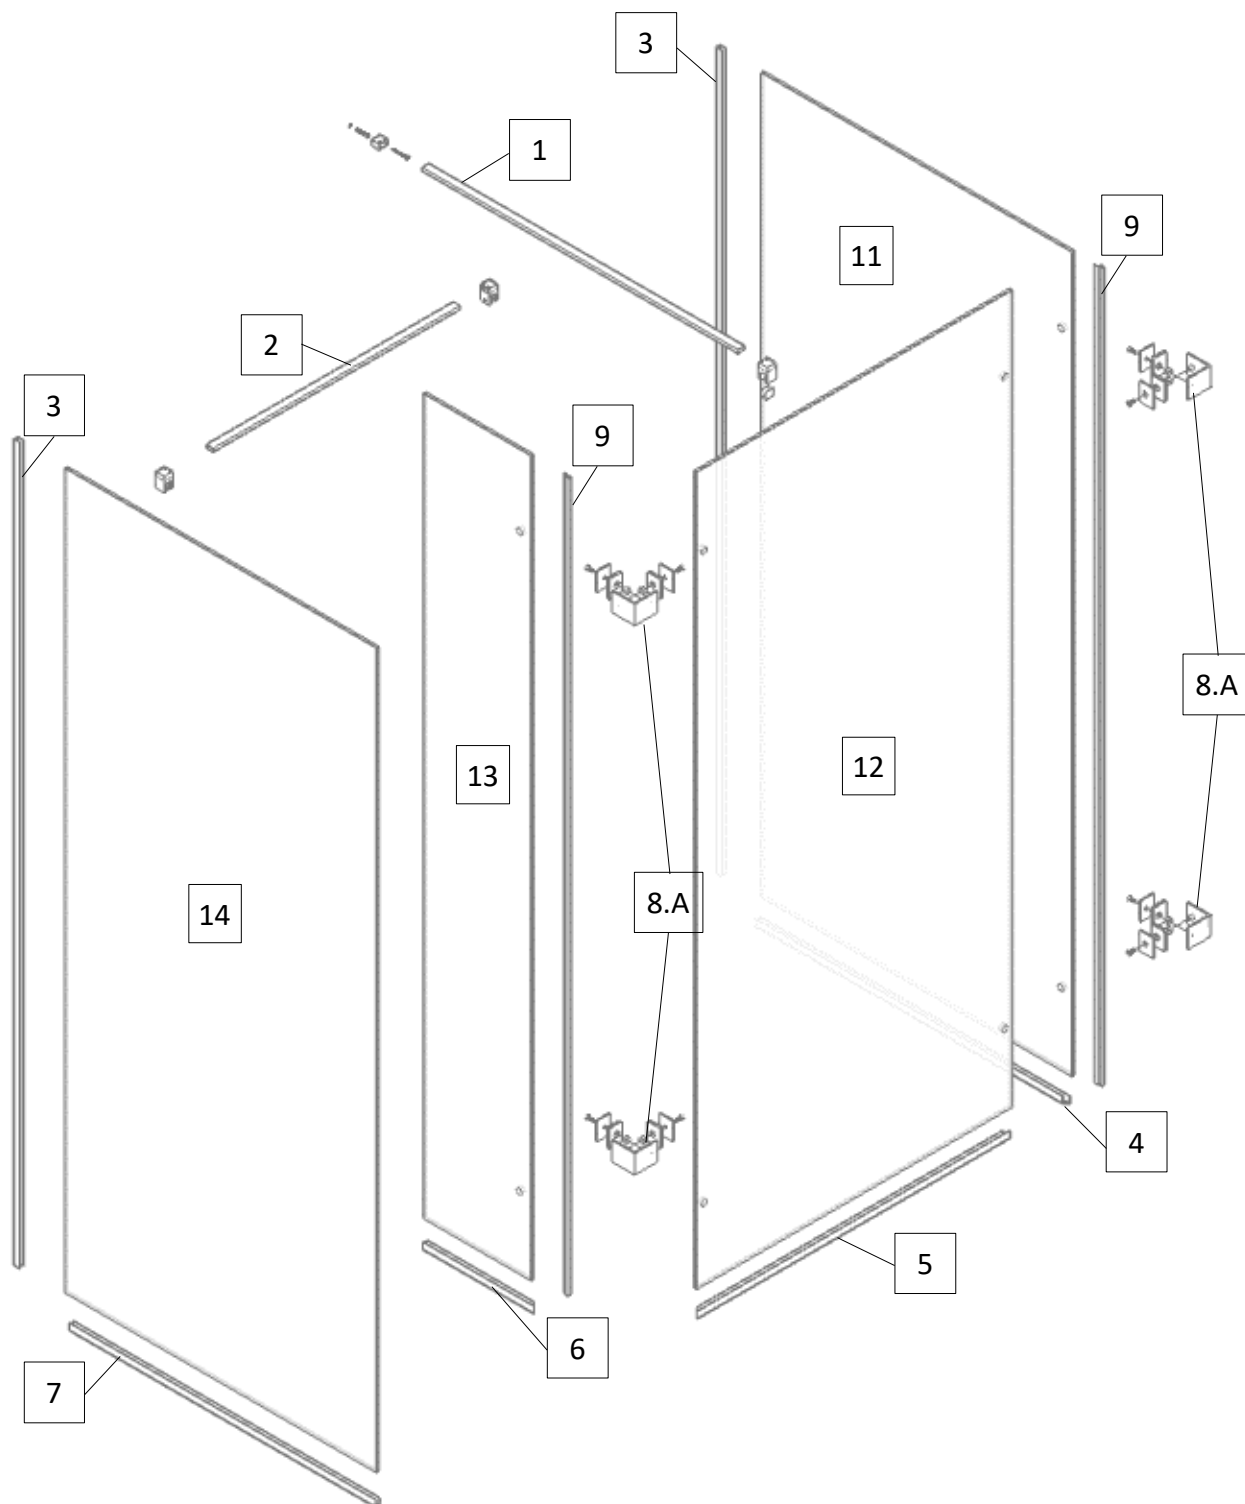




**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.





**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.





**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

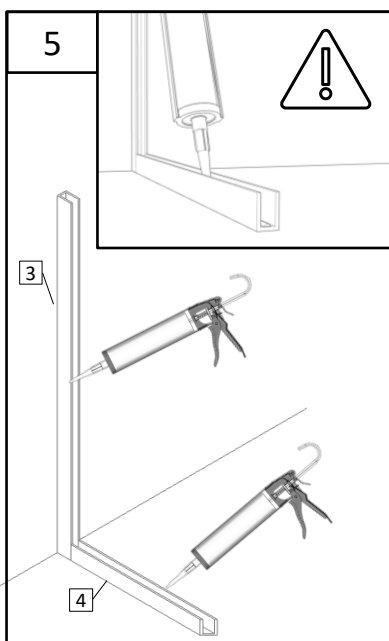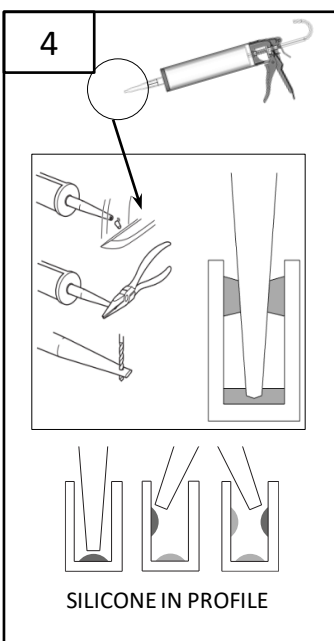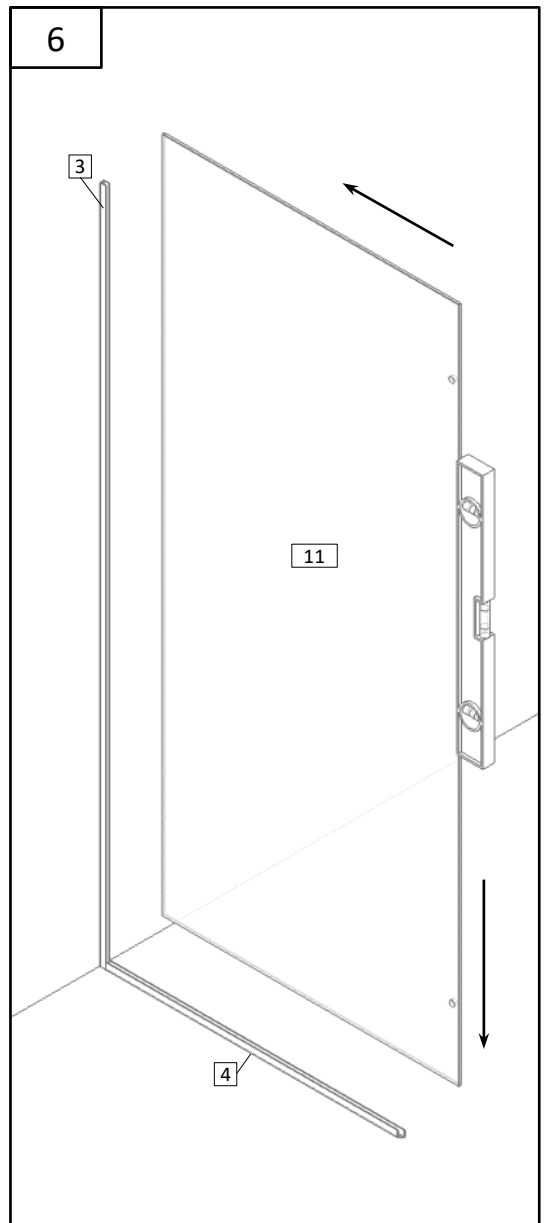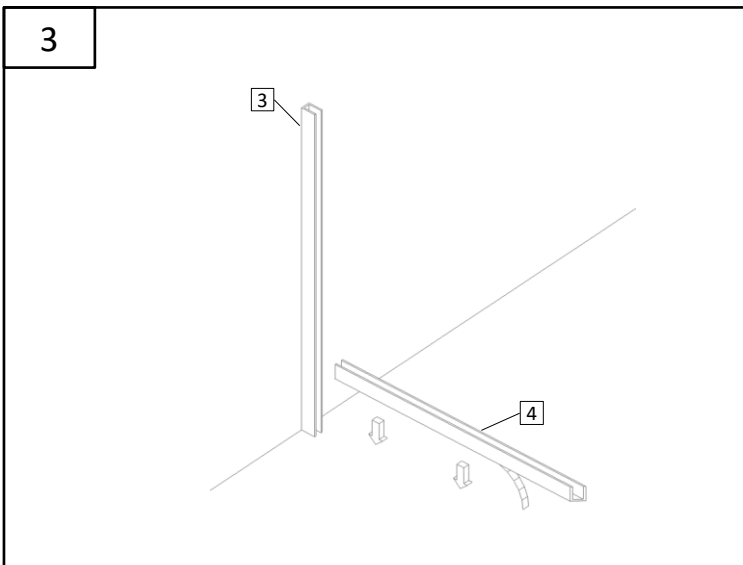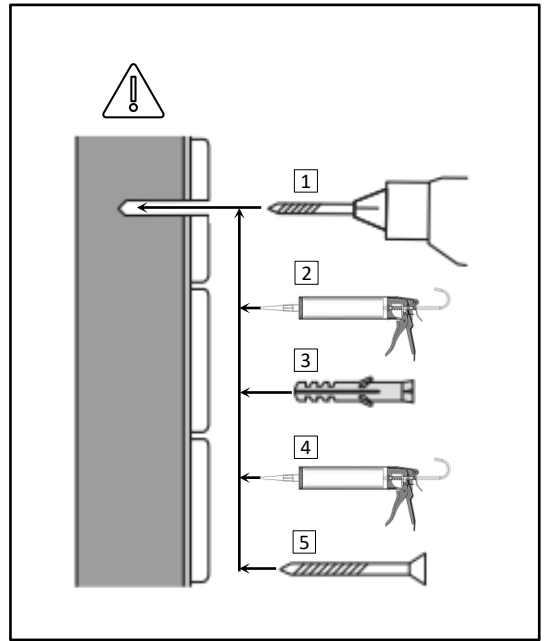
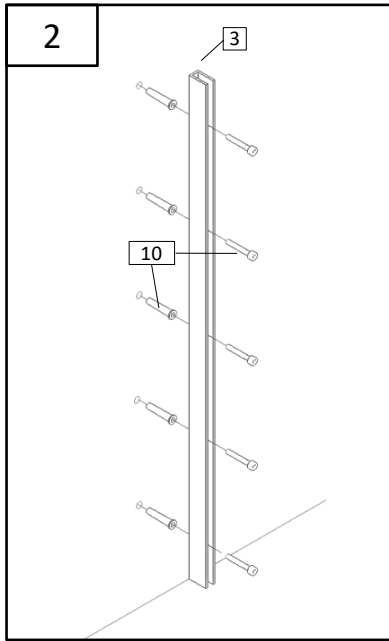
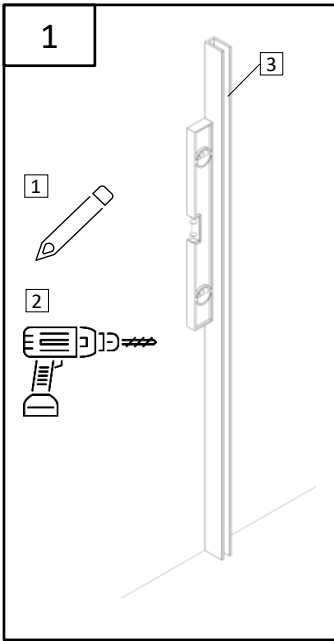


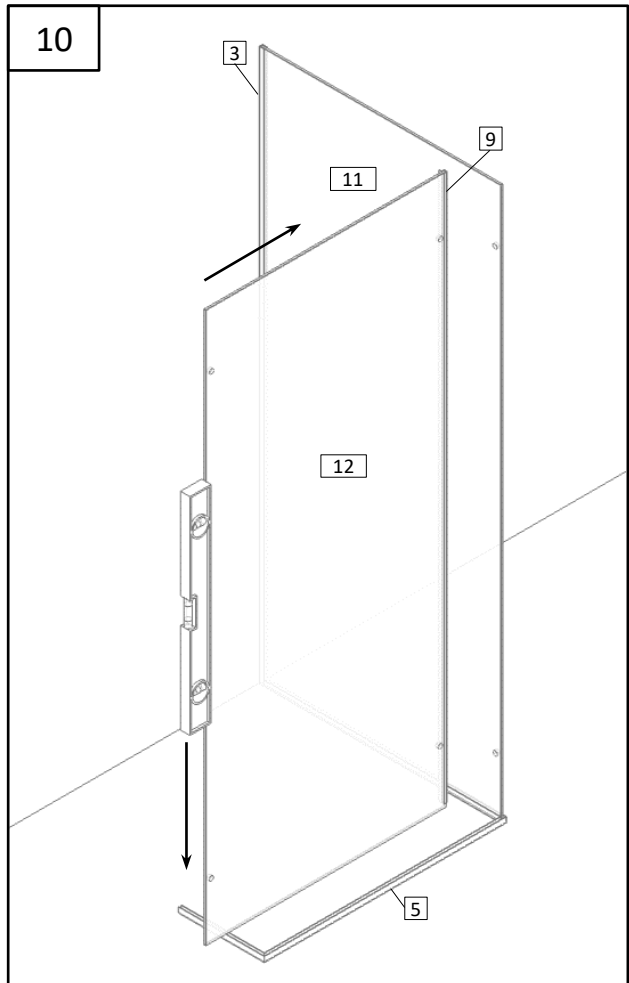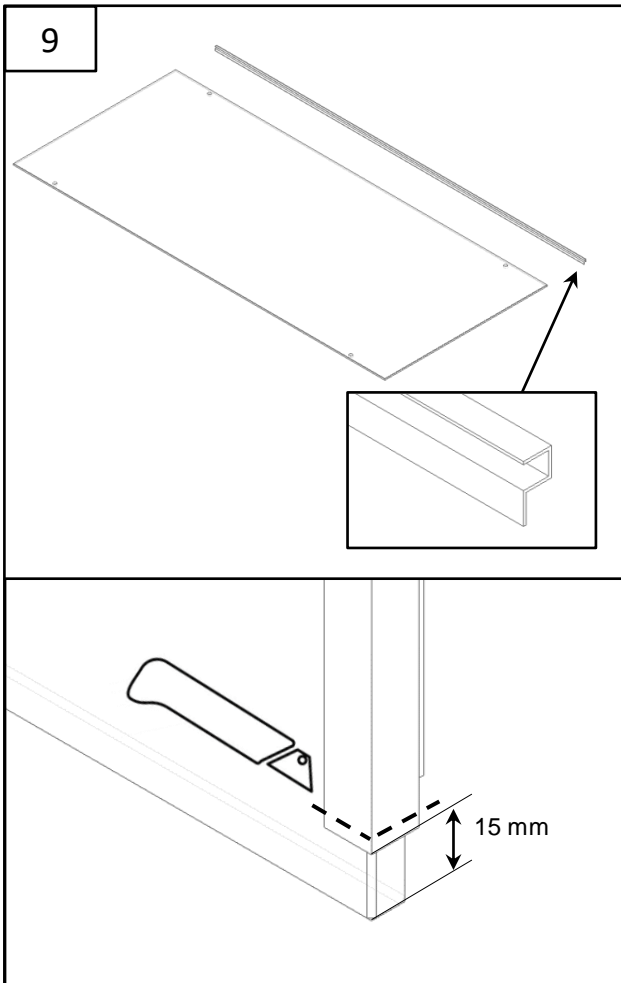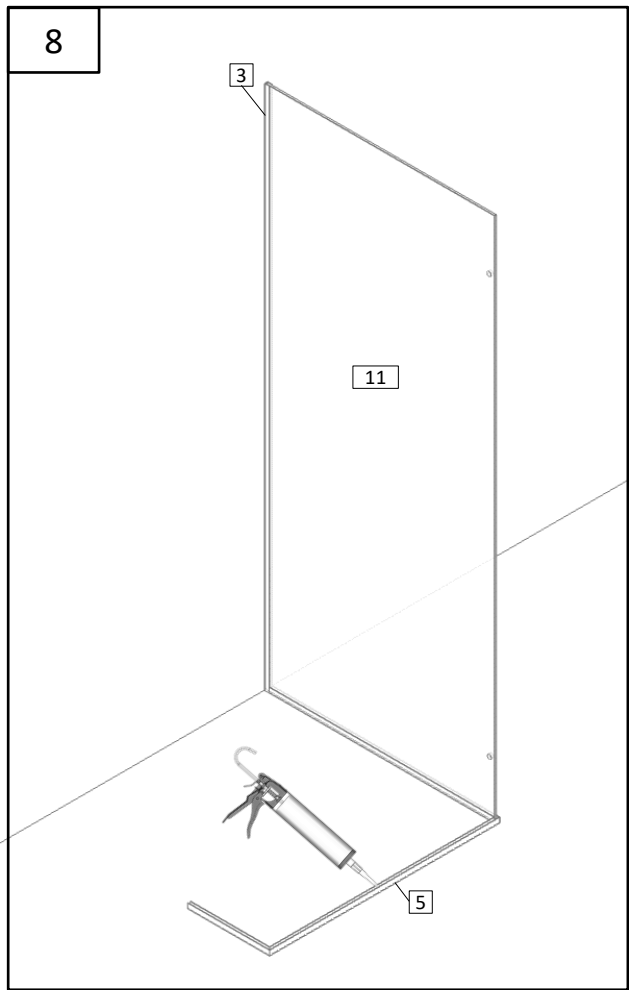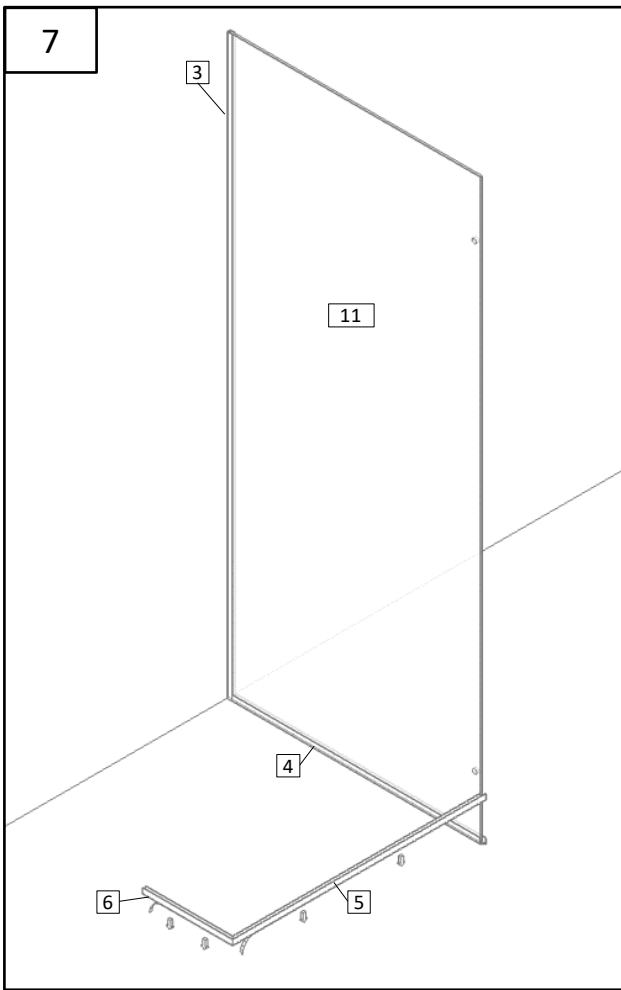







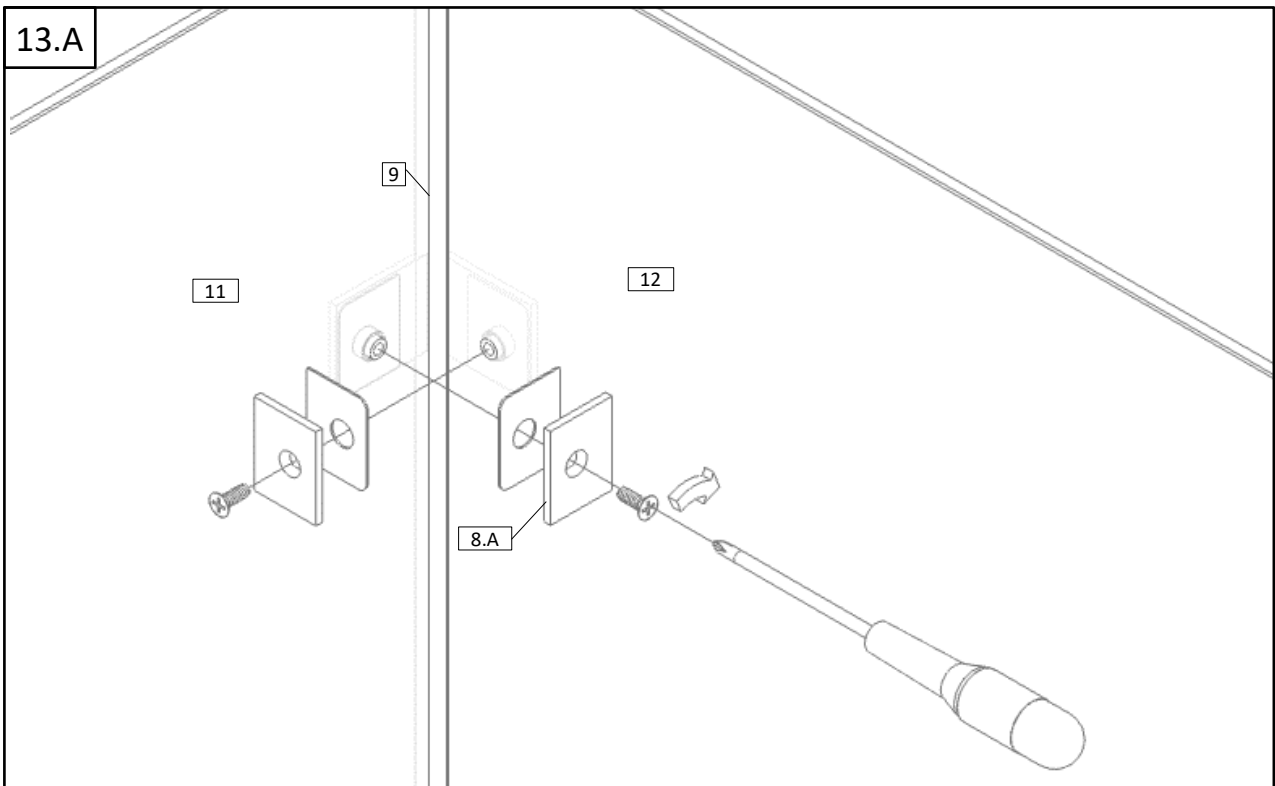
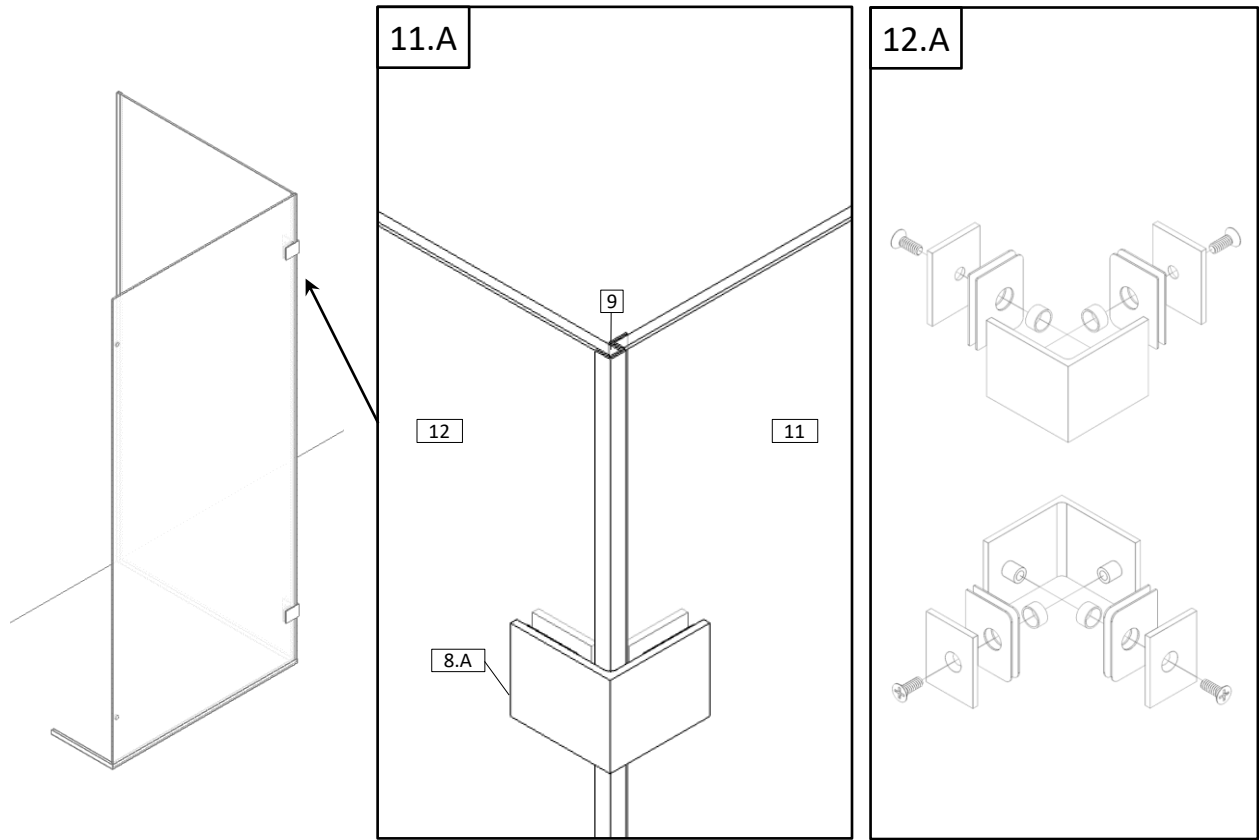





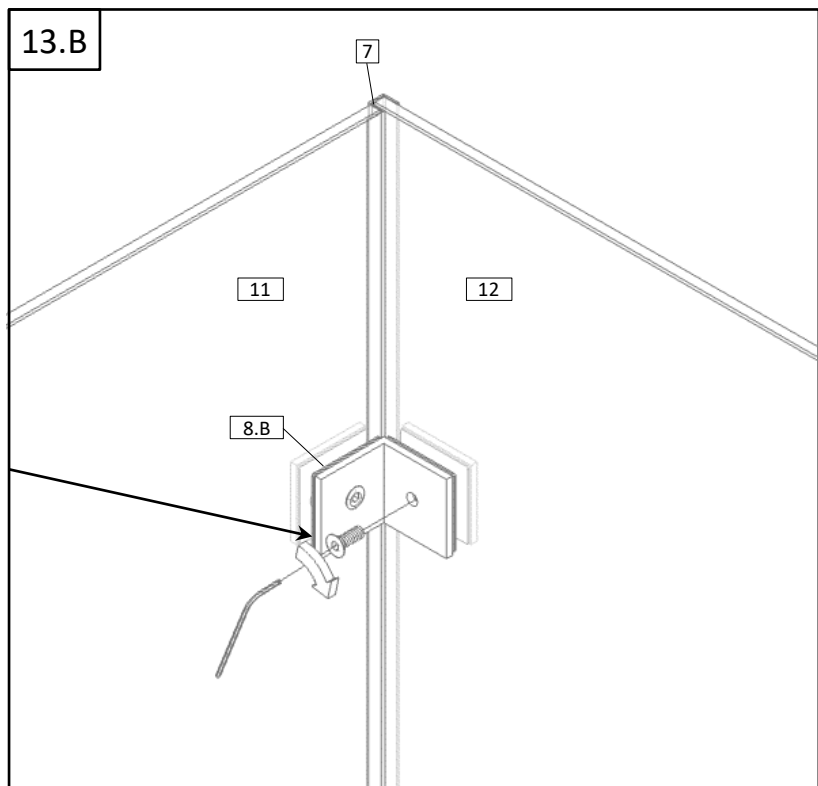
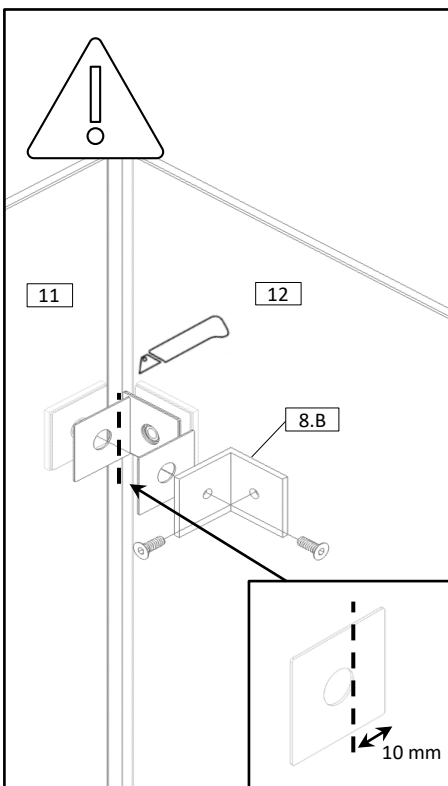
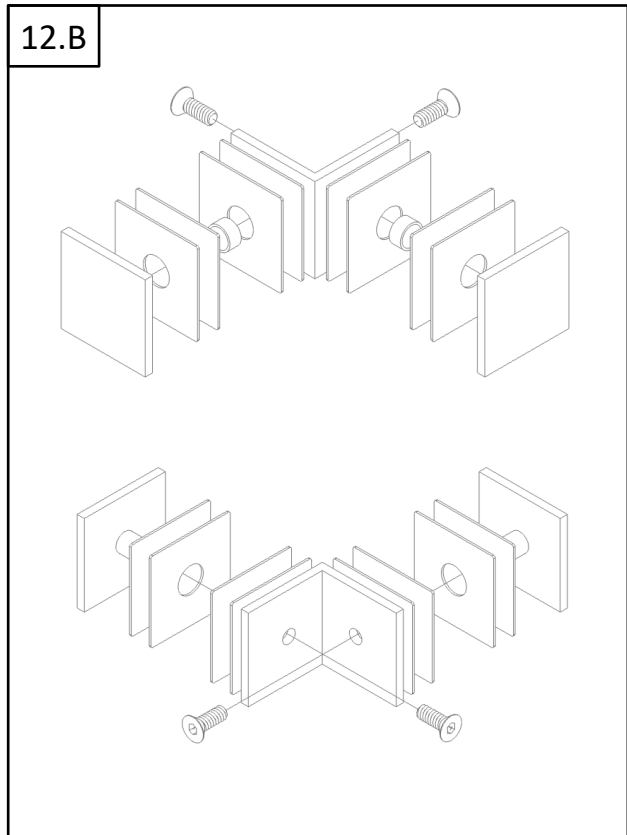
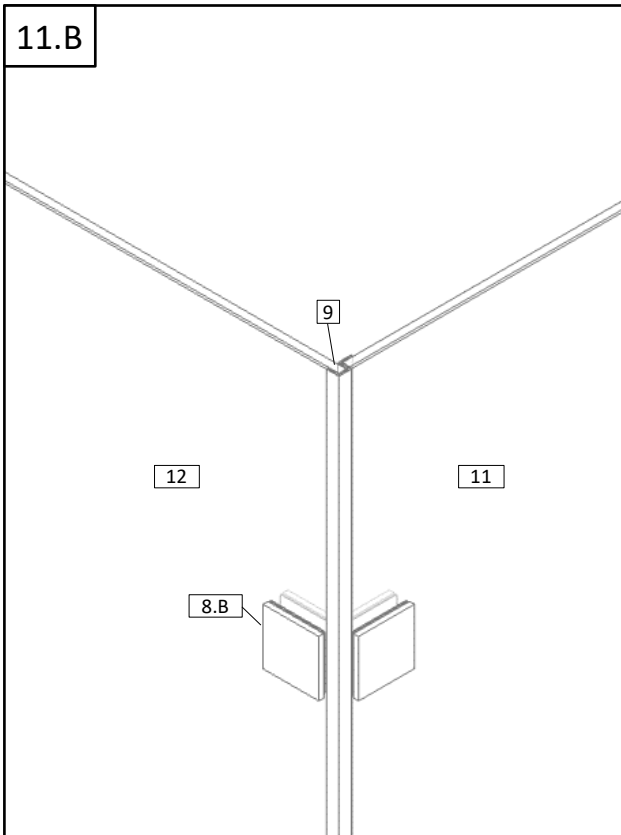





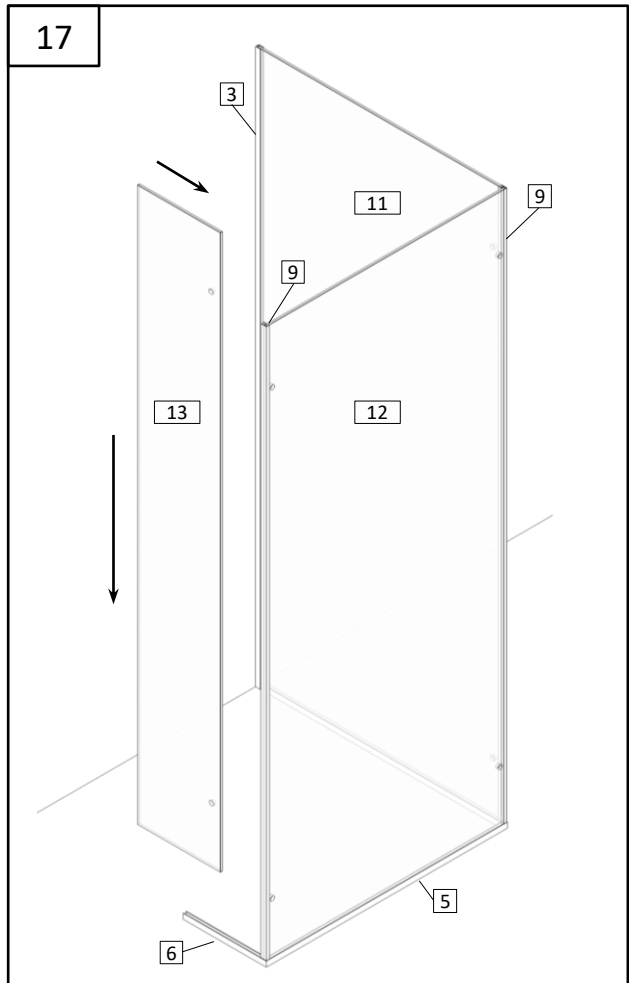
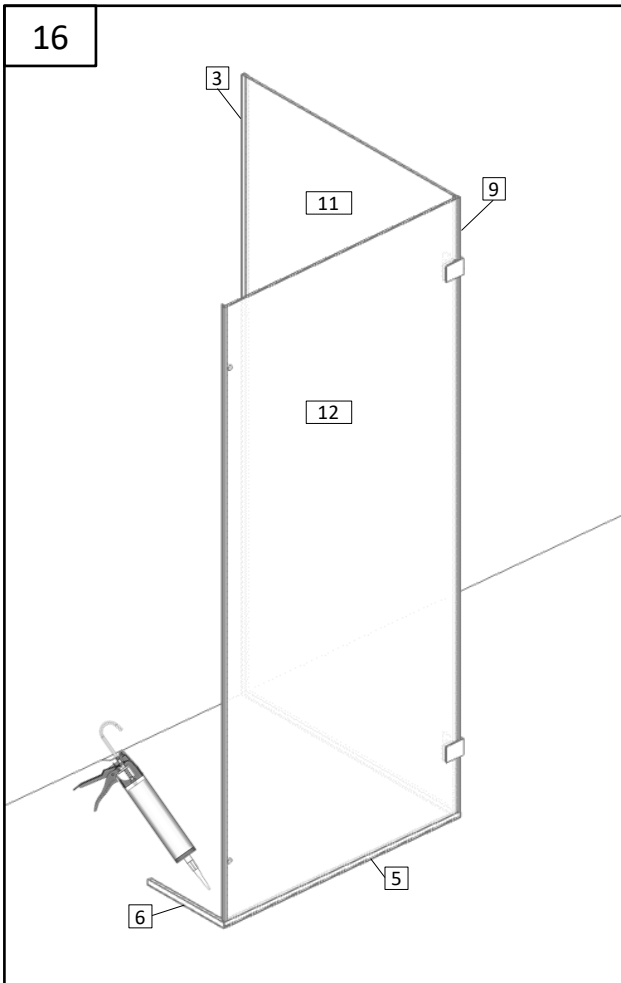
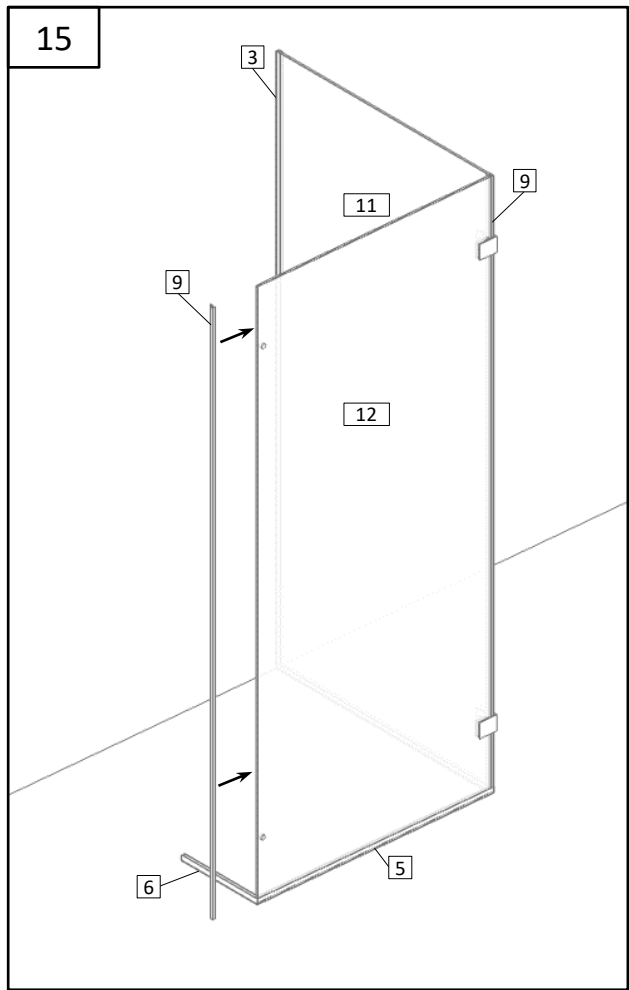
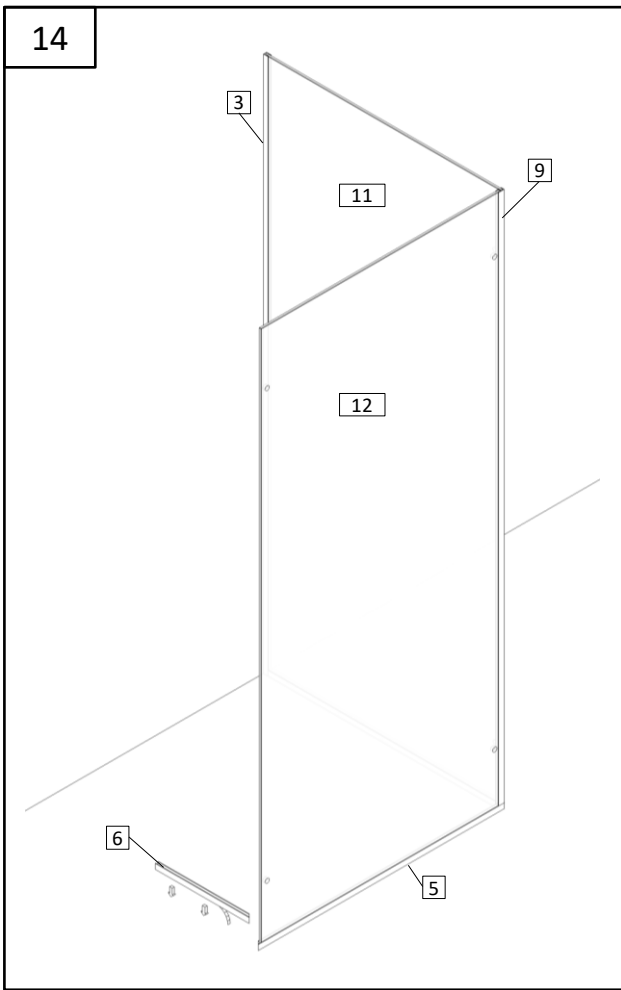


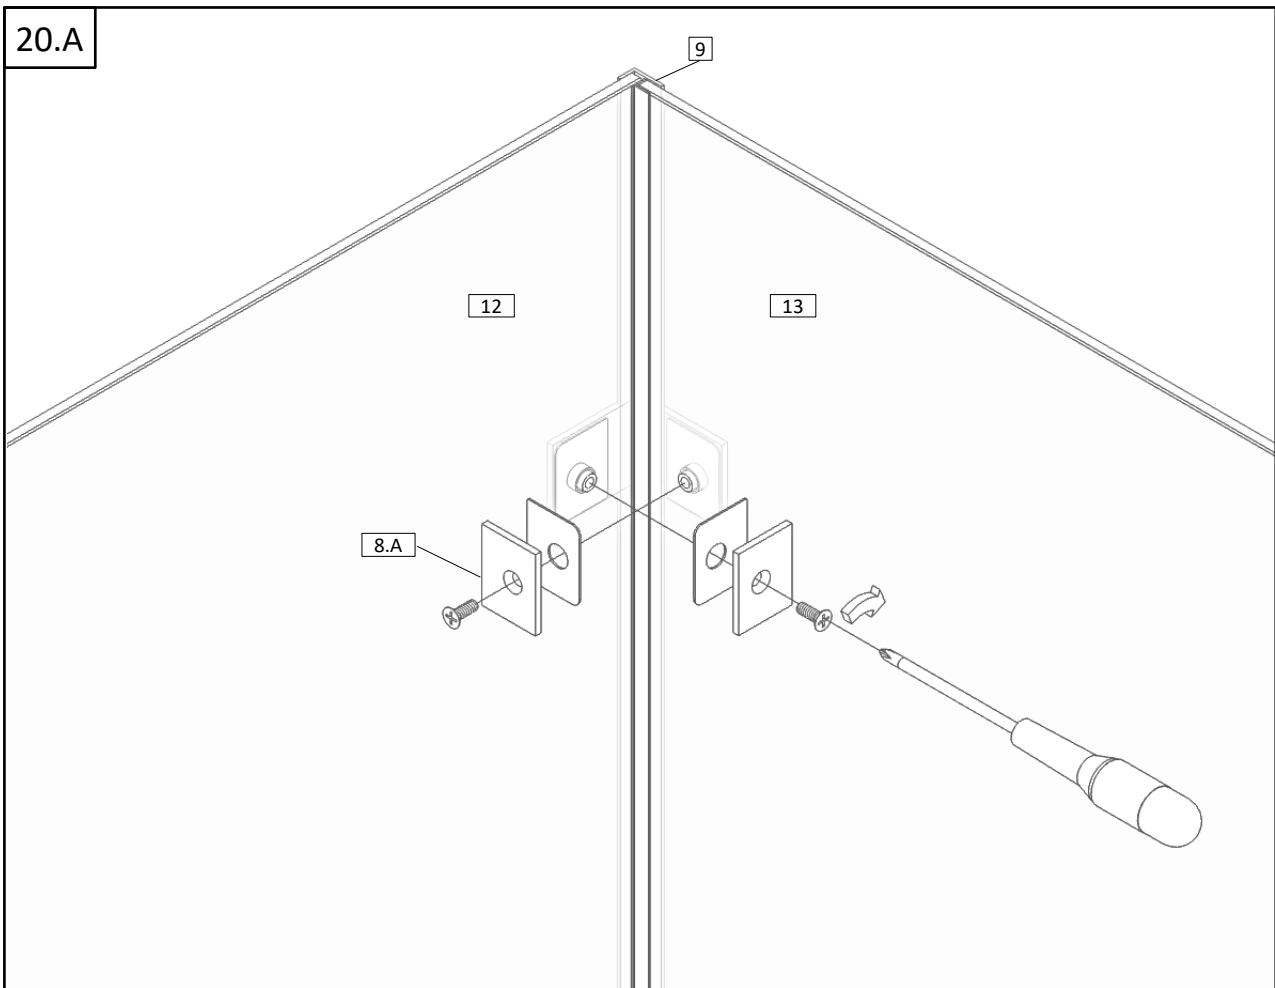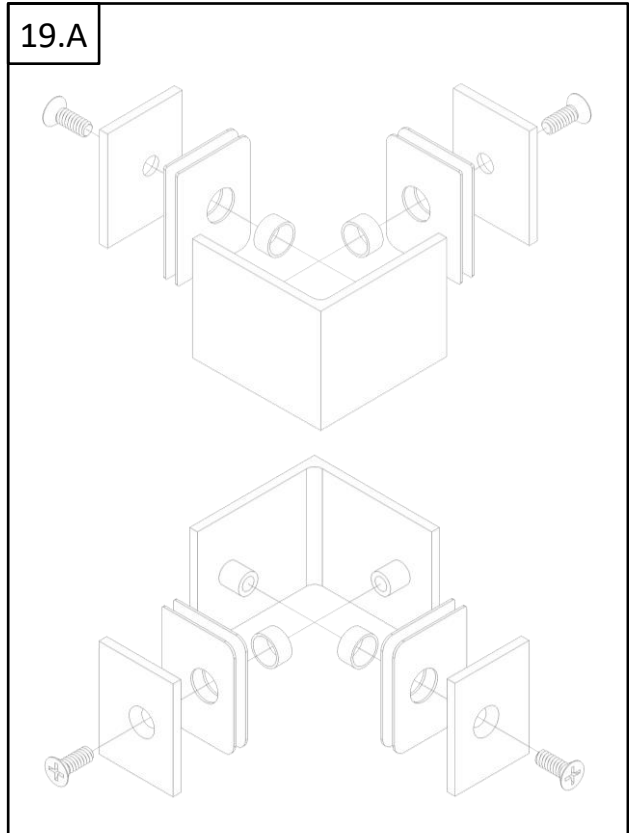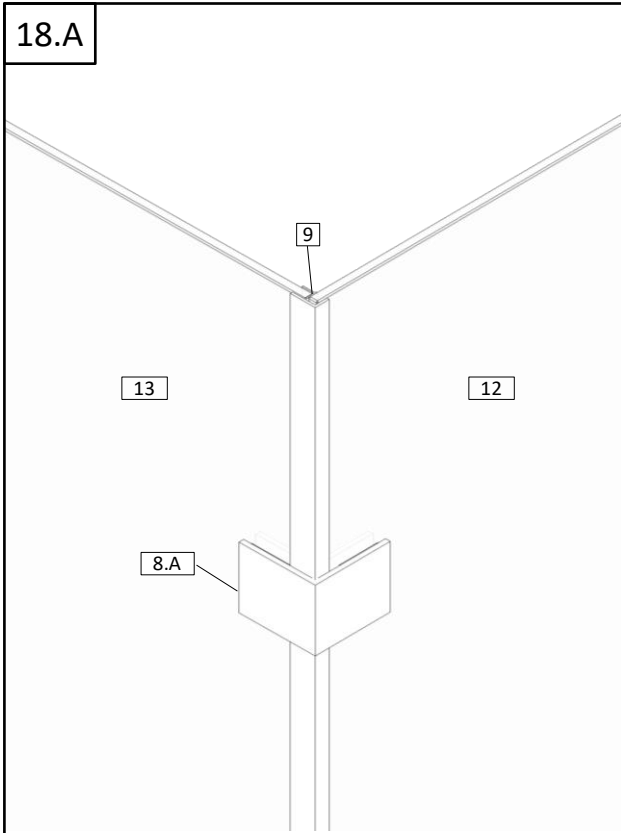



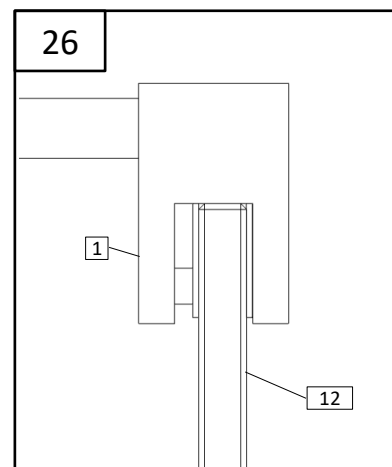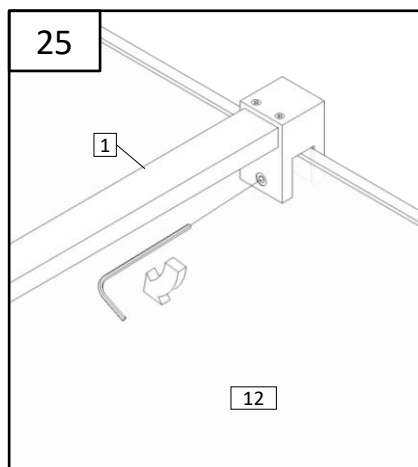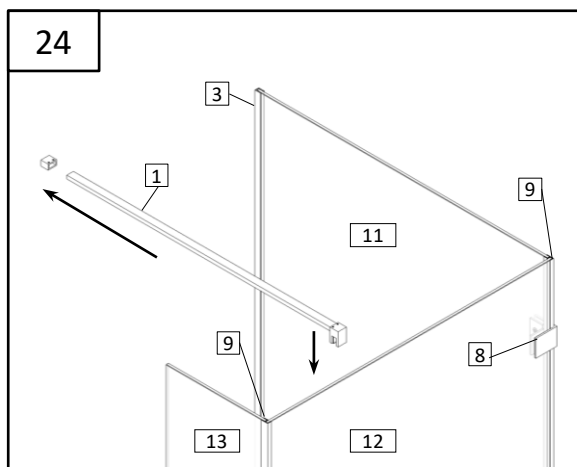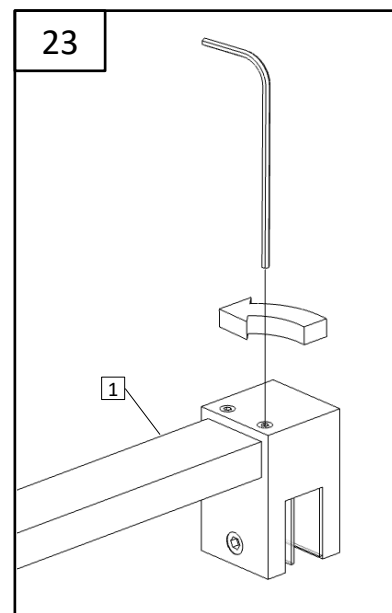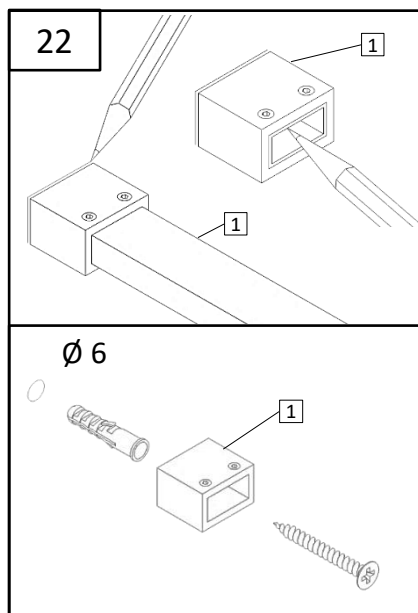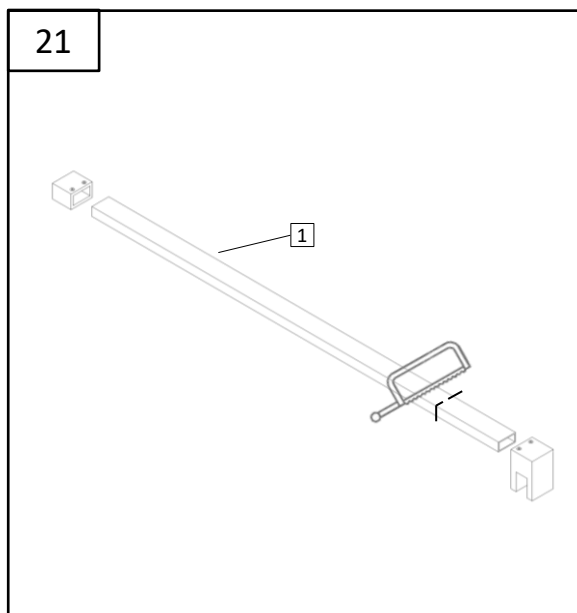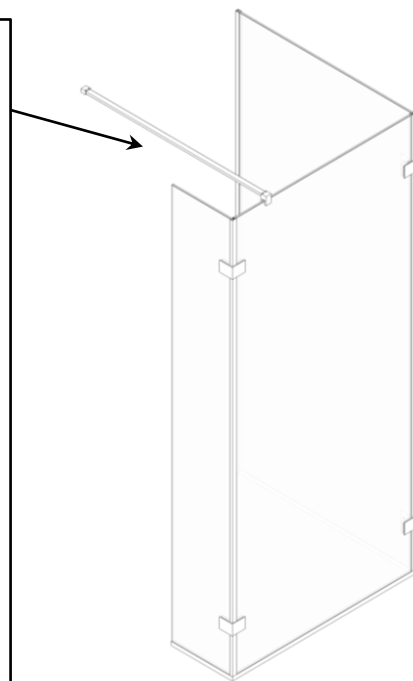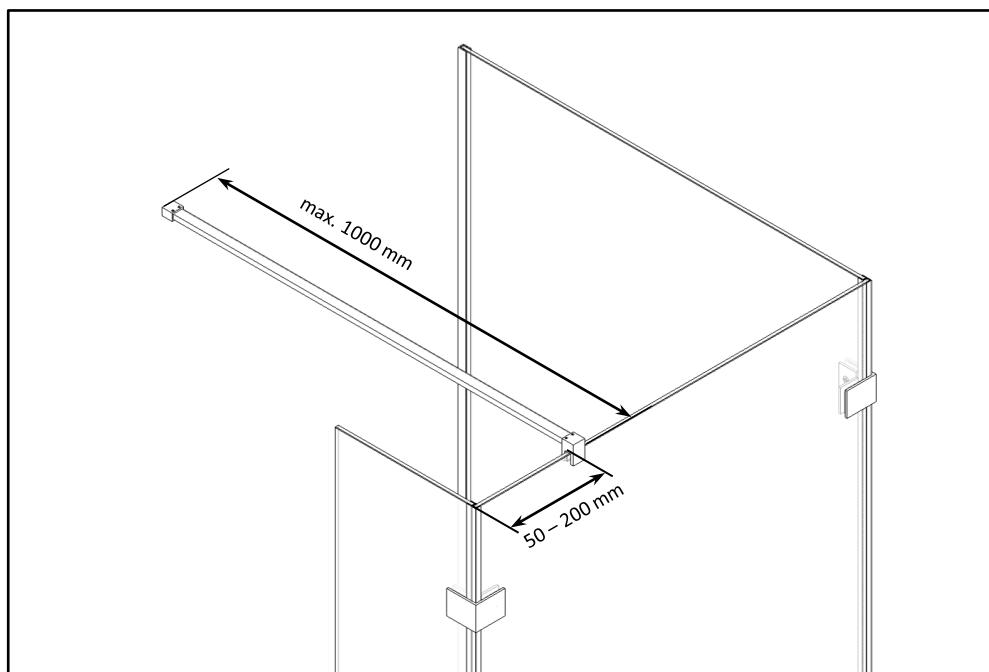

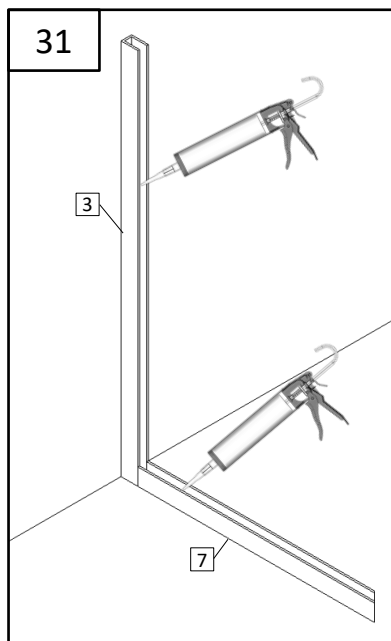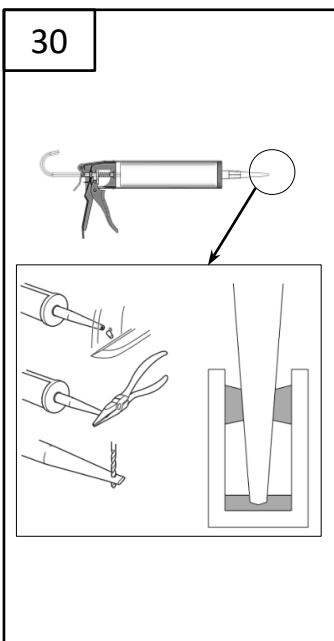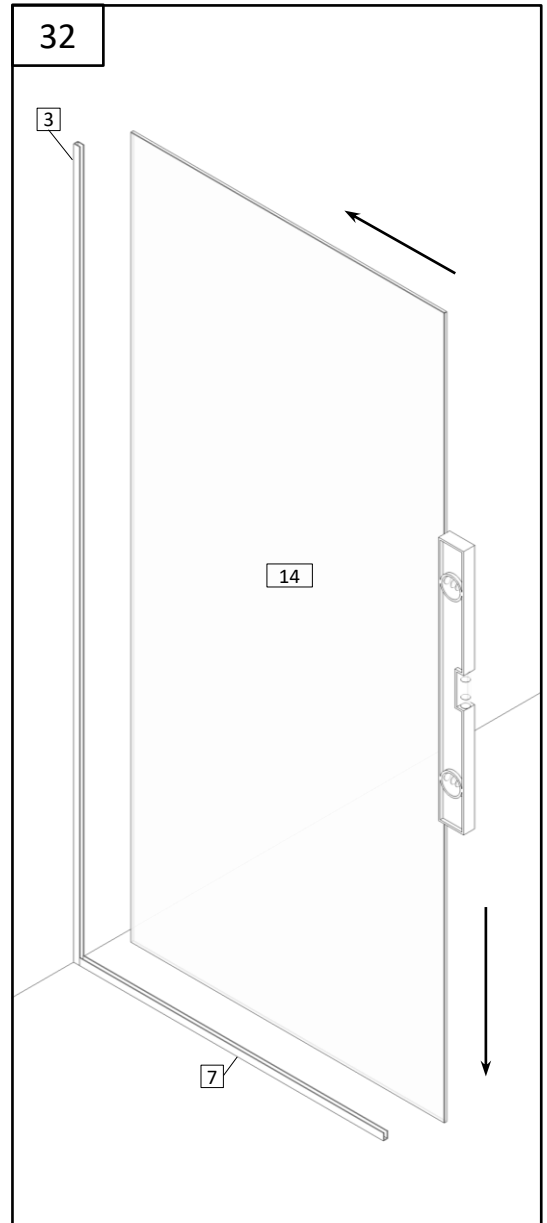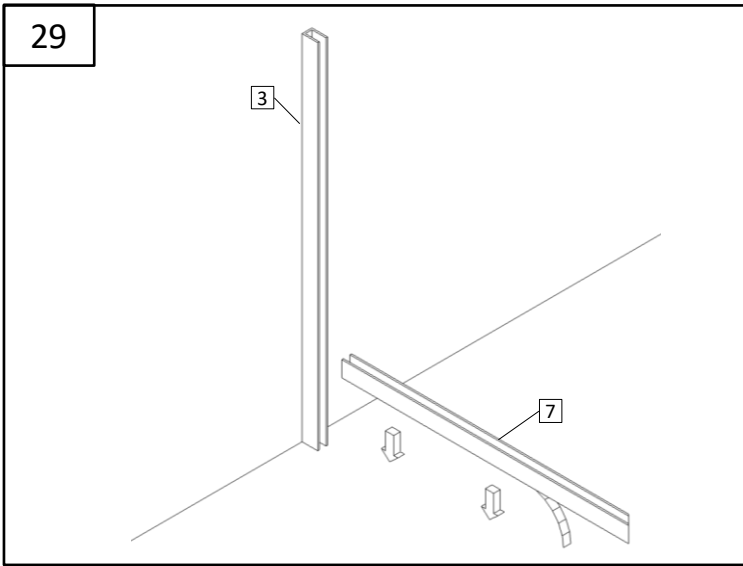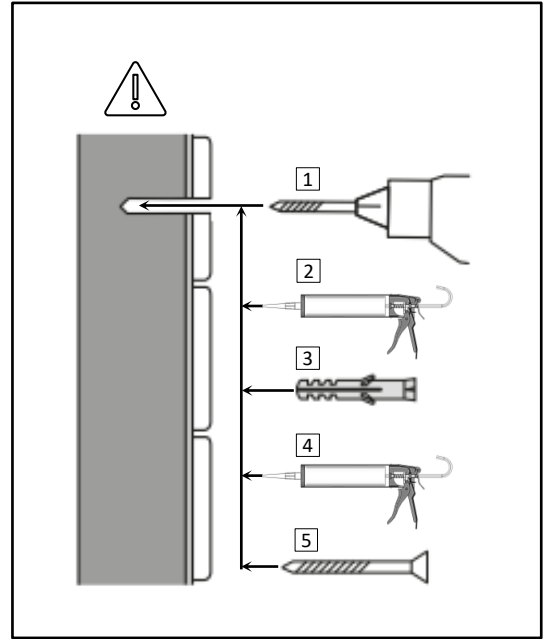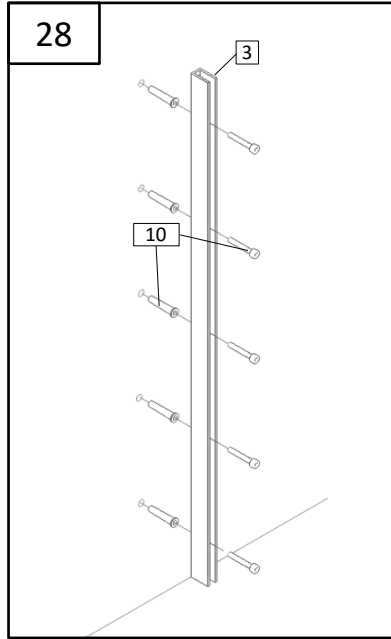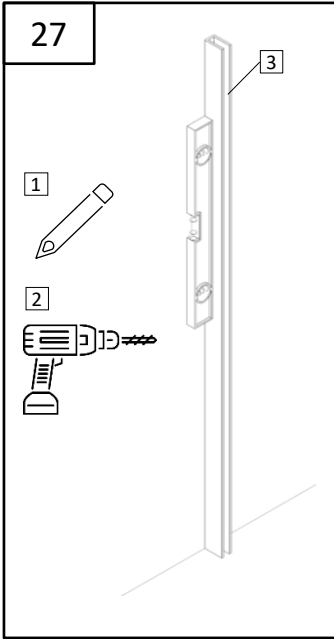

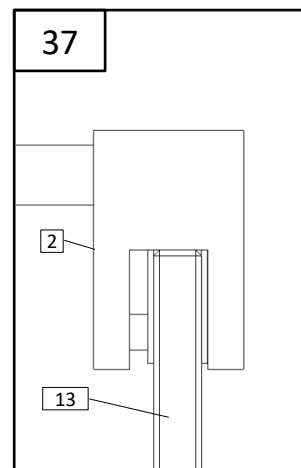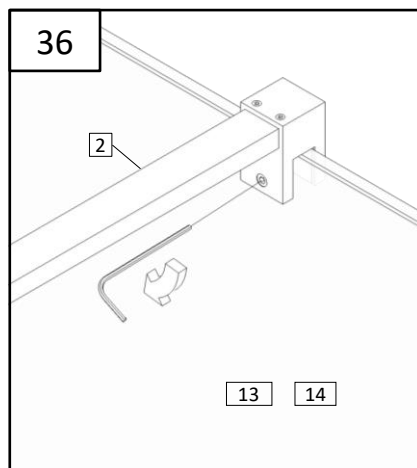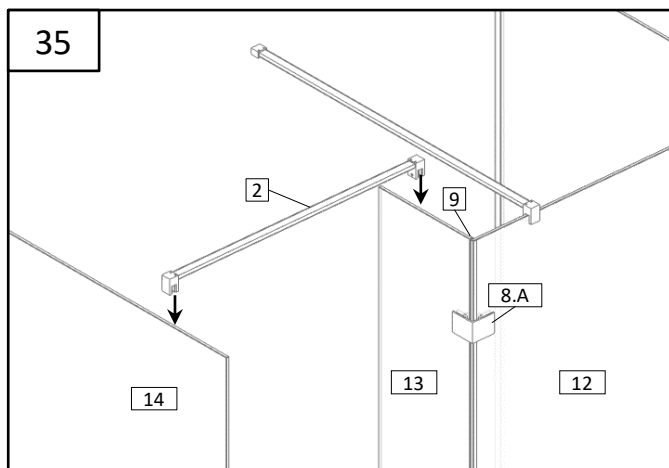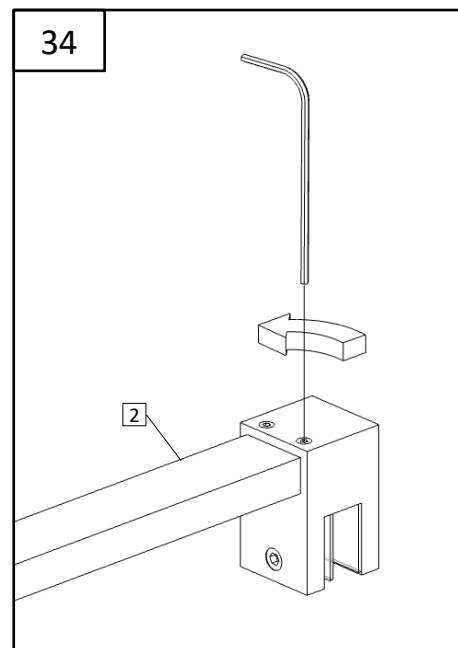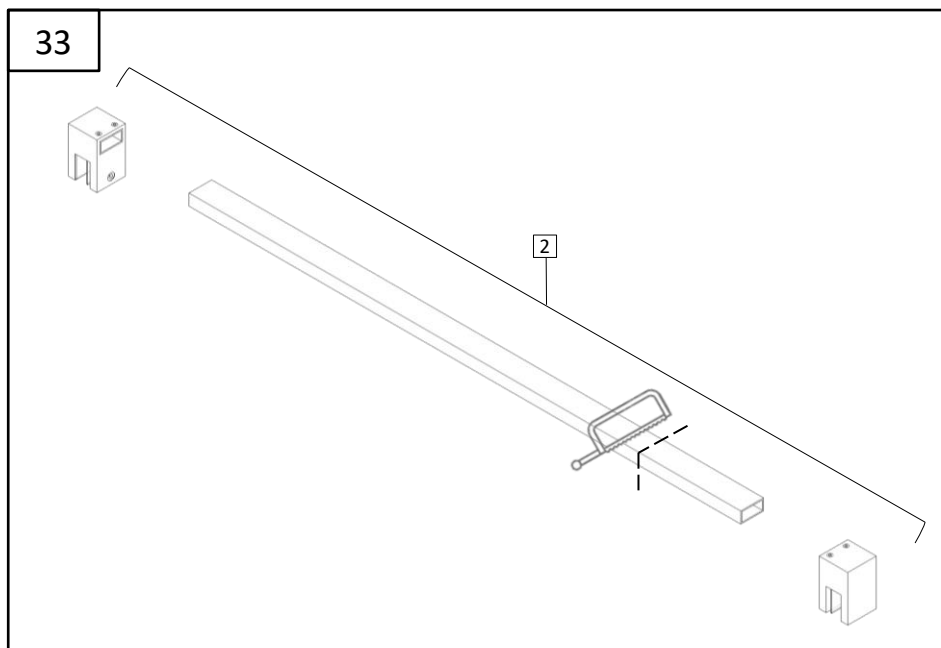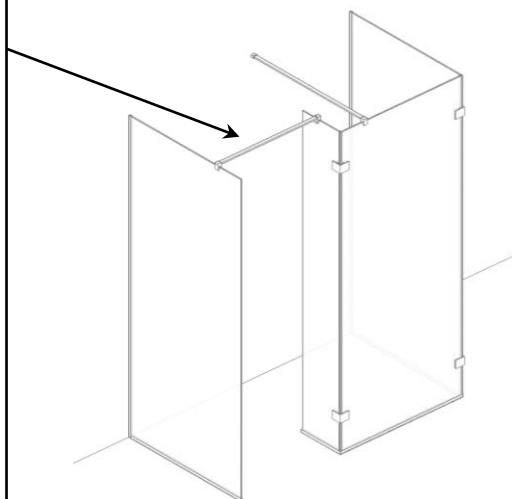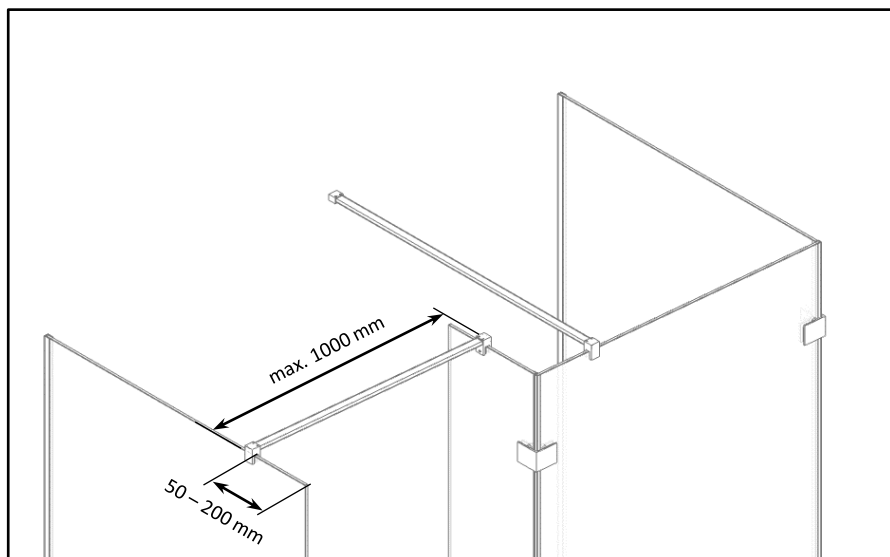

38



24 h

