


# TRE


## Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены


Shower wall installation instructions


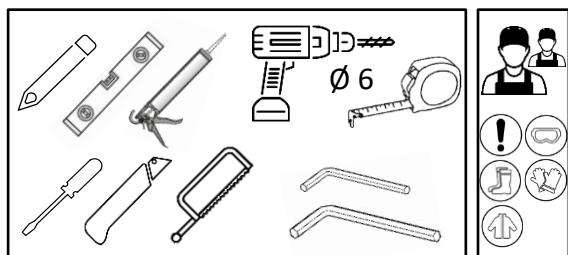


1.		DZT100CHR10X20 + SK2SET 1	1
2.		PAL-01	1
3.		PAL-01B	1
4.		PAL-01B-2	1
5.A		PGB-902	2
5.B		5213150	2
6.		BB 52 135 19	1
7.		3,5X35 SK1SET	1
8.		8 mm Safety Glass	1
9.		8 mm Safety Glass	1

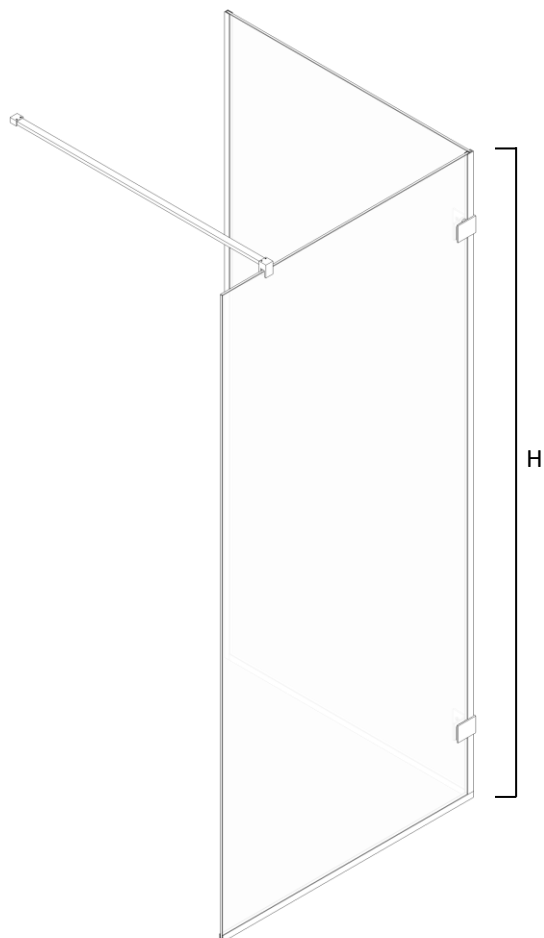

TRE	A (mm)	B (mm)	H (mm)
90_90TRE	865	878-883	1988
100_80TRE	965	778-783	1988
110_90TRE	1065	878-883	1988
120_80TRE	1165	778-783	1988
120_90TRE	1165	878-883	1988
140_100TRE	1365	978-983	1988
160_100TRE	1565	978-983	1988

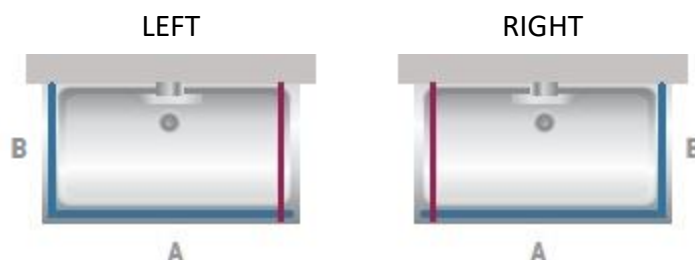

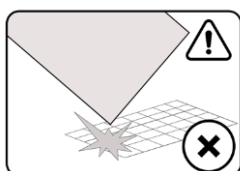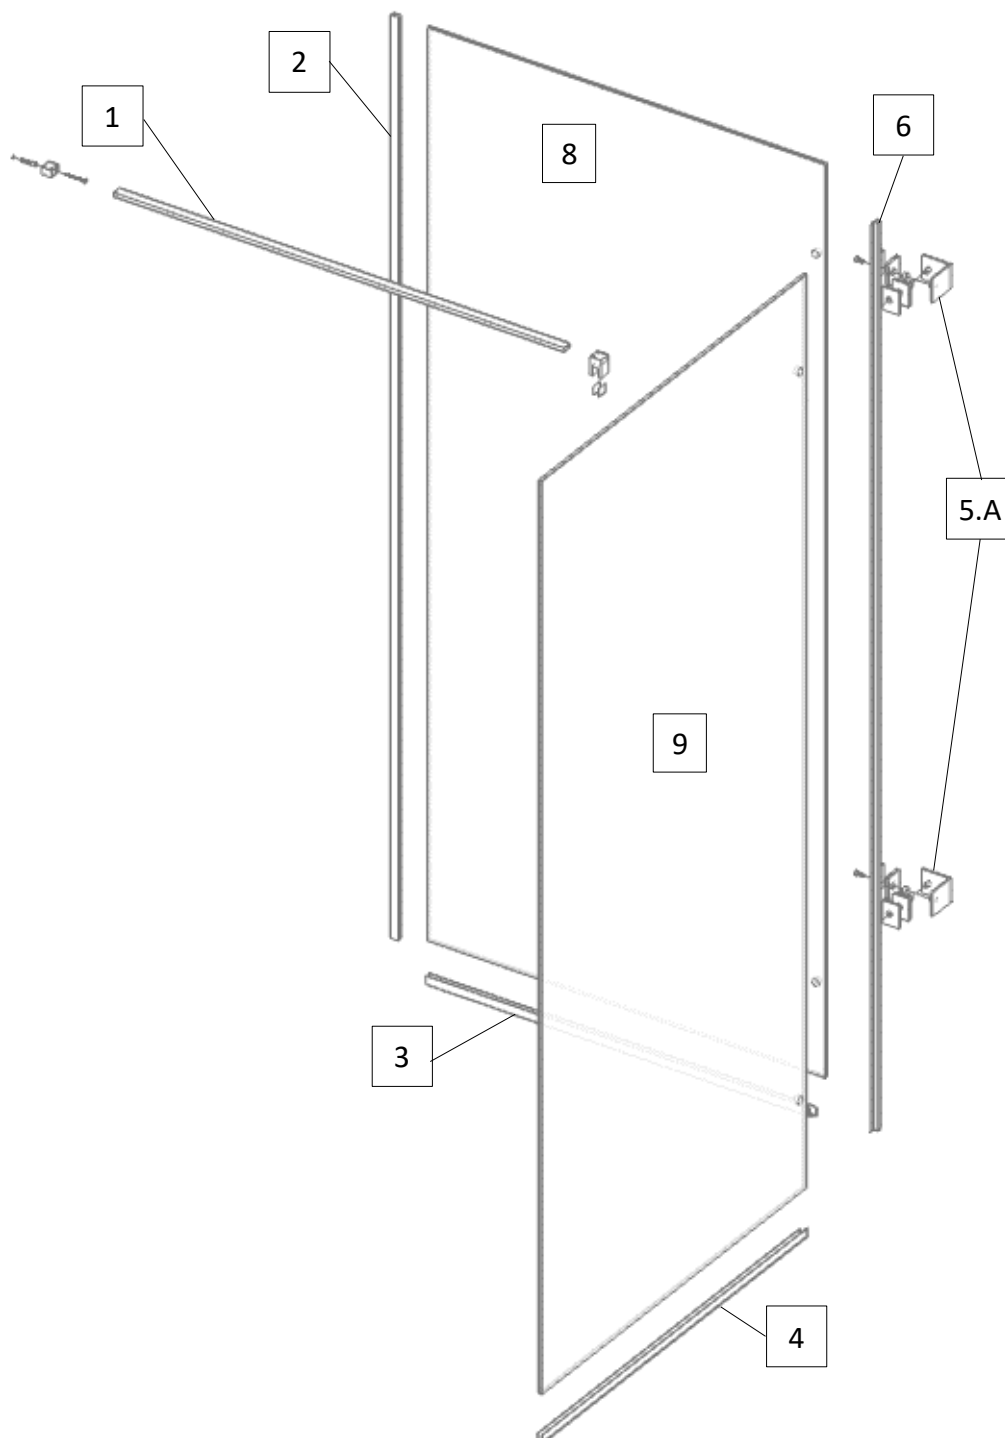

**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

