


FLAVIA

Dušas durvju montāžas instrukcija


Инструкция по монтажу душевой двери



Shower door installation instructions

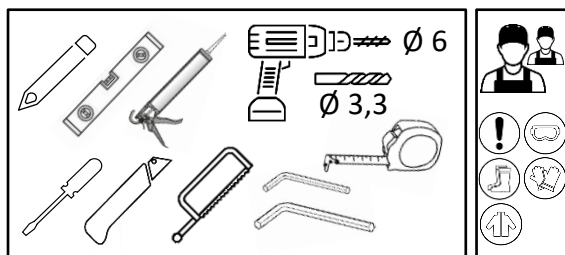

1.		VIRA20CH	2
2.		MF-32/6-ER	1
3.		R1656715	2
4.		SC-ALU8X9NEW	1
5.		SC-SL-UZL180R	1
6.		SC-SL-UZL180L	1
7.		DR-CH32	2
8.		3,5x35 SK1SET; Ø 6	2
9.		3,5x13 SK2SET	4
10.		6 mm Safety Glass + VIRA20CH	1
11.		6 mm Safety Glass + VIRA20CH	1

FLAVIA	A+A (mm)	H (mm)
70FLAV	690-705	1993
80FLAV	790-805	1993
90FLAV	890-905	1993
100FLAV	990-1005	1993
110FLAV	1090-1105	1993
120FLAV	1190-1205	1993
130FLAV	1290-1305	1993

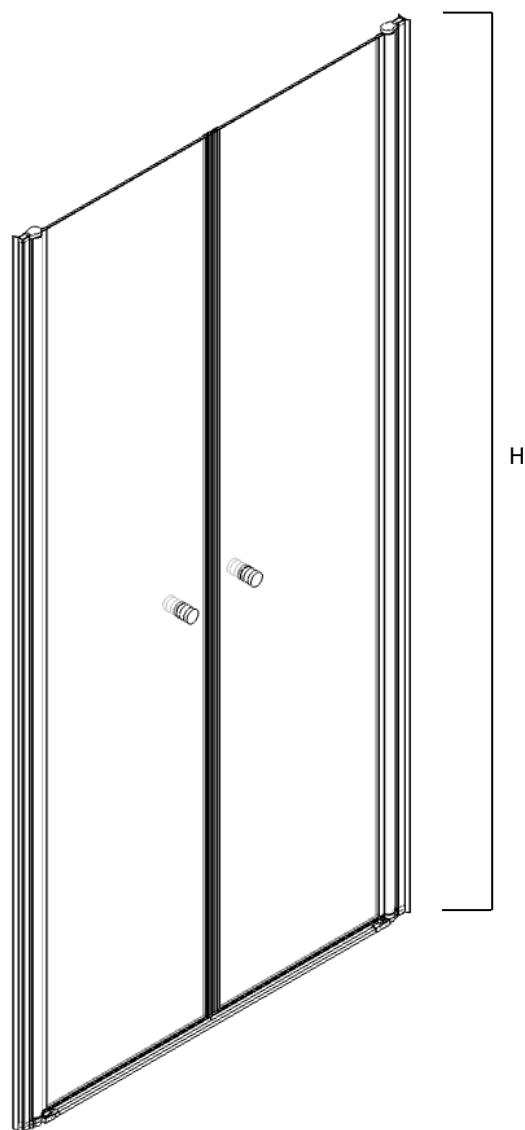

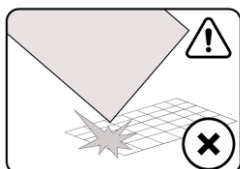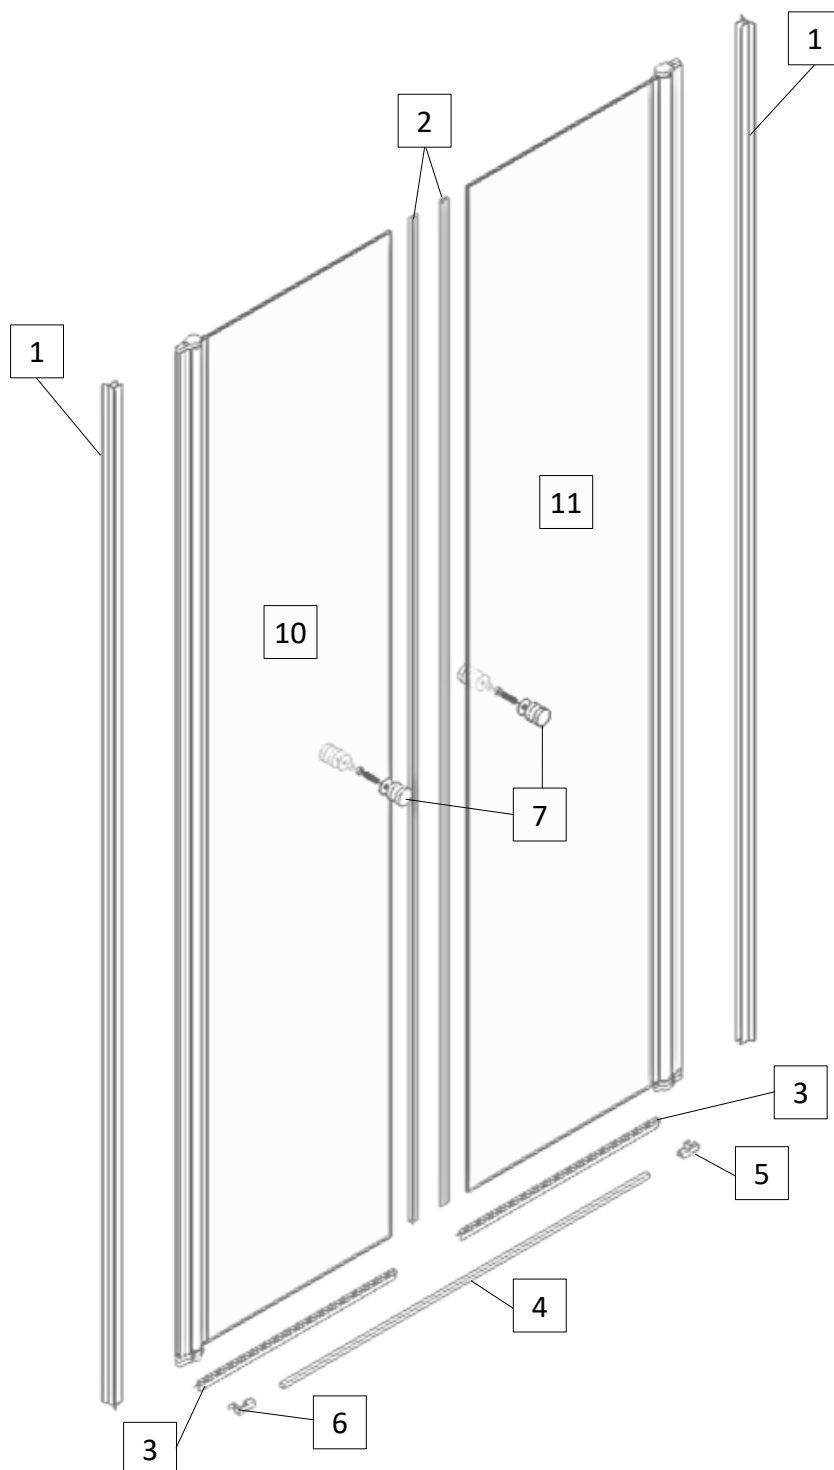

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

