


Dušanas kabīnes montāžas instrukcija



Инструкция по монтажу душевой кабины



Shower enclosure installation assembly

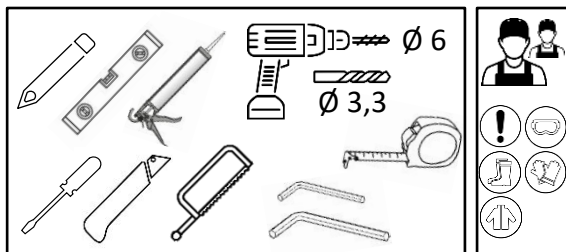

1.		PAL-01	2
2.		PAL-01B	1
3.		DZT100CHR10X20 + SK2SET 1	1
4.		VIRA20CH	1
5.		M981R - 180CH / M981L - 180CH	2
6.		MF-36/6-ER	1
7.		MF-42/8-ER	1
8.		R1653308	1
9.		400211PS-013	1
10.		NLO-ZD-2856	1
11.		SC-ALU8X9NEW	1
12.R		SC-SL-UZL90L	1
13.R		SC-SL-UZL180R	1
12.L		SC-SL-UZL180L	1
13.L		SC-SL-UZL90R	1
14.		3,5x35 SK1SET; Ø 6	2
15.		8 mm Safety Glass	1
16.		6 mm Safety Glass	1
17.		6 mm Safety Glass +VIRA20CH	1

MARIA	C (mm)	A+B (mm)	H (mm)	H1 (mm)
60X60MAR	587-592	590-600	2008	1993
70X70MAR	687-692	690-700	2008	1993
80X80MAR	787-792	790-800	2008	1993
90X90MAR	887-892	890-900	2008	1993

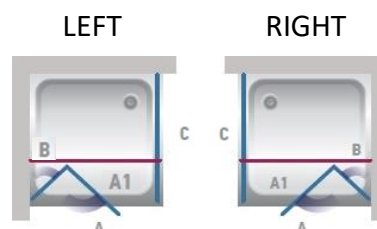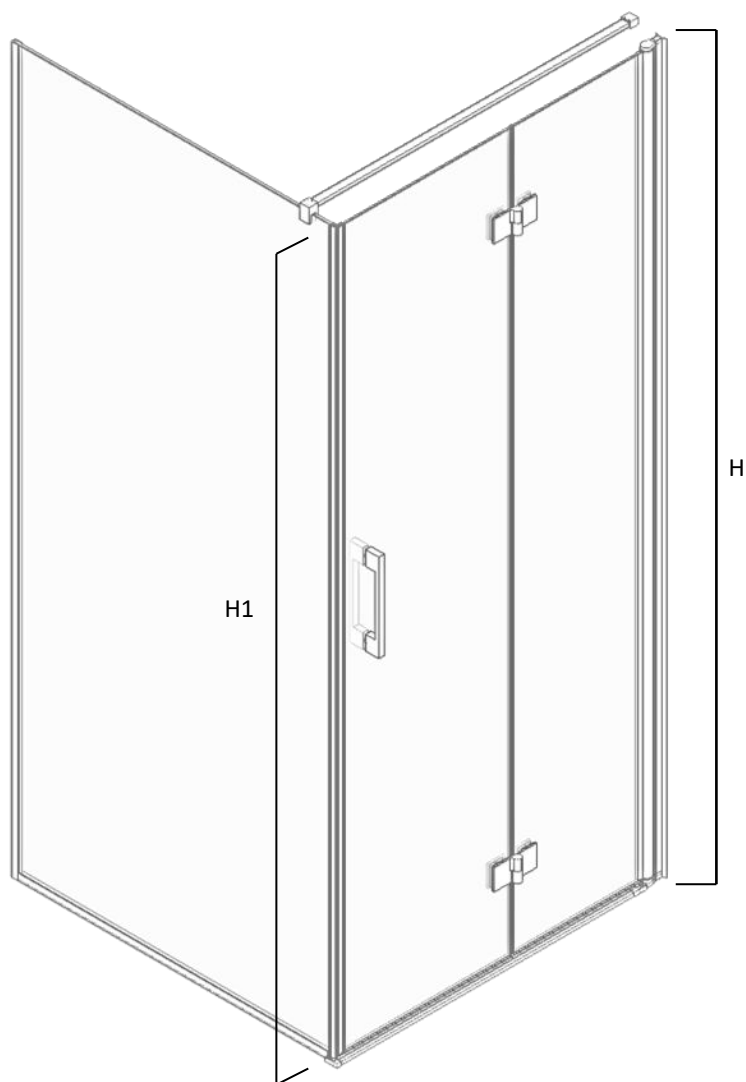

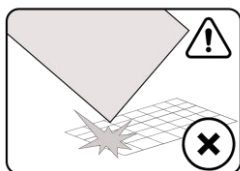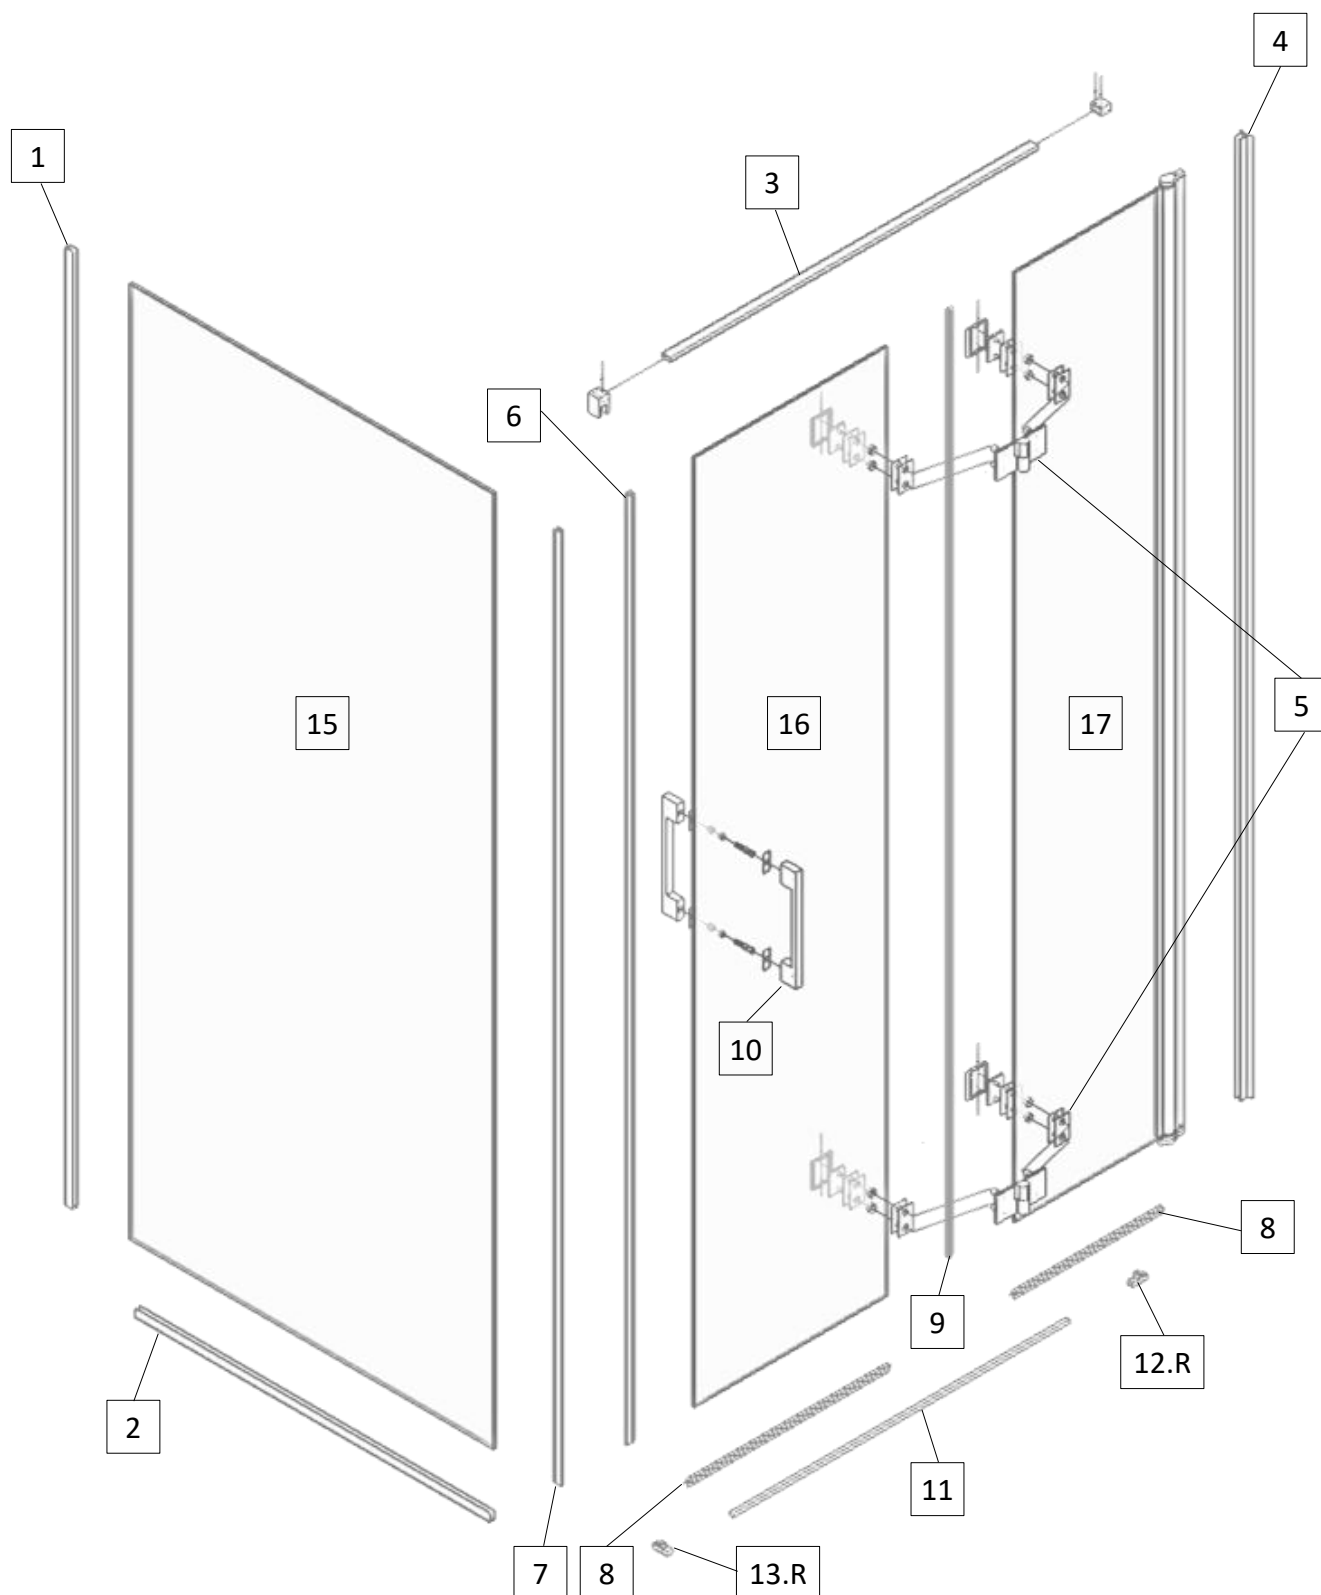





Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.





1.A









MARIA	P, mm	A+B1	C1, mm
60X60MAR	600 x 600	588	583
70X70MAR	700 x 700	688	683
80X80MAR	800 x 800	788	783
90X90MAR	900 x 900	888	883




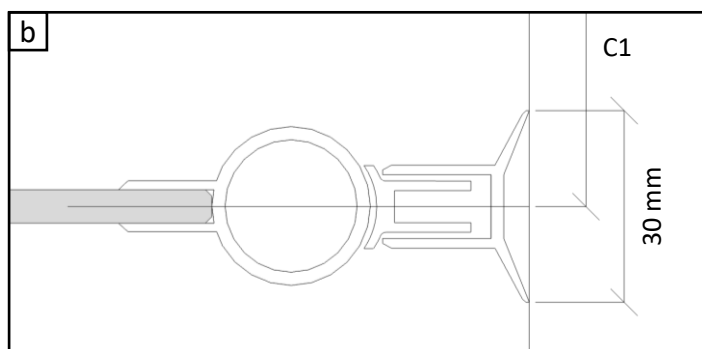
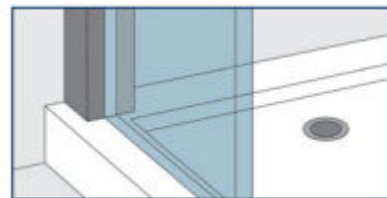
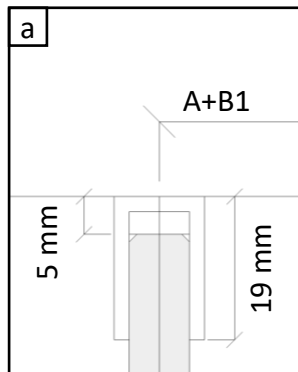
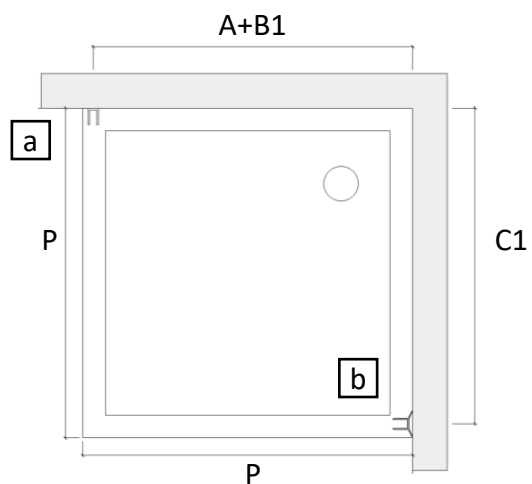



1.B

MARIA	D	S
60X60MAR	600	600
70X70MAR	700	700
80X80MAR	800	800
90X90MAR	900	900

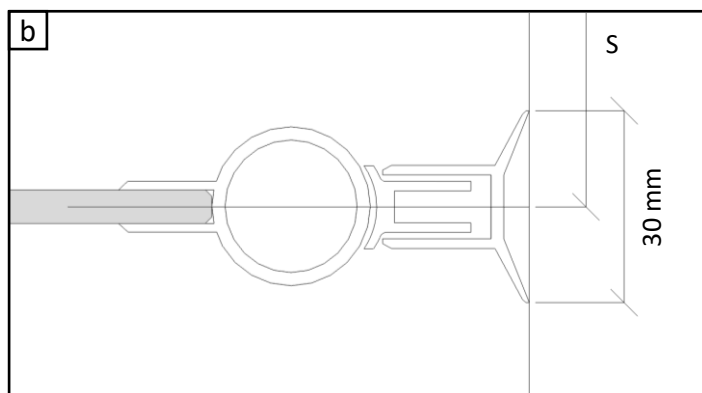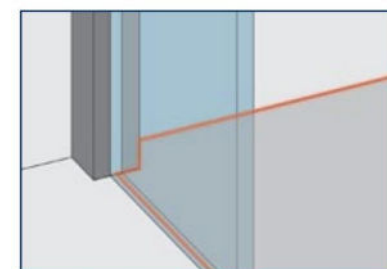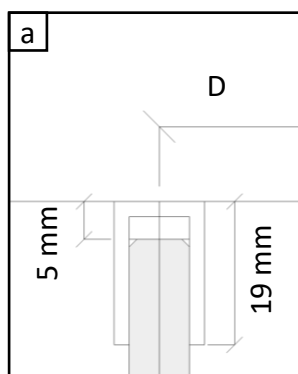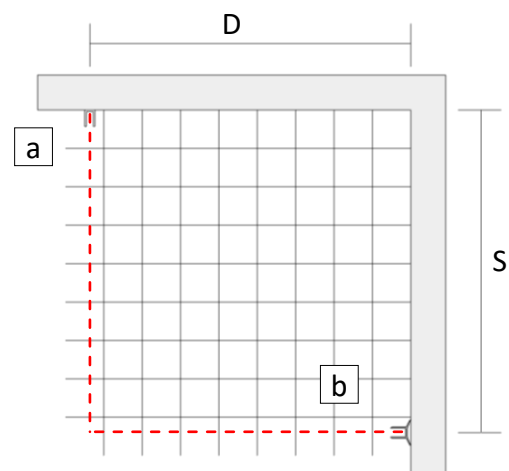

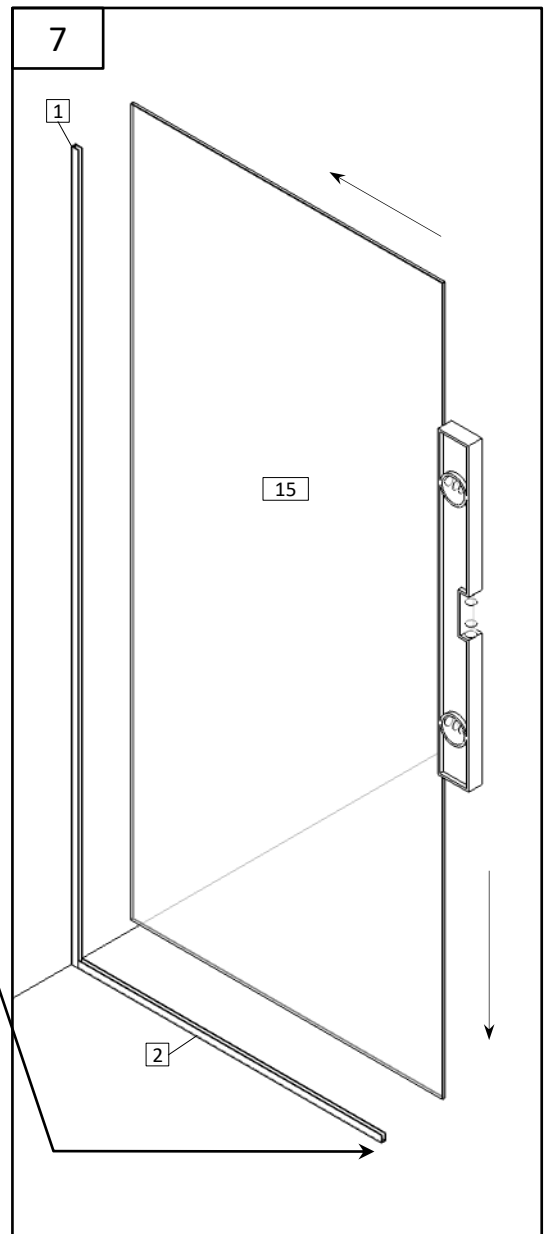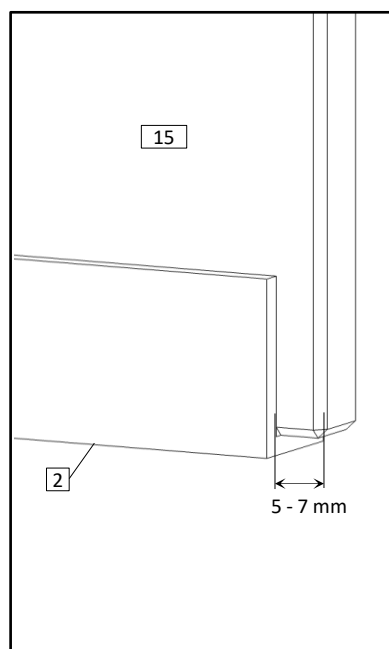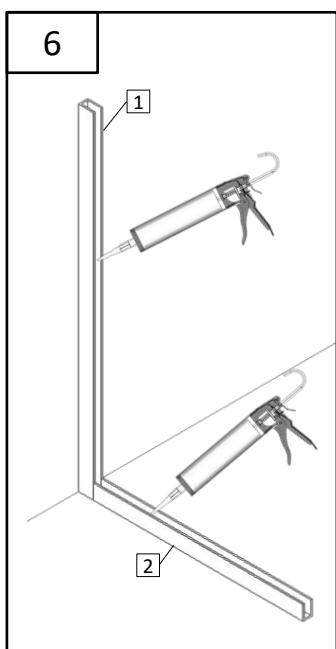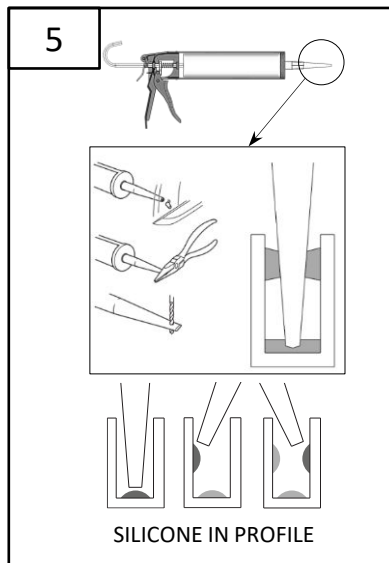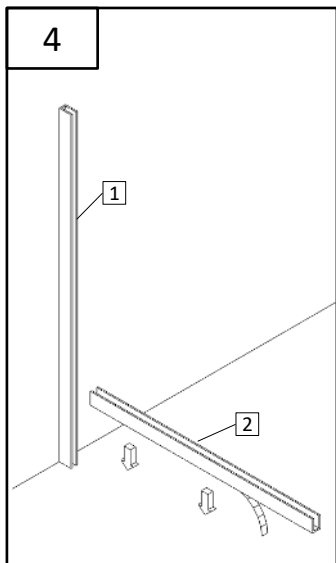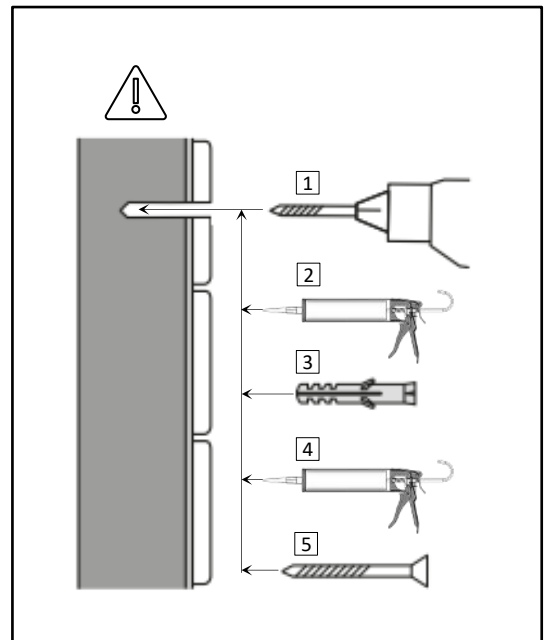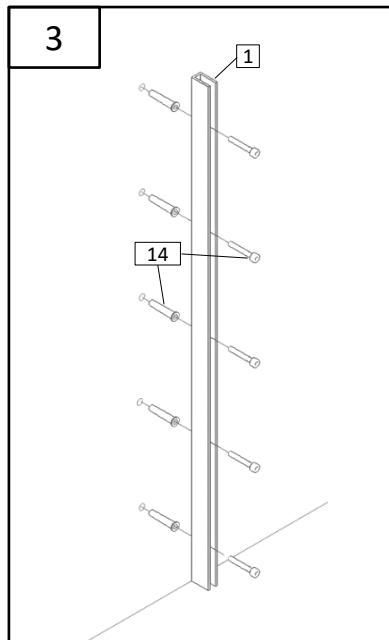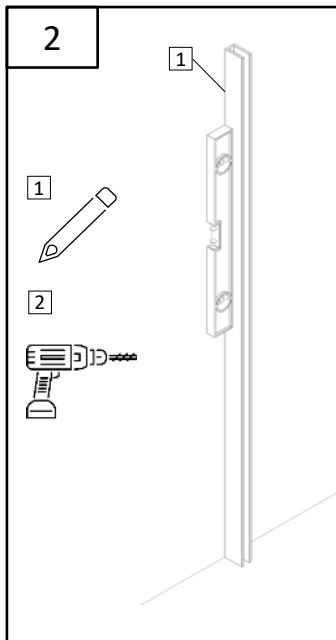


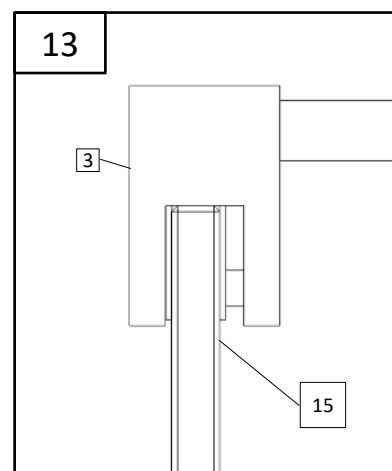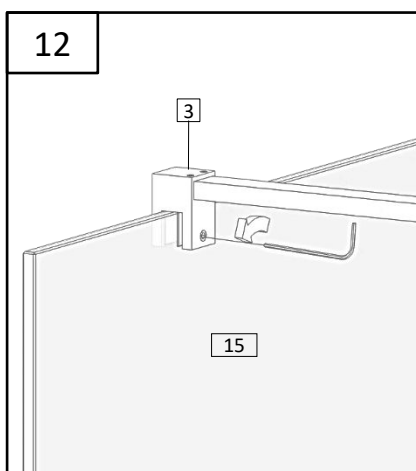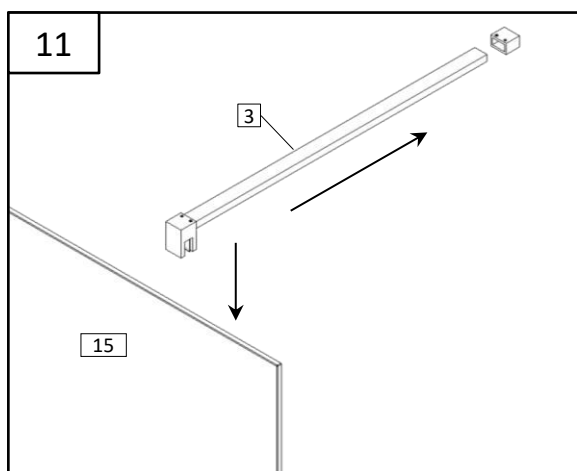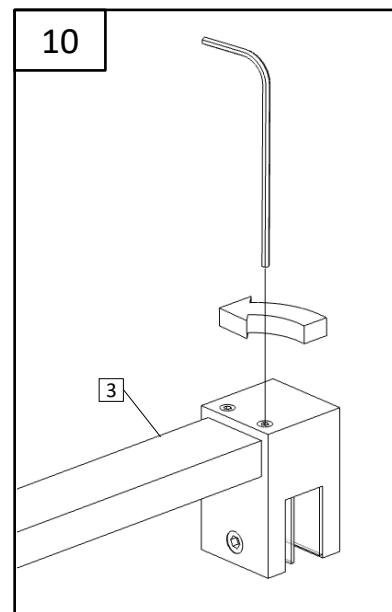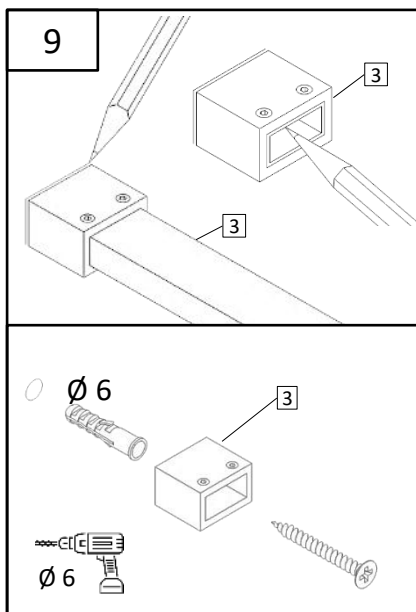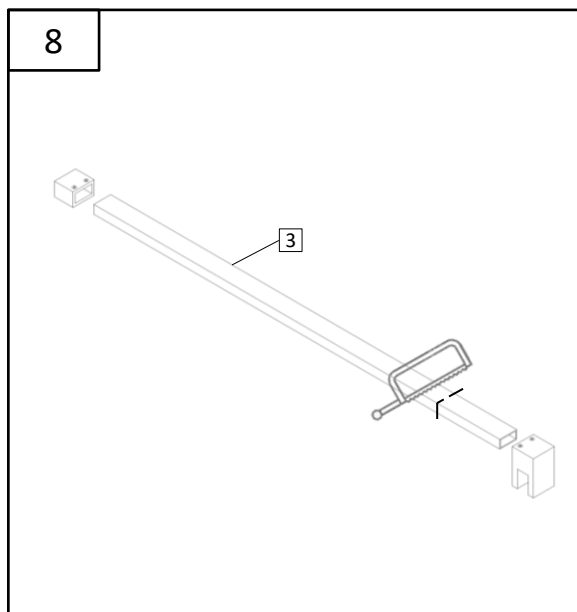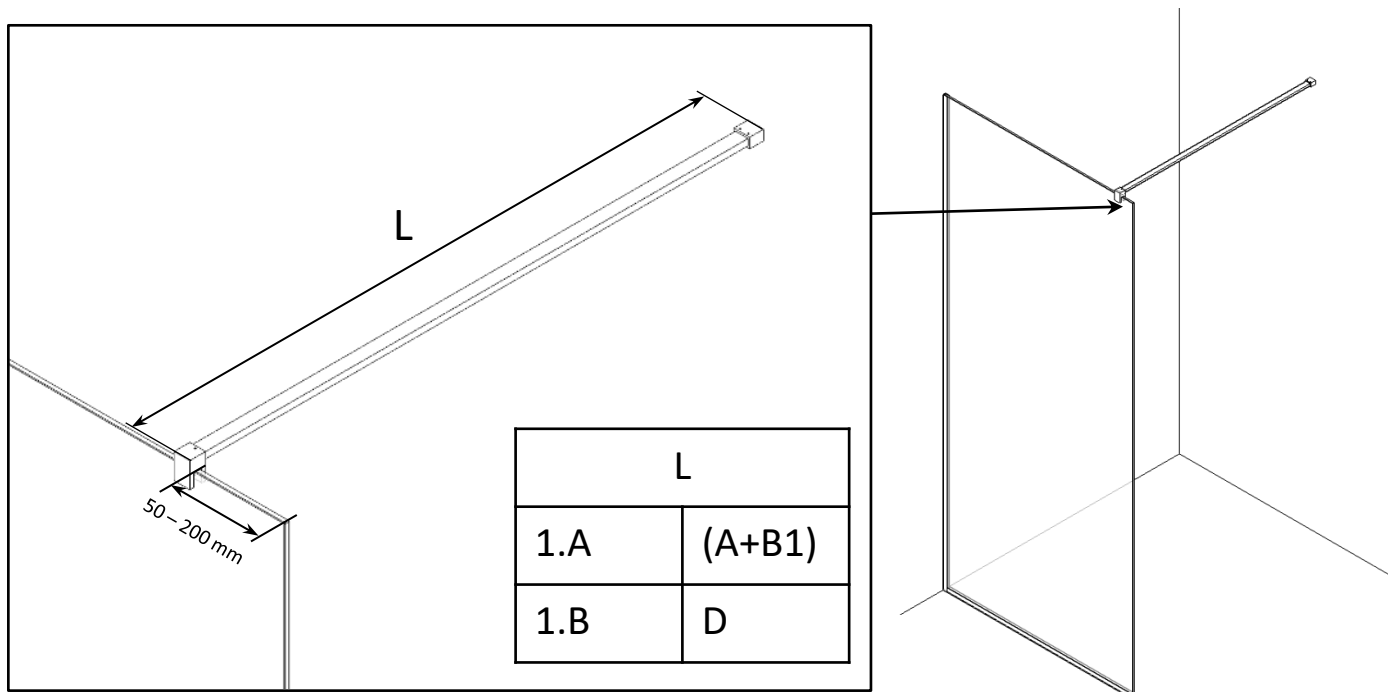


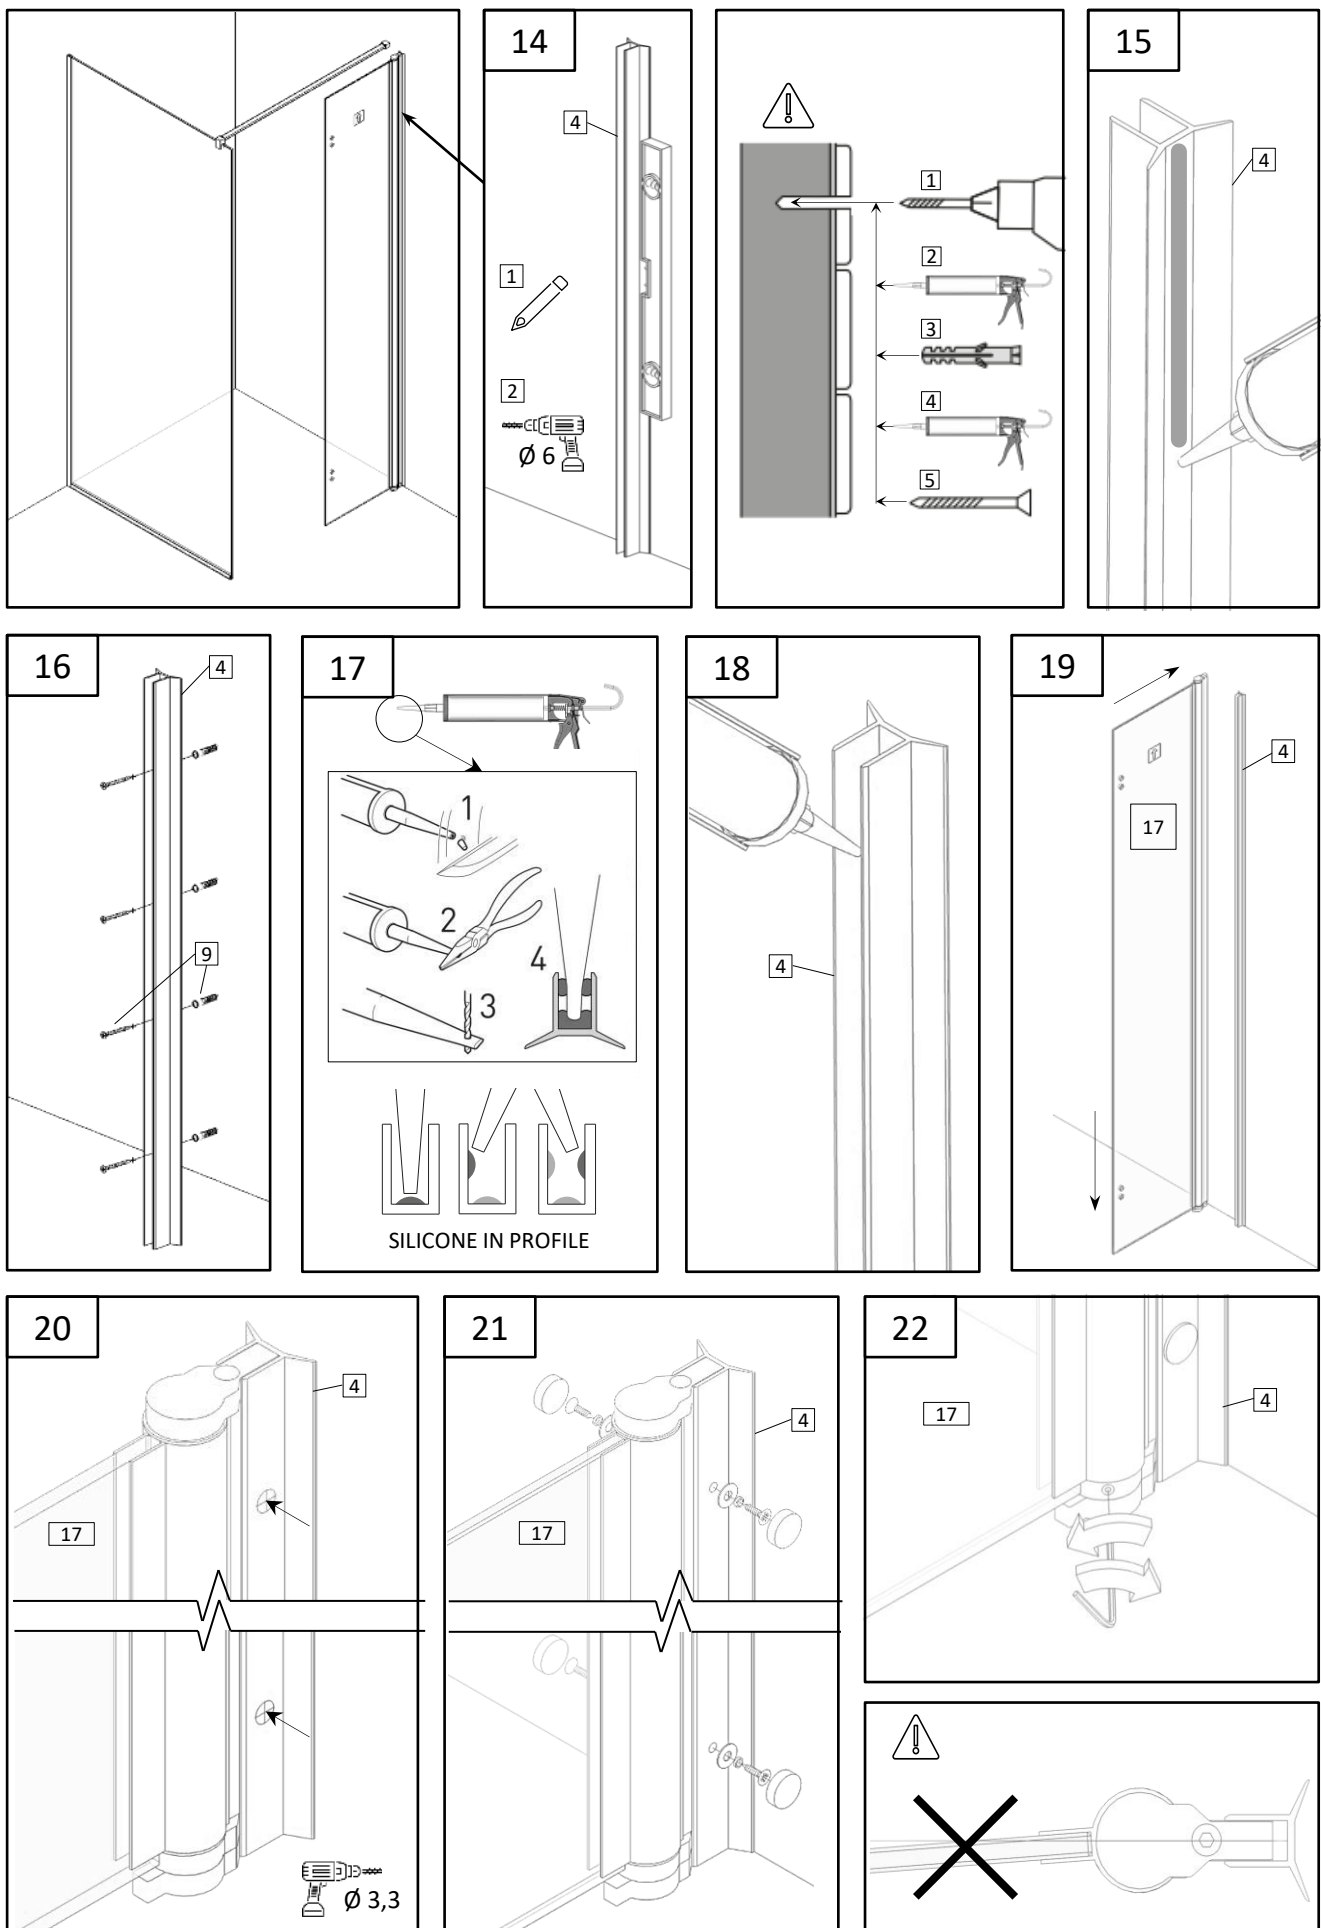





RIGHT

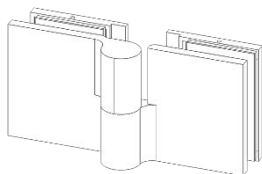


LEFT

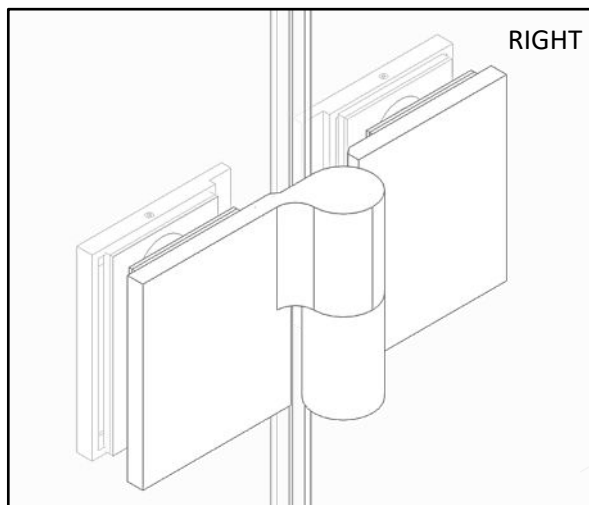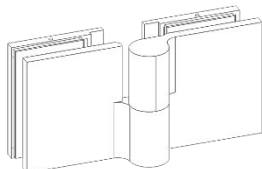


RIGHT

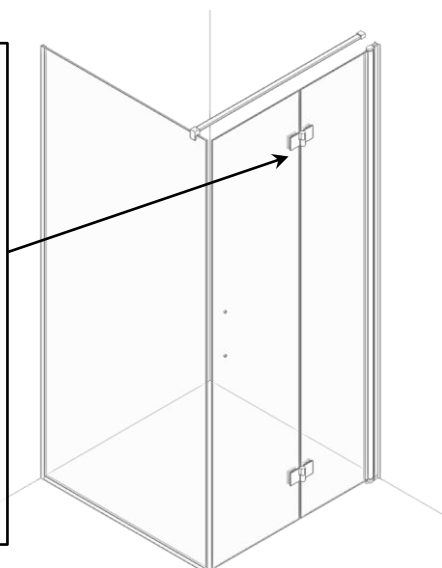


23

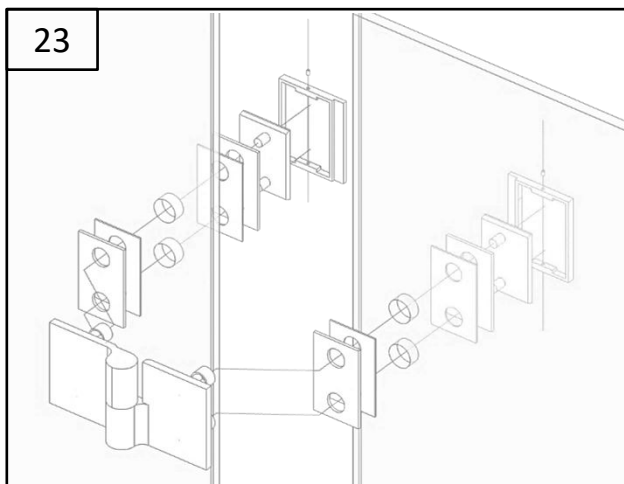

26

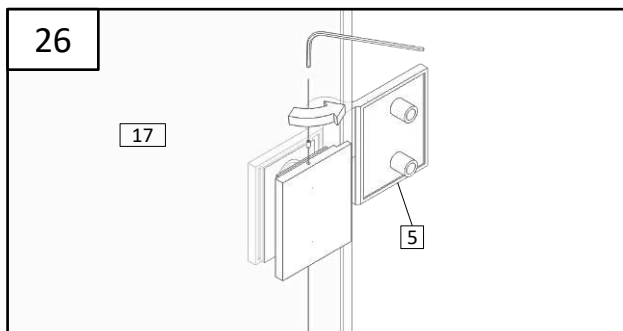

24

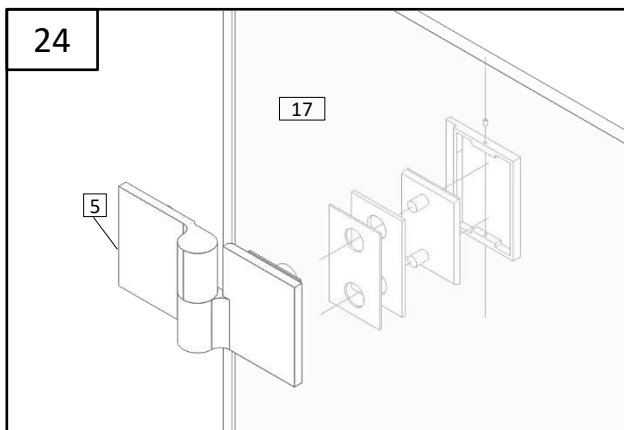

25

