


LUNA


Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери

Shower door installation instructions

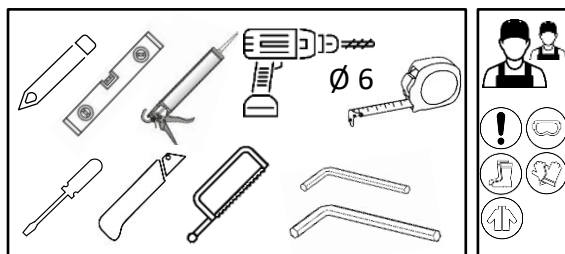

1.		QW01	2
2.		QW02	2
3.		QWSET-04	1
4.		QWSET-05	1
5.		QW06	1
6.		QW07	2
7.		QW08	1
8.		QW09	2
9.		3,5x35 SK1SET; Ø 6	1
10.		8 mm Safety Glass	1

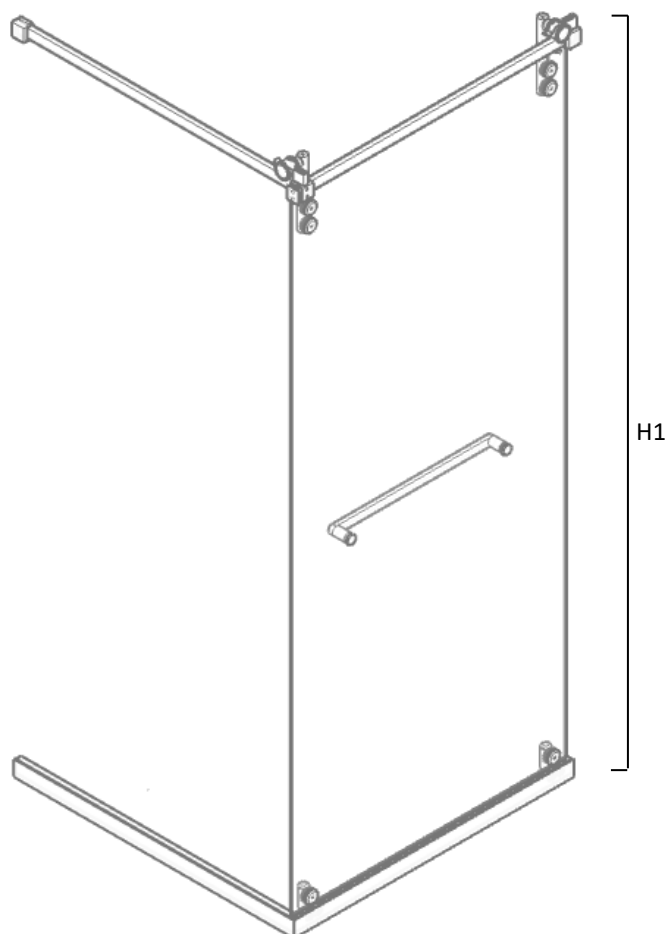




LUNA	A (mm)	A1 (mm)	H (mm)
70LUN	695-710	650	2000
80LUN	795-810	750	2000
90LUN	895-910	850	2000
100LUN	995-1010	950	2000



LEFT

RIGHT

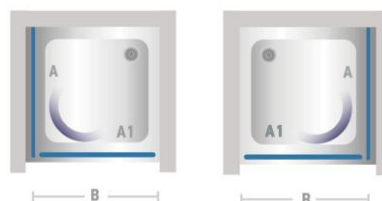

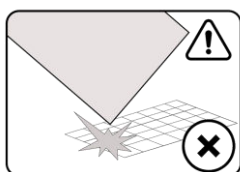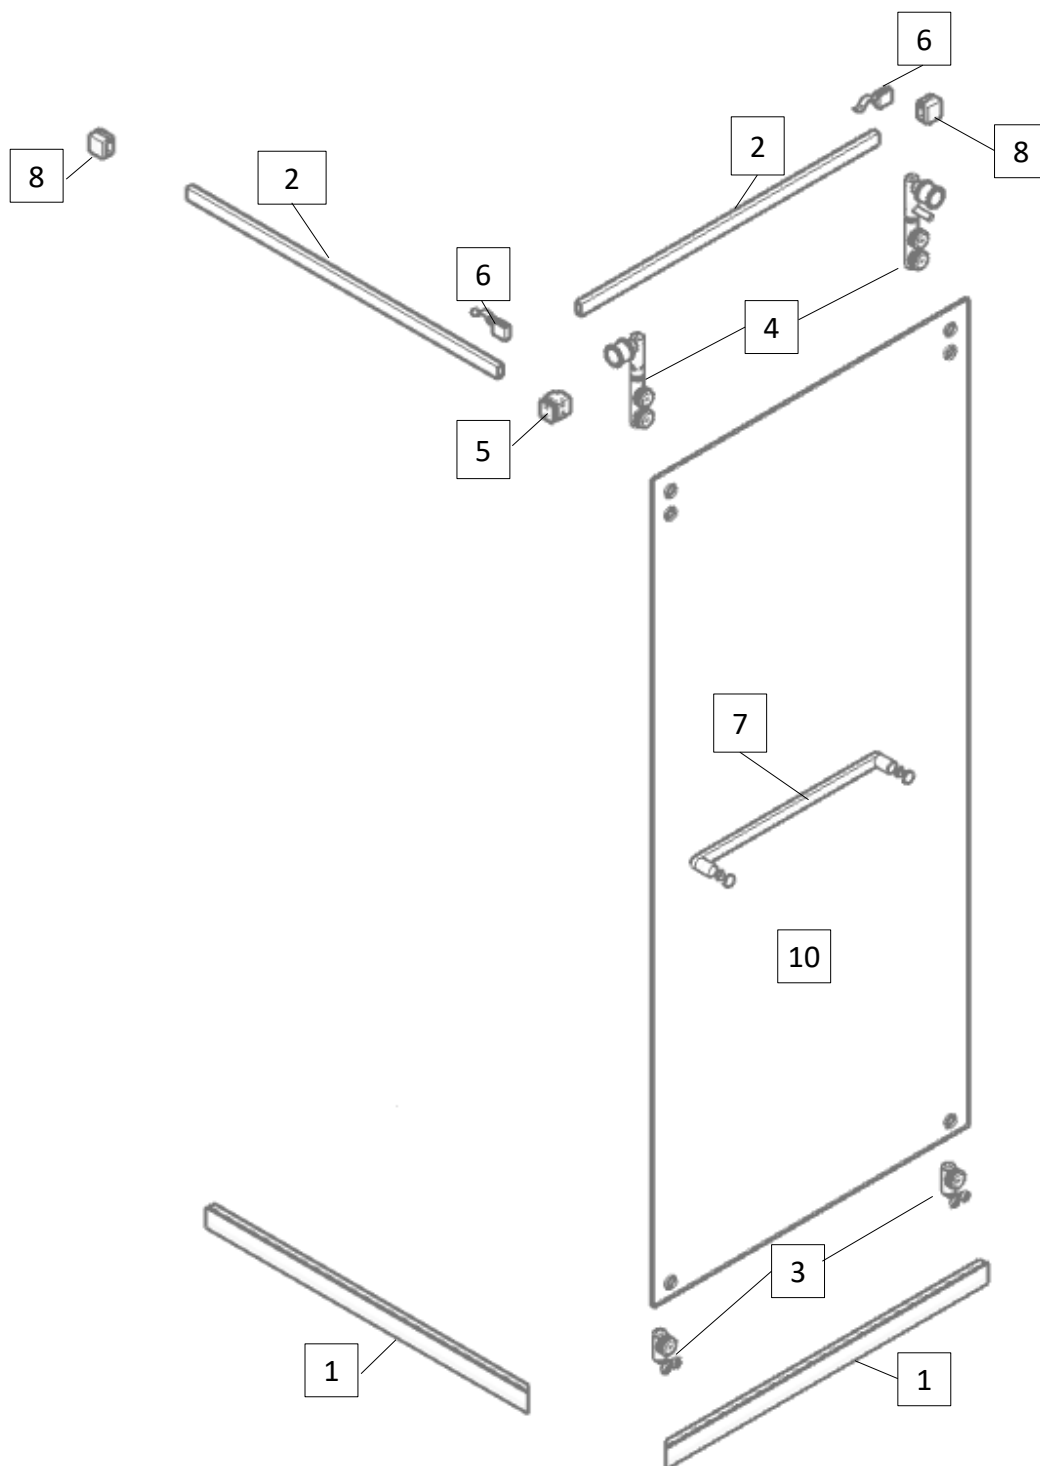

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.