


STELLA BLACK



Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери

Shower door installation instructions

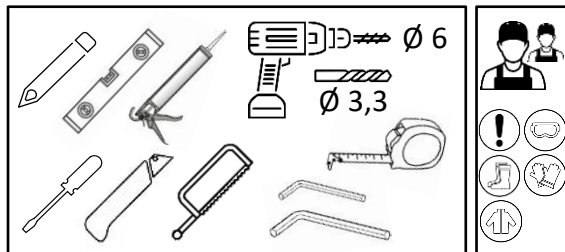


1.		PT01SD-01	1
2.		PT01SD-TOP	1
3.		3,5x13 2K3SET	1
4.		ELE4	1
5.		8850KUO-6-2010	1
6.		PT01SD-02	1
7.		PT01SD-03	1
8.R		SC-SL-UZL180R	1
8.L		SC-SL-UZL180L	1
9.		PT01SD-04	1
10.		3,5x35 SK3SET; Ø 6	2
11.		PT01SD-05	1
12.		6 mm Safety Glass + VIRA20CH	1

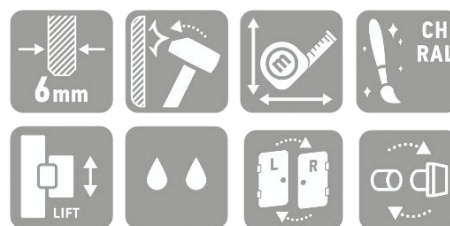
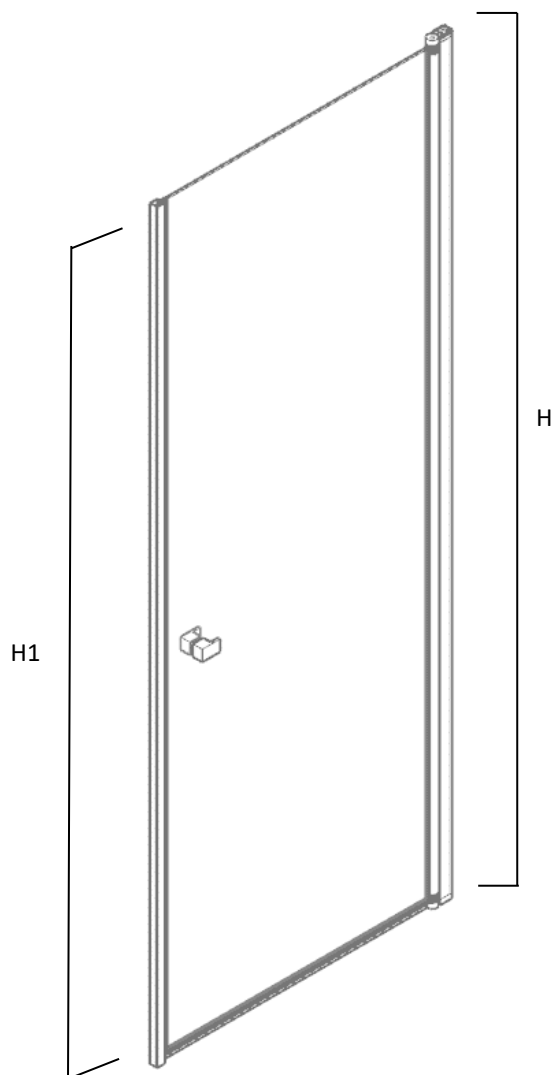


LEFT

RIGHT

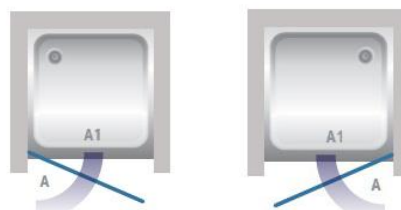

STELLA BLACK	A (mm)	A1 (mm)	H (mm)	H1 (mm)
60STE_B	595-603	530	2000	1980
70STE_B	695-703	630	2000	1980
80STE_B	795-803	730	2000	1980
90STE_B	895-903	830	2000	1980

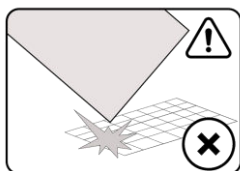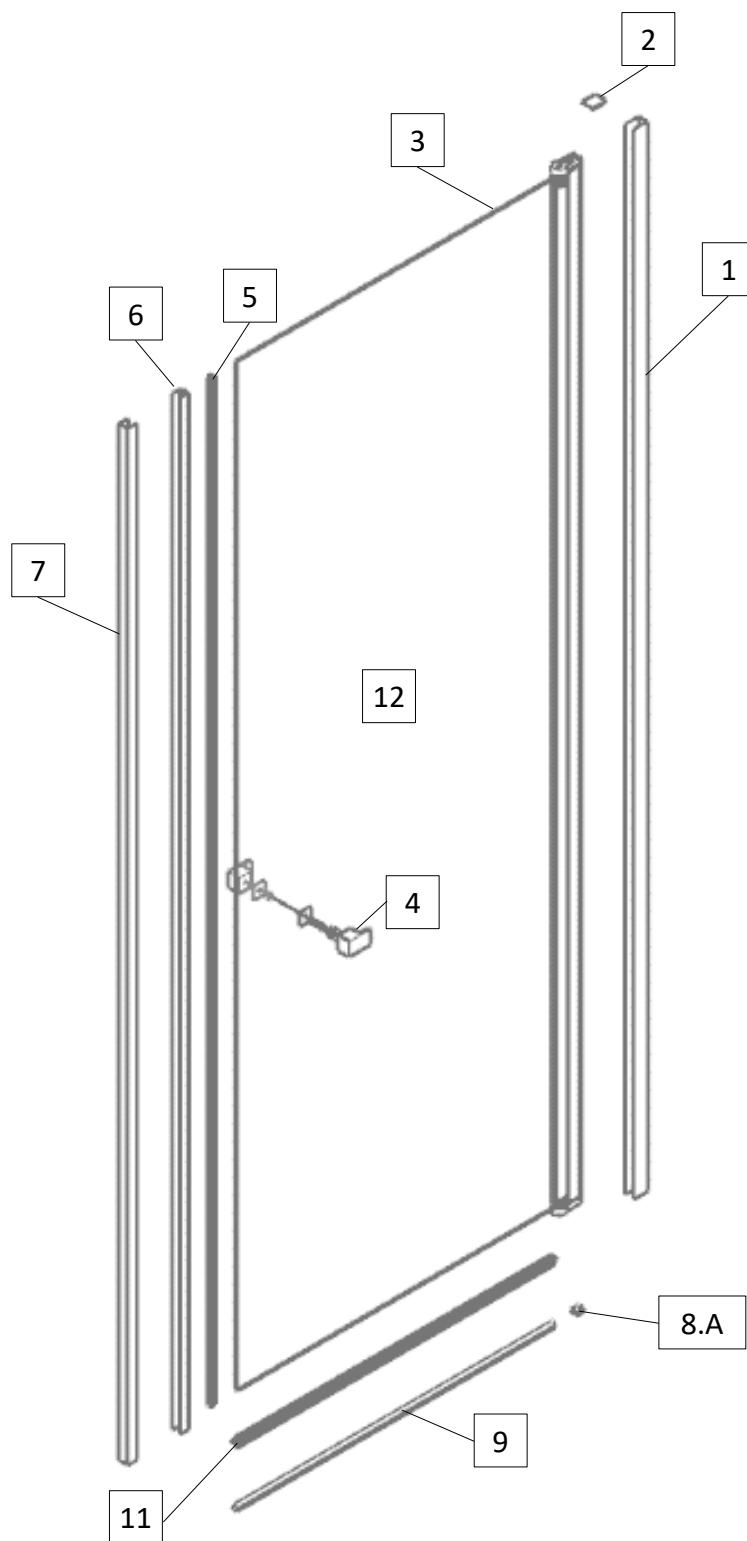

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

