




## Dušas kabīnes montāžas instrukcija

Инструкция по монтажу душевой кабины


Shower enclosure installation assembly

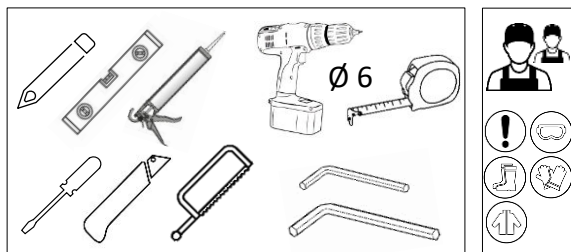


|      |                                                                                     |                             |   |
|------|-------------------------------------------------------------------------------------|-----------------------------|---|
| 1.   |    | PAL-01                      | 1 |
| 2.   |    | PAL-01B                     | 1 |
| 3.   |    | PAL-01C                     | 1 |
| 4.   |    | SU45CH + SK2SET1            | 2 |
| 5.   |    | ALU-U-CON200                | 1 |
| 6.   |   | R1653308                    | 1 |
| 7.   |  | NLO-KP2908-6-2,5            | 1 |
| 8.   |  | NLO-KP2908-8-2,5            | 1 |
| 9.   |  | DR-CH32                     | 1 |
| 10.  |  | SC-10x15ST                  | 1 |
| 11.R |  | 8536E6/EV5-135L             | 1 |
| 12.R |                                                                                     | NFTA135R                    | 1 |
| 11.L |  | NFTA135L                    | 1 |
| 12.L |                                                                                     | 8536E6/EV5-135R             | 1 |
| 13.  |  | 3,5x35 SK1SET; Ø 6          | 2 |
| 14.  |  | 8 mm Safety Glass           | 1 |
| 15.  |                                                                                     | 6 mm Safety Glass +VIRA20CH | 1 |
| 16.  |                                                                                     | 6 mm Safety Glass +VIRA20CH | 1 |

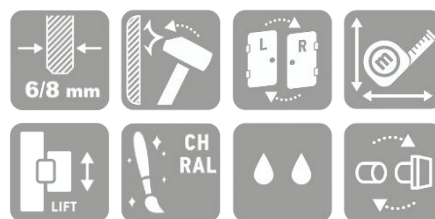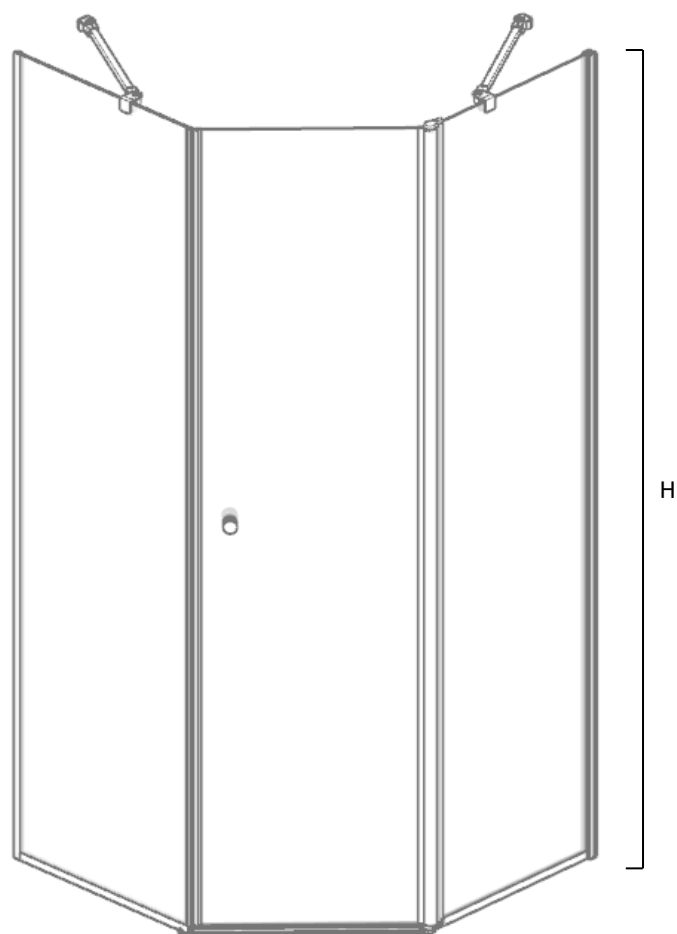



LEFT

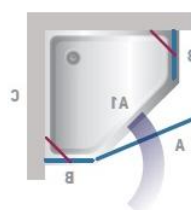

RIGHT

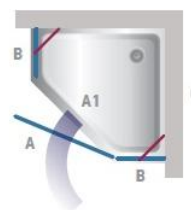

| SIMONA     | C (mm) | A (mm)  | B (mm)  | H (mm) |
|------------|--------|---------|---------|--------|
| 80X80SIM   | 790    | 490-495 | 425-430 | 1993   |
| 90X90SIM   | 890    | 490-495 | 525-530 | 1993   |
| 100X100SIM | 990    | 590-595 | 555-560 | 1993   |
| 110X110SIM | 1090   | 590-595 | 655-660 | 1993   |

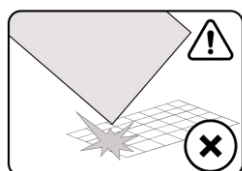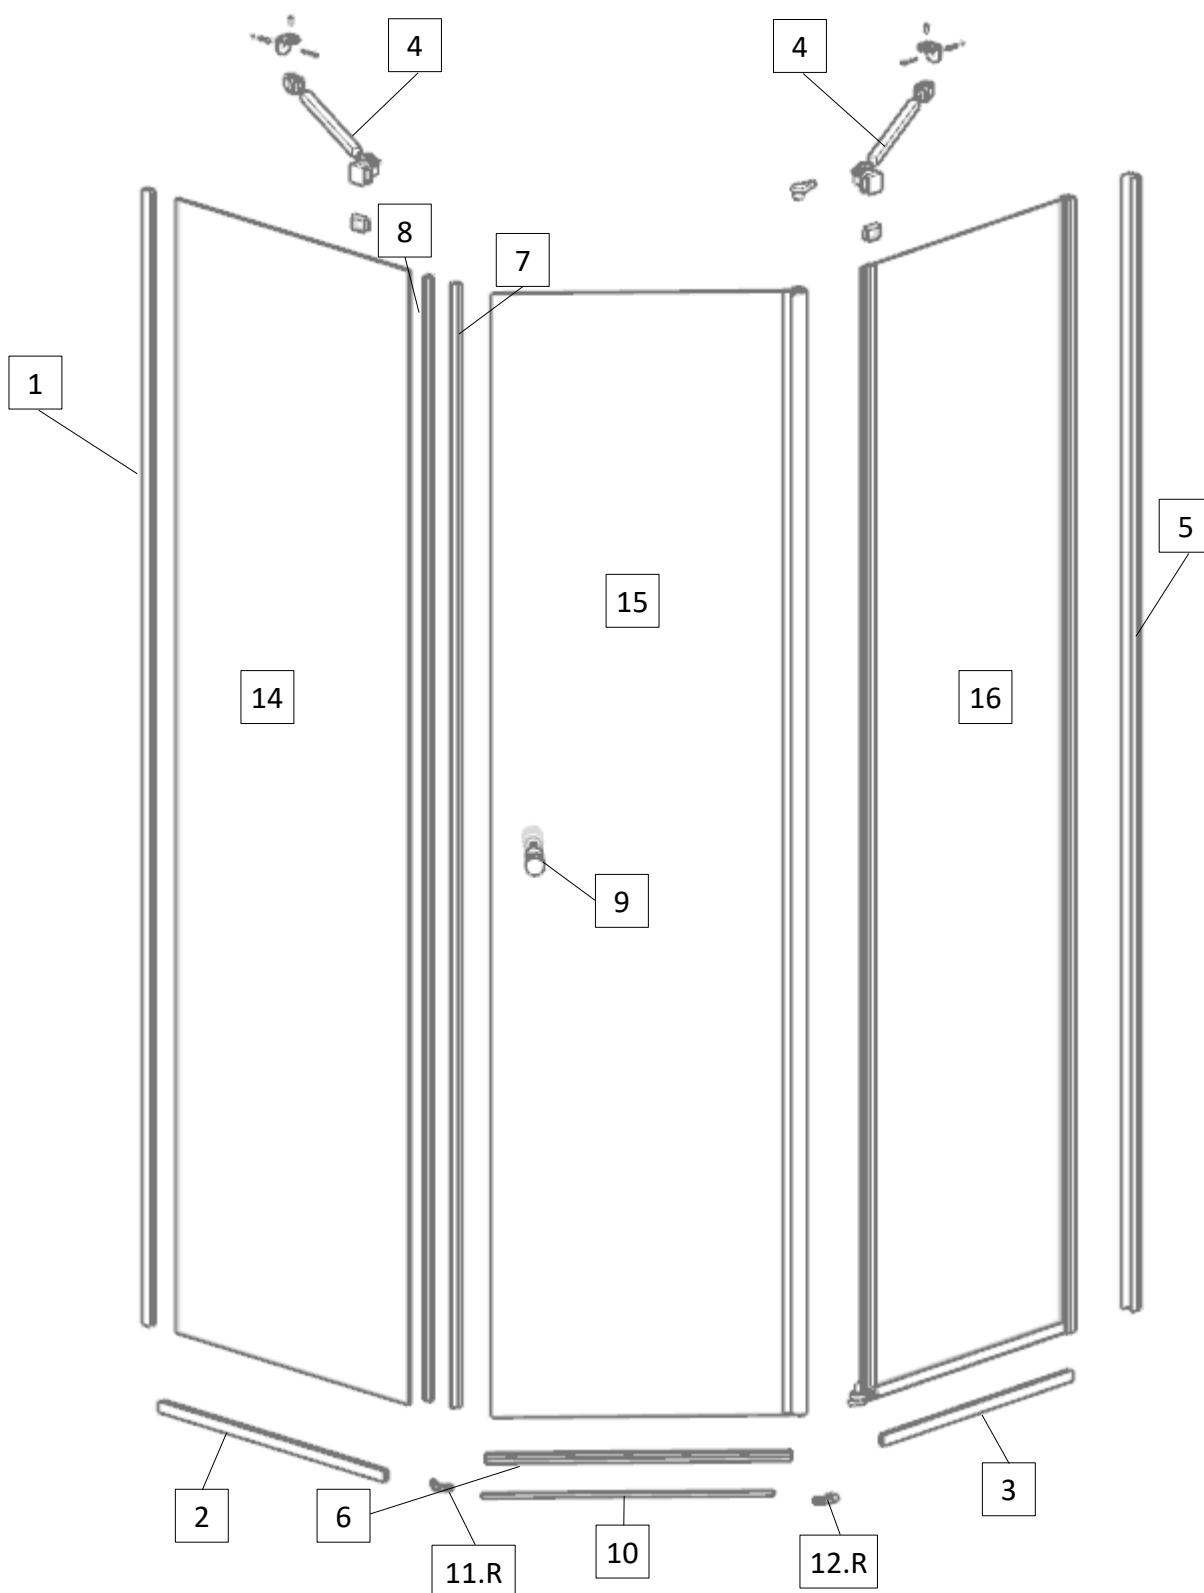





**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

## 1.A

| SIMONA     | P (mm)      | C (mm) |
|------------|-------------|--------|
| 80X80SIM   | 800 x 800   | 783    |
| 90X90SIM   | 900 x 900   | 883    |
| 100X100SIM | 1000 x 1000 | 983    |
| 110X110SIM | 1100 x 1100 | 1083   |

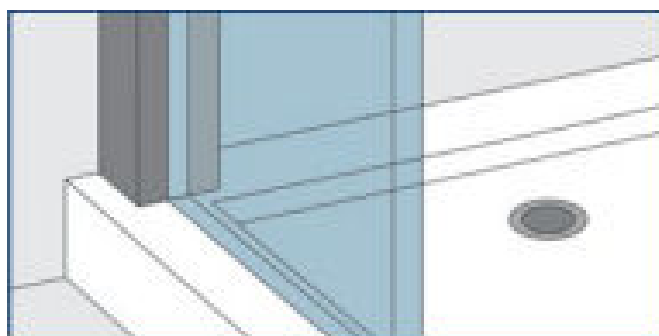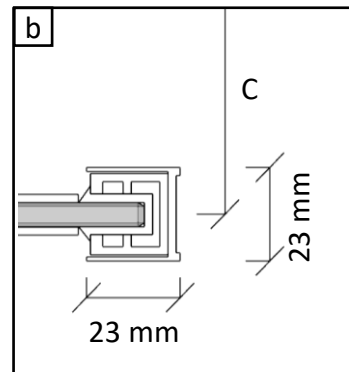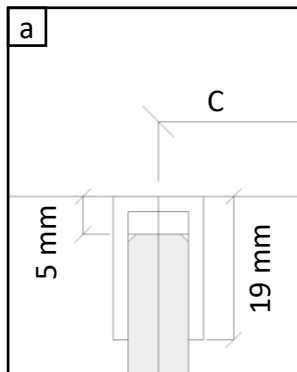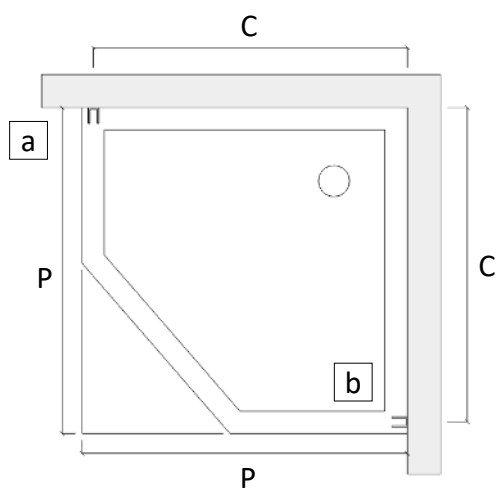

## 1.B

| SIMONA     | D (mm) | S (mm) |
|------------|--------|--------|
| 80X80SIM   | 800    | 800    |
| 90X90SIM   | 900    | 900    |
| 100X100SIM | 1000   | 1000   |
| 110X110SIM | 1100   | 1100   |

