


FRANCESKA PLUS



Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены


Bath screen installation instructions


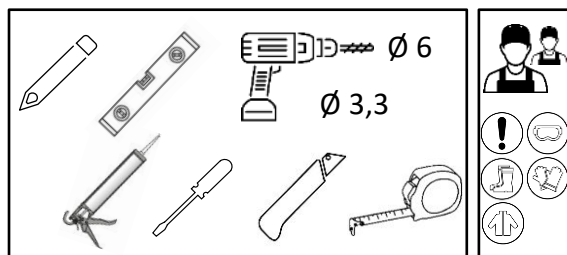


1.		ALU-U-CON200	1
2.		PAL-01B	1
3.		SU45CH + SK2SET1	1
4.		R1656715	1
5.		3,5X35 4K1SET	1
6.		6 mm Safety Glass + VIRA15CH	1
7.		6 mm Safety Glass + VIRA15CH	1

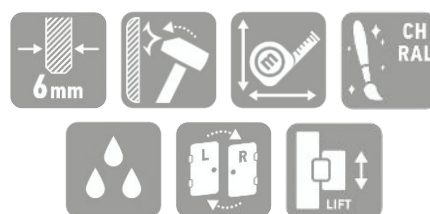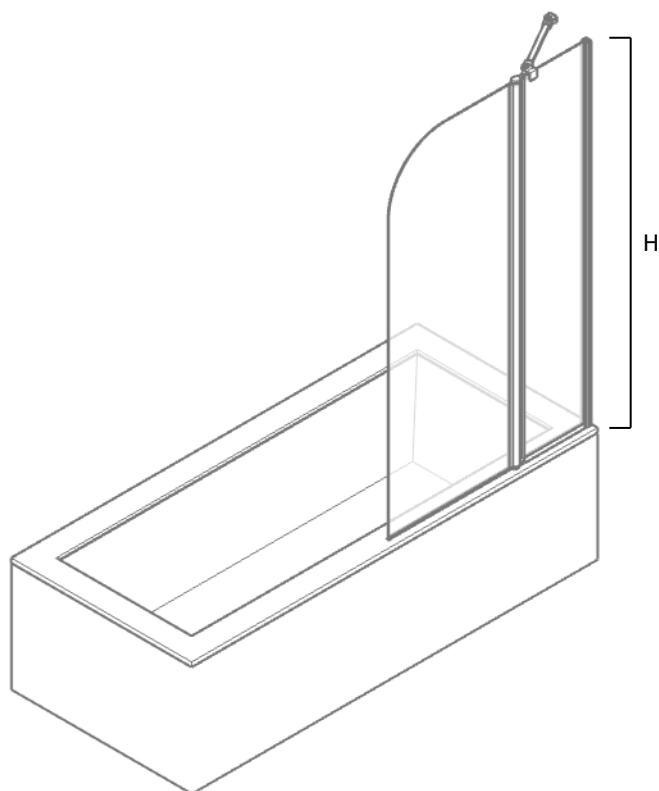

FRANCESKA PLUS	A+B (mm)	H (mm)
70FRA+	695-703	1500
80FRA+	795-803	1500
90FRA+	895-903	1500
100FRA+	995-1003	1500
110FRA+	1095-1103	1500
120FRA+	1195-1203	1500

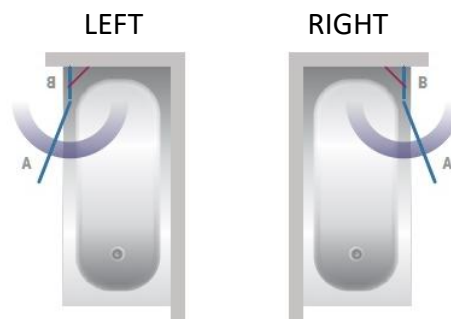

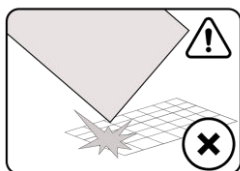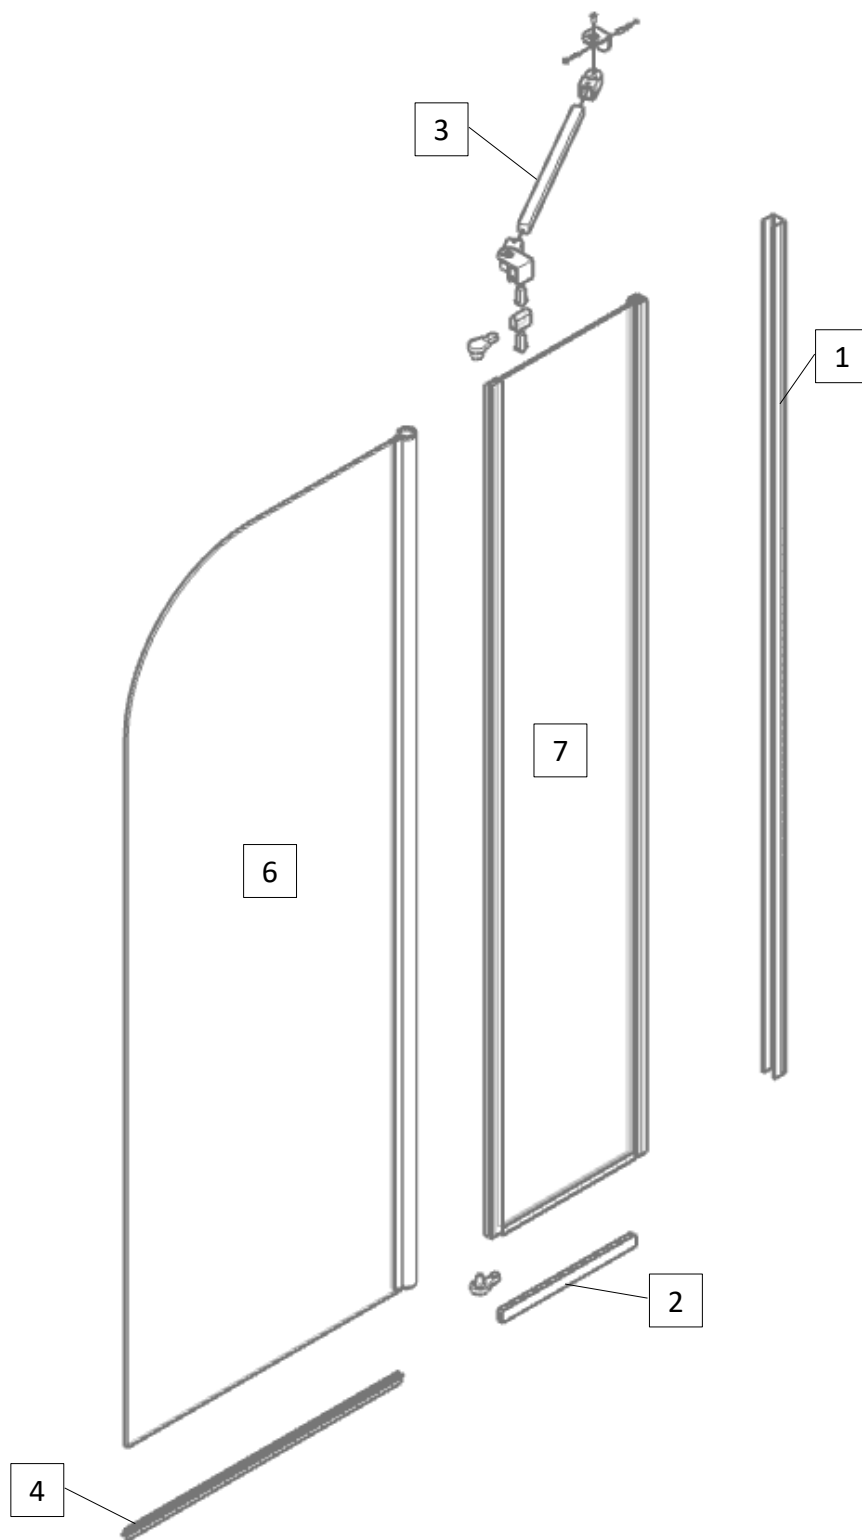

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

